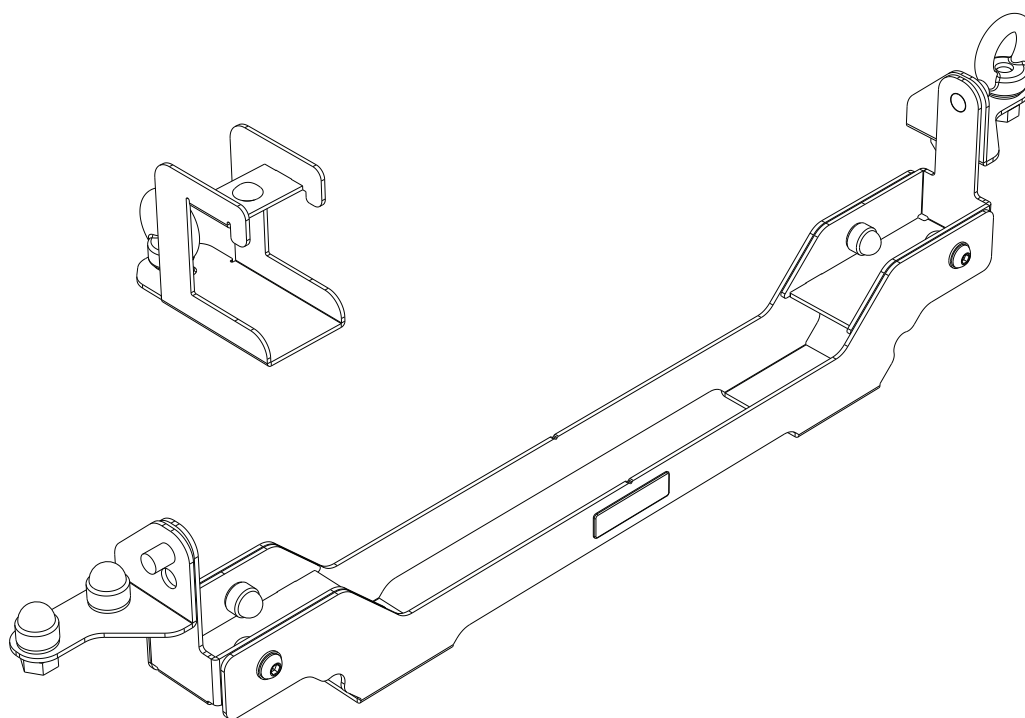


**READ ME !**

Thank you for purchasing a Front Runner Telescopic Ladder Quick Clamp.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	Ladder Bracket
2	1 X	Left Mounting Bracket
3	1 X	Right Mounting Bracket
4	2 X	Pivot Mounting Bracket (Left & Right)
5	1 X	Clamp Bracket
6	5 X	M8 x 16 Hex Bolt
7	5 X	M8 Flat Washer
8	4 X	M6 x 16 Button Head Screw
9	8 X	M6 Flat Washer
10	3 X	M8 Nyloc Nut
11	4 X	M6 Nyloc Nut
12	2 X	M8 Anti - Loss Washer
13	4 X	M6 Nut Caps
14	3 X	M8 Nut Caps
15	2 X	M8 Eye Nuts
16	2 X	M8 Nylon Washer

TOOLS NEEDED



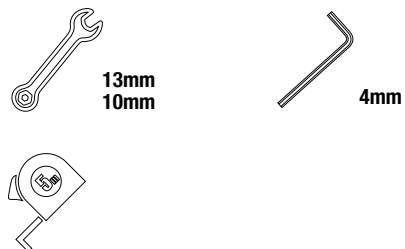


FIGURE 1.1

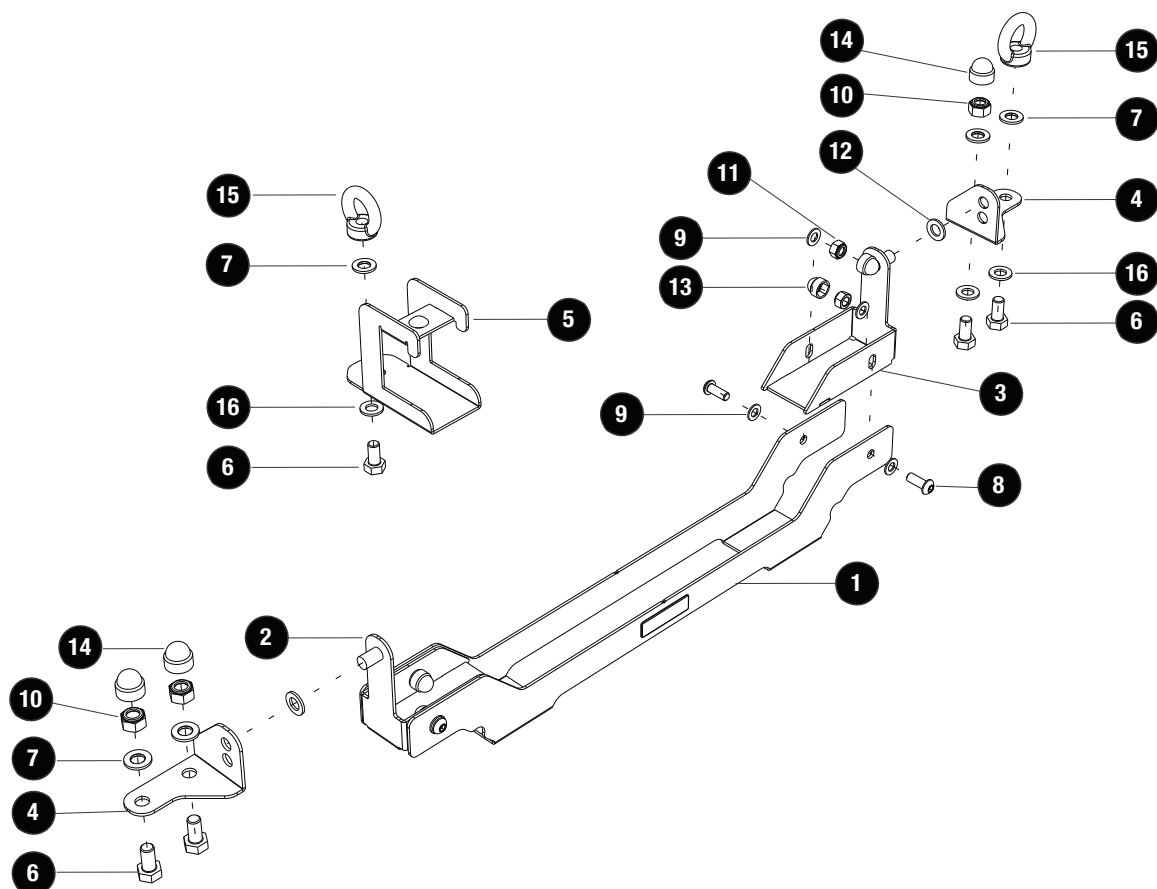


2.1

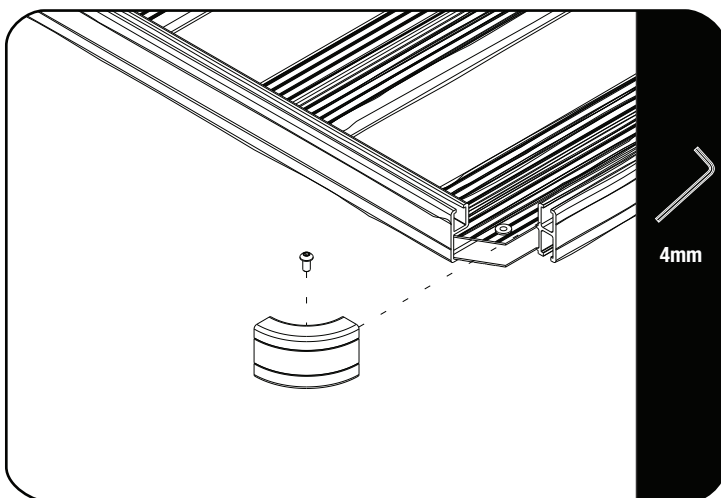

Start by removing the front right-hand Corner piece of your rack with a 4mm Allen Key.


2.2

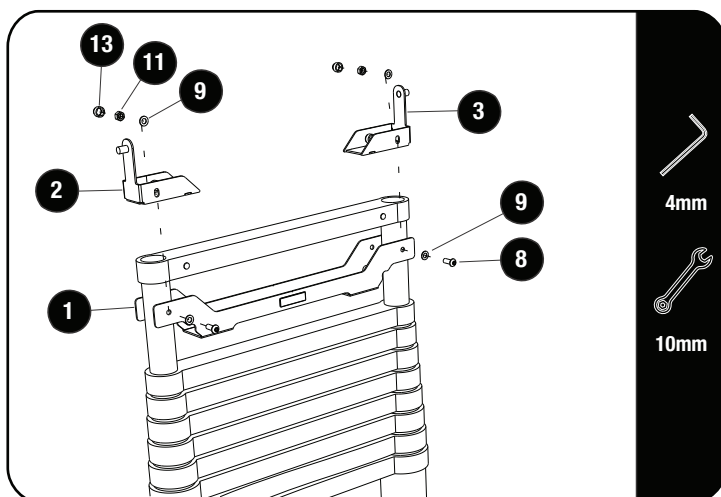

Fit the Mounting Ladder Bracket (Item 1) to the first rung on the telescopic ladder using the Left / Right Mounting Brackets (Items 2 & 3) with four M6 x 16 Button Heads Screw, eight M6 Flat Washers and four M6 Nyloc Nuts (Items 8,9 & 11). As shown in figure 2.2.

Place M6 Nut Caps (Item 13) once fully tightened.

2.3

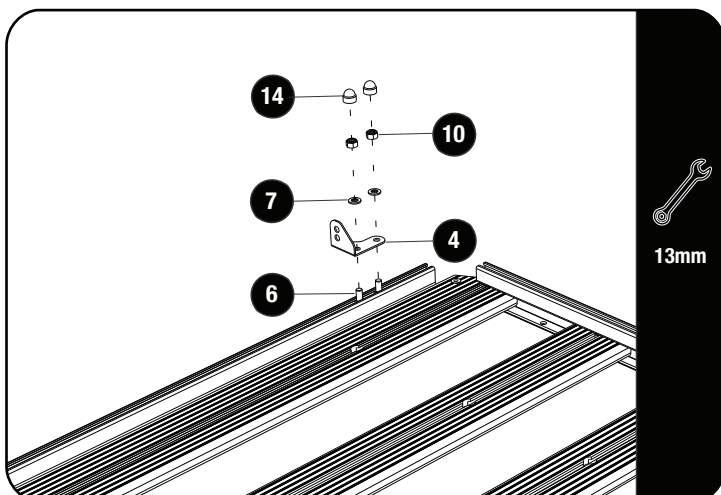


Choose where you'd like to position it on the rack. This will determine where you will need to fit the Pivot Mounting Bracket (Item 4).

Fully tighten the Pivot Mounting Bracket (Item 4) in the desired location with two M8 x 16 Hex Bolts, two M8 Flat Washers and two M8 Nyloc Nuts (Items 6,7 & 10)

Place M8 Nut Caps (Item 14) once fully tightened and centered.

2.4

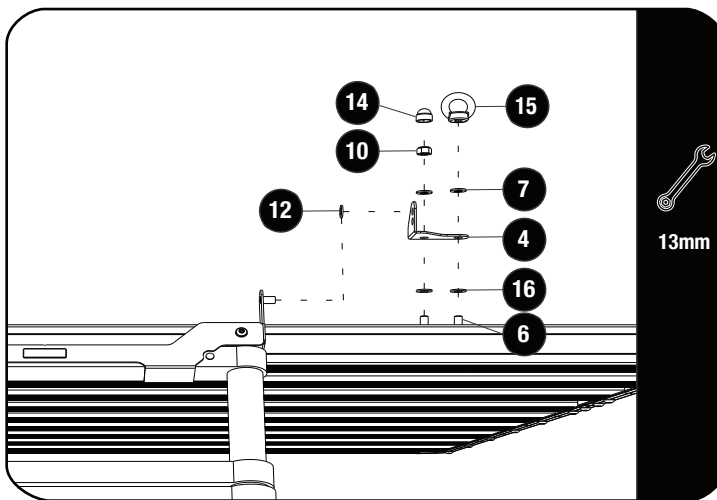


Loosely fit the other Mounting Bracket (Item 4) using two M8 x 16 Hex Bolts, two M8 Anti - Loss Washers, two M8 Flat Washers, one M8 Nyloc Nut and one M8 Eye Nut (Items 6,12,16,10 &15).

Make sure that the M8 Anti - Loss Washer (Item 12) is placed on both Pivot Brackets studs as shown in figure 2.4

⚠ Note that the Mounting Bracket should be tightened to the point that it still has the ability to slide in the T - Slot Channel when the M8 Eye nut is loosened.

2.5

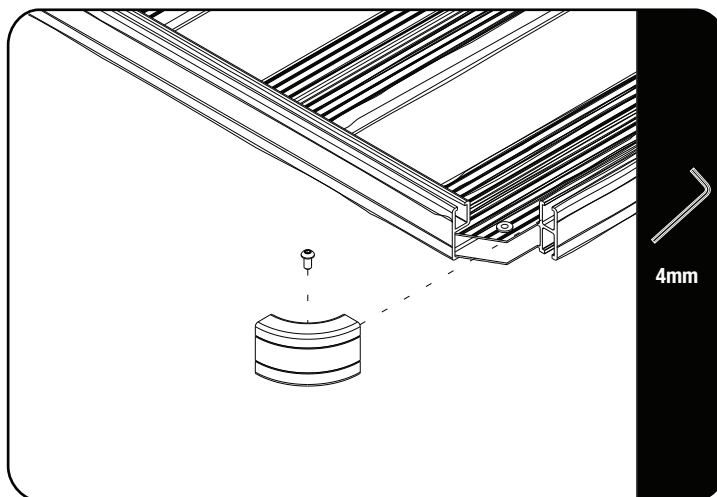

Refit Corner removed earlier in 2.1

2.6


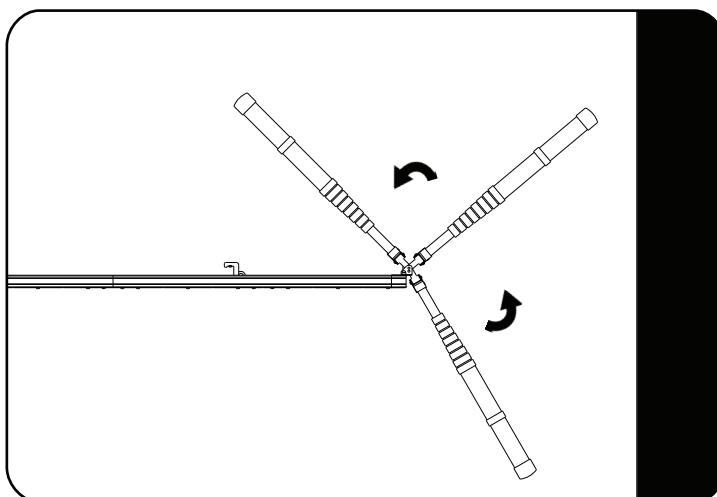


Figure 2.6 shows ladder assembly rotating onto the rack.

2

FIT AND SECURE

2.7

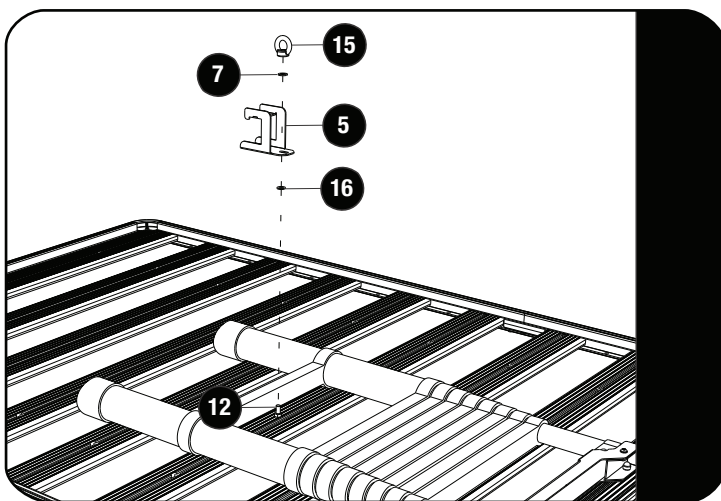


Fit the Clamp Bracket (Item 5) to the rack slat closest to where the last rung of the Telescopic Ladder is located using a M8 x 16 Hex Bolt, M8 Nylon Washer, M8 Flat Washer and M8 Eye Nut (Items 12, 16, 7 & 15).

3

COMPLETION

3.1

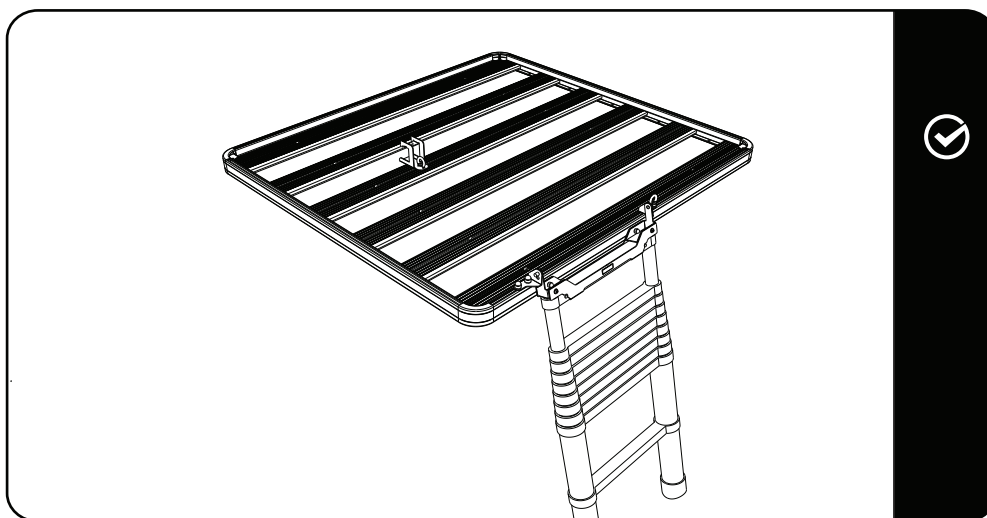

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

