


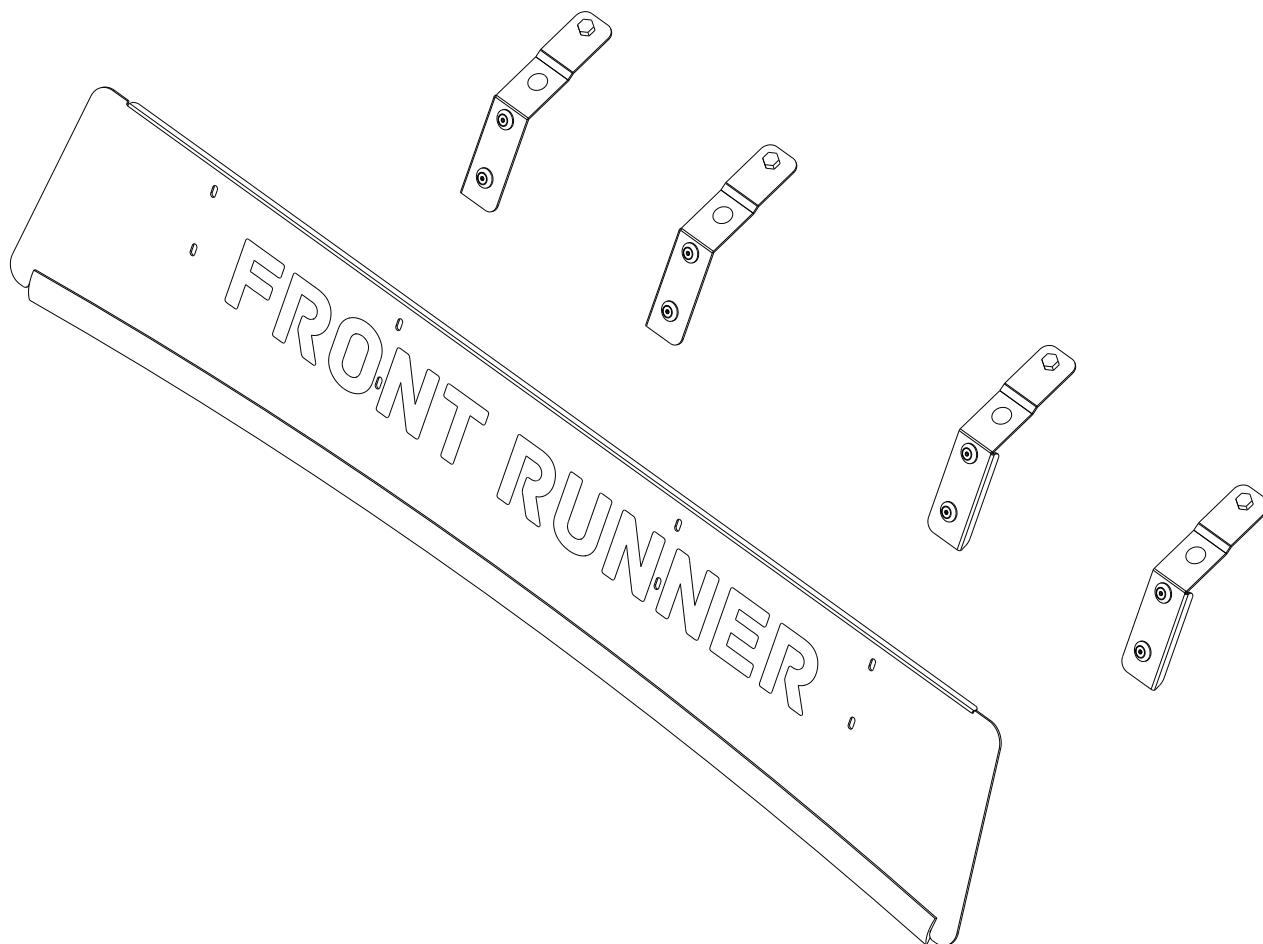

READ ME !

Thank you for purchasing a Front Runner Land Rover Discovery LR3 / LR4 Slice Wind Fairing.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	1 X	Mounting Bracket (2 Left / 2 Right)
2	1 X	Land Rover Discovery LR3_LR4 Slice Wind Fairing
3	1 X	Clear Protection Strip


TOOLS NEEDED



FIGURE 1.1

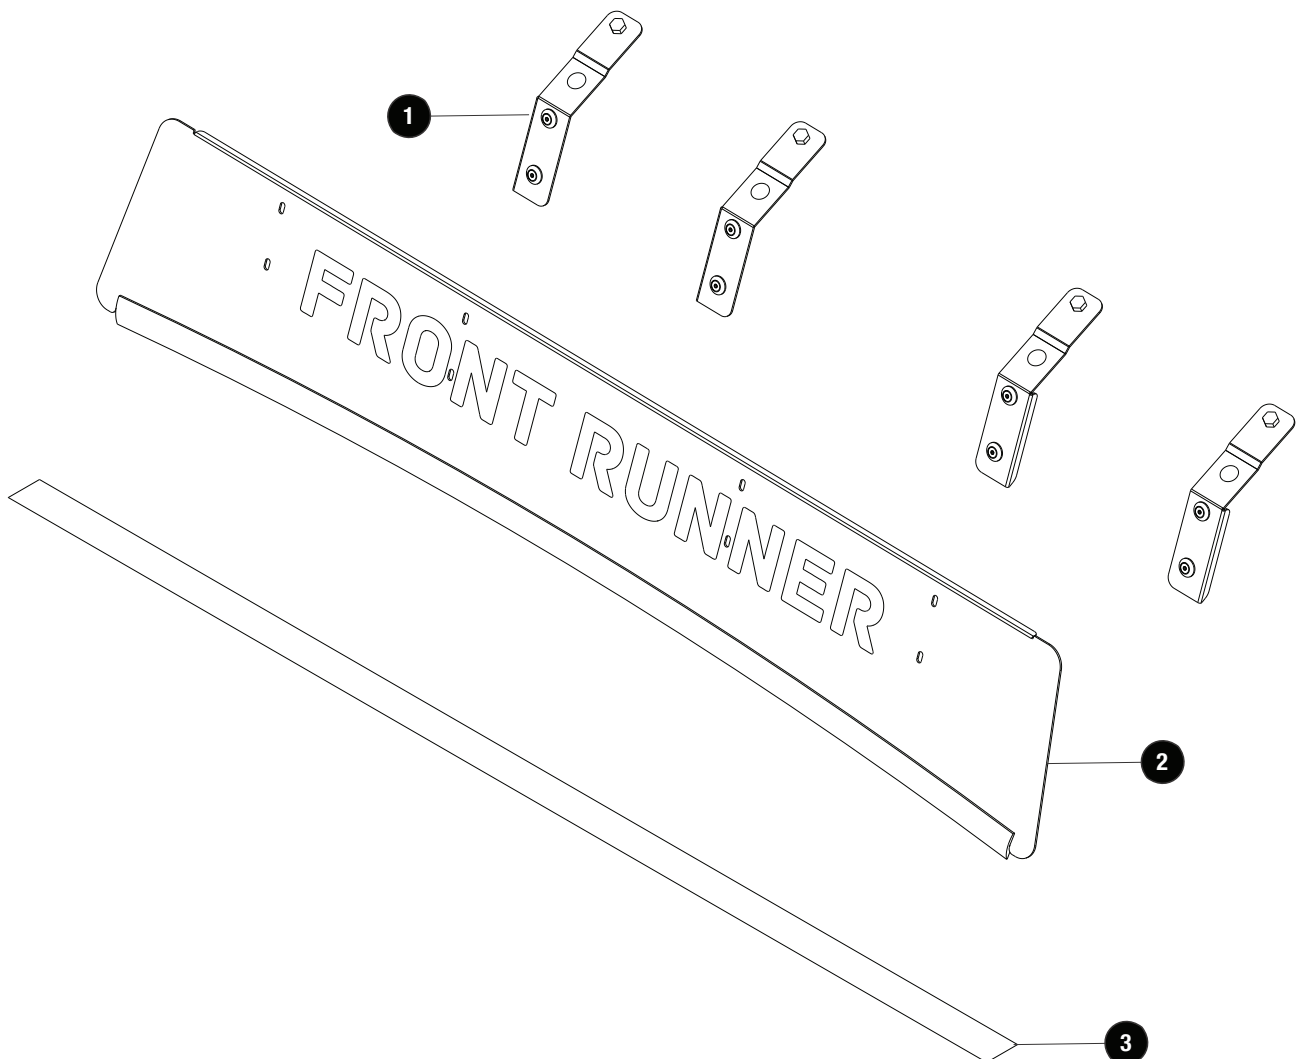


2.1

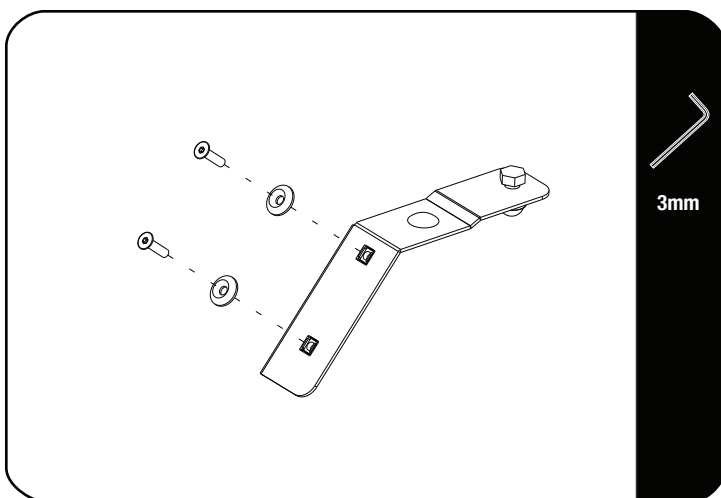


Remove the M5x20 Countersink Screws & M5 Finishing Washers from the brackets.

2.2

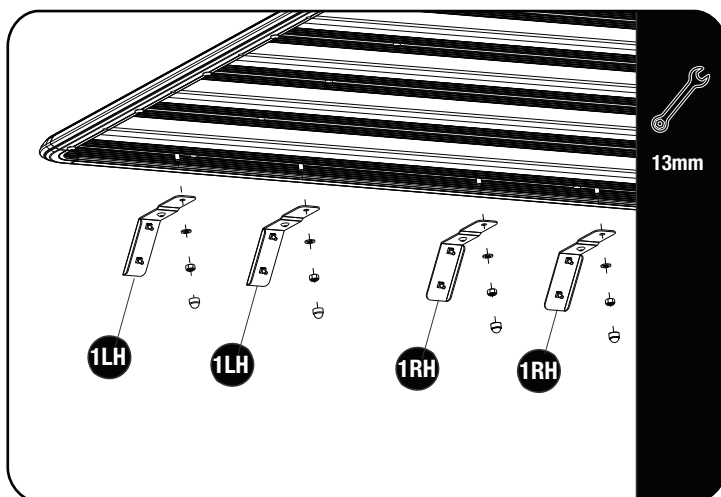

Place bolts into the T- Slots under the rack in the first slot. Then loosely attach the four Mounting Brackets (Item 1) as shown.

2.3

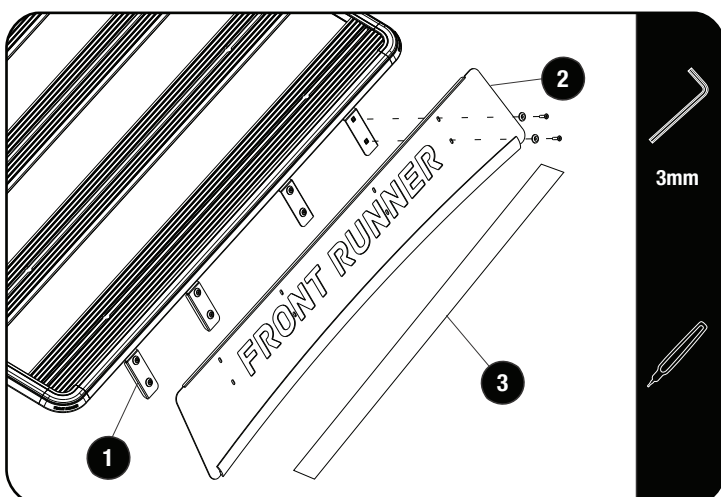

Place the Wind Fairing (Item 2) into position over the Mounting Brackets (Item 1). Using the M5 x 20 Countersink Screws and M5 Finishing Washers, loosely secure the Wind Fairing (Item 2) to the Brackets.

The Rubber Trim should sit fully on the vehicle roof along the length of the Fairing. Mark where rubber touches roof.


Remove the Wind Fairing and use the Clear protection Strip (Item 3) included to protect paint work, apply to roof where rubber trim made contact with the roof.

Make sure the roof is clean before applying.

2

FIT AND SECURE

2.1

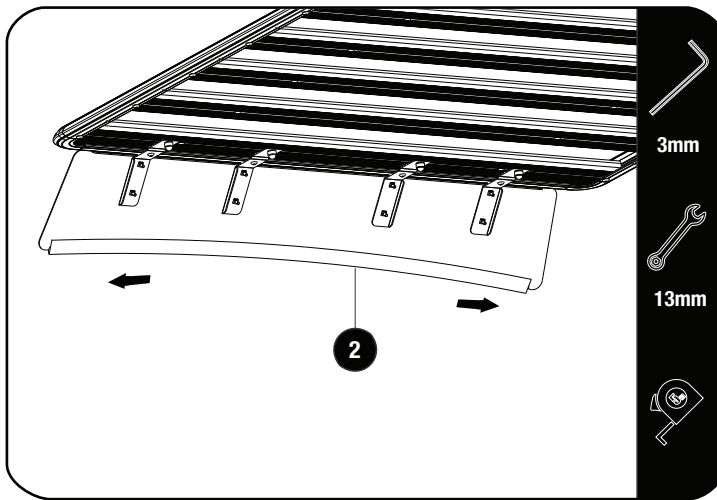

Replace the Wind Fairing (Item 2) and center it before fully tightening all bolts.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    