


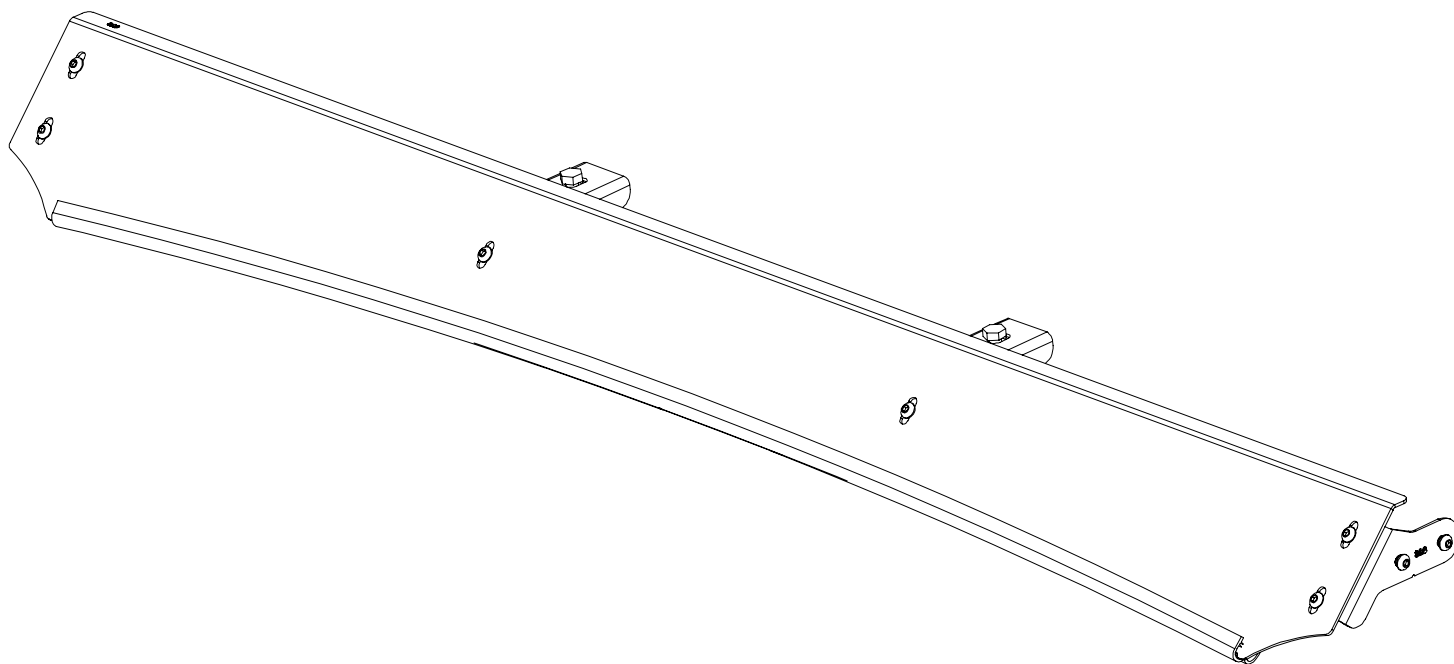

READ ME !

Thank you for purchasing a Front Runner Toyota Land Cruiser FJ (2026 - Current) Slimsport Rack Wind Fairing
Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.
Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.



1 GET ORGANIZED

IN THE BOX

1	1 X	Standard Wind Fairing
2	1 X	Wind Fairing Support Bracket LH
3	1 X	Wind Fairing Support Bracket RH
4	2 X	Wind Fairing Mid Support Bracket
5	10 X	M6 x 16 Button Head Bolts
6	2 X	M8 x 20 Hex Bolts
7	2 X	M8x 16 x 1.6 Flat Washer
8	2 X	M8 Nyloc Nut
9	2 X	M8 Nut Cap
10	1 X	Wind Fairing Rubber 1130mm Long

TOOLS NEEDED



Cordless Driver



13mm



13mm



4mm



Craft Knife




Torque Wrench




Thread Locker

FIGURE 1.1

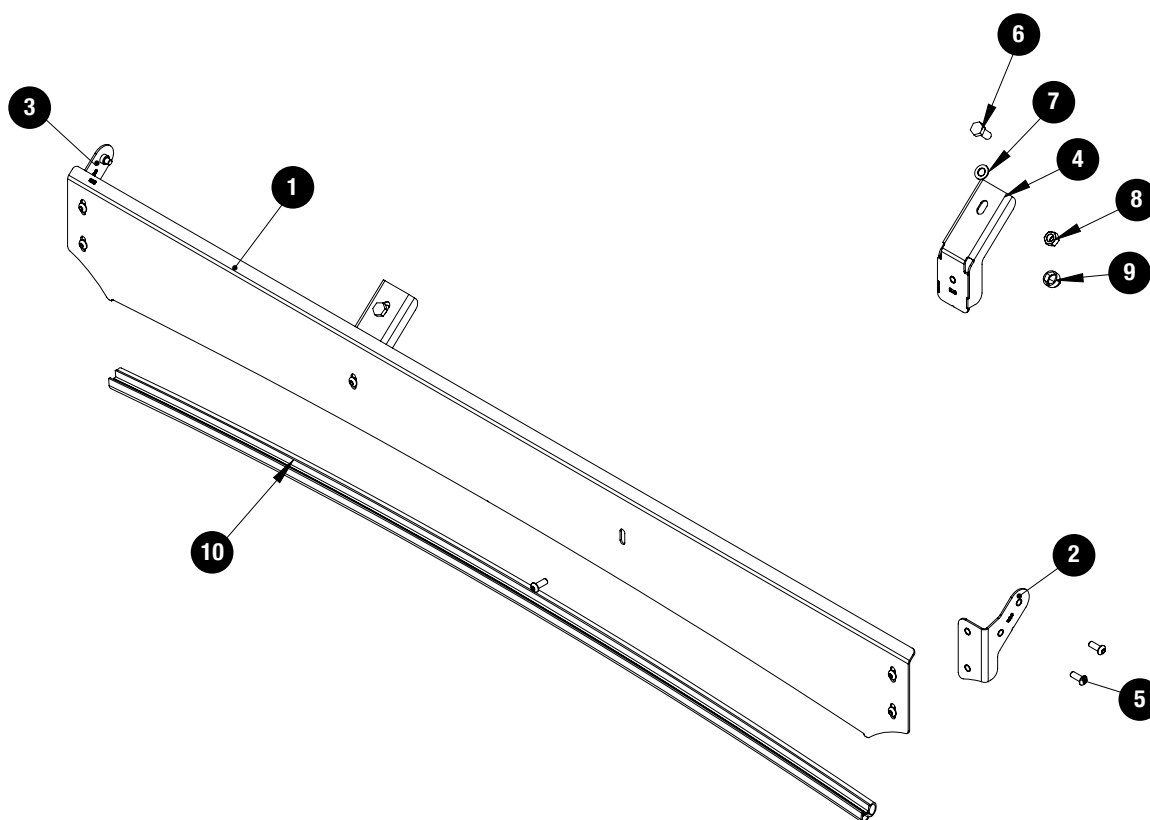

2.1

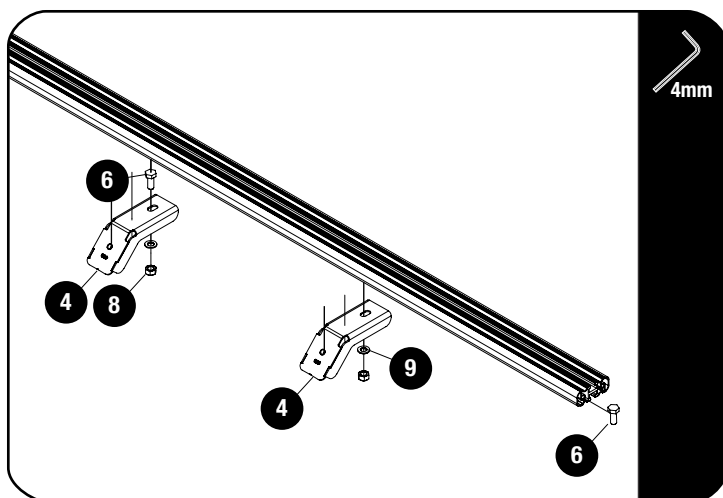


Start by Removing the Front slat of the Roof Rack.

Slide two M8 x 20 Hex Head Bolt (Item 6) into the T-slot of the front slat.

Loosely assemble the Wind Fairing Support brackets (Item 4) to the M8 x 20 Hex Bolts Using the M8 x 16 x 1.6 Flat Washer and M8 Nyloc Nut (Item 8 & 9). Do Not Fully Tighten

2.2

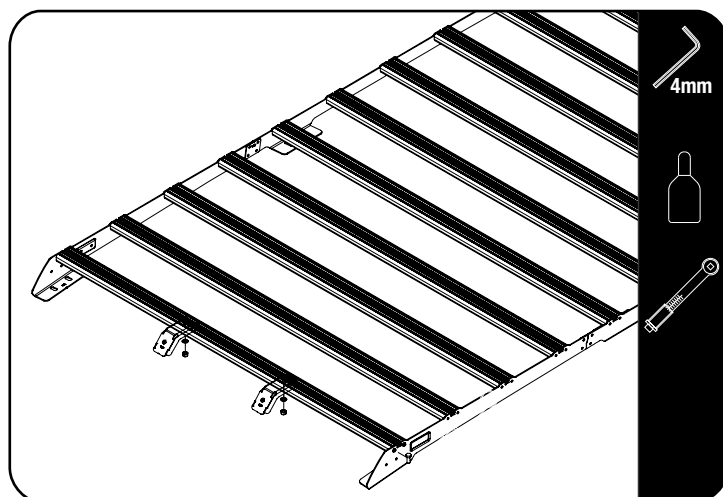

Add a little Thread Locker to the M6 x 20 Button head bolts and refit the Slat into the top mounting holes of the Foot Rail as shown and Fully tighten the M6 x 16 Button Head Bolts.




Use a little Thread Locker on screw threads before inserting.



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

2.3

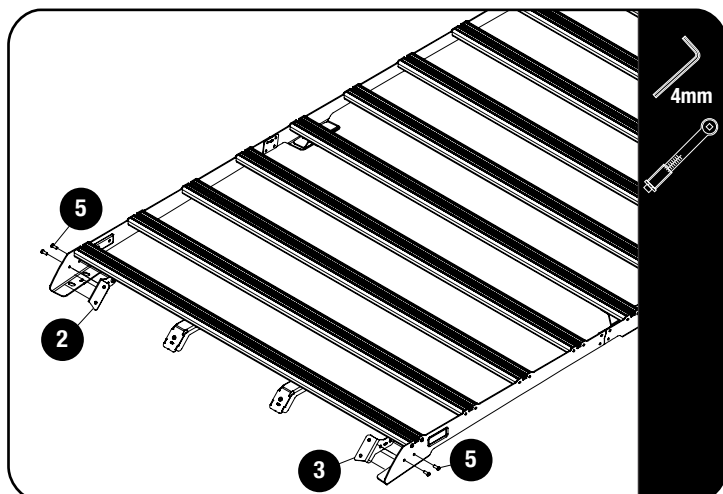

Fit the Wind Fairing Side Support Brackets (Item 2 & 3) to the inside of the Foot Rail as shown using the M6 x 16 Button Head Screws (Item 5) and Fully Tighten.




Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

2


FIT AND SECURE

2.4

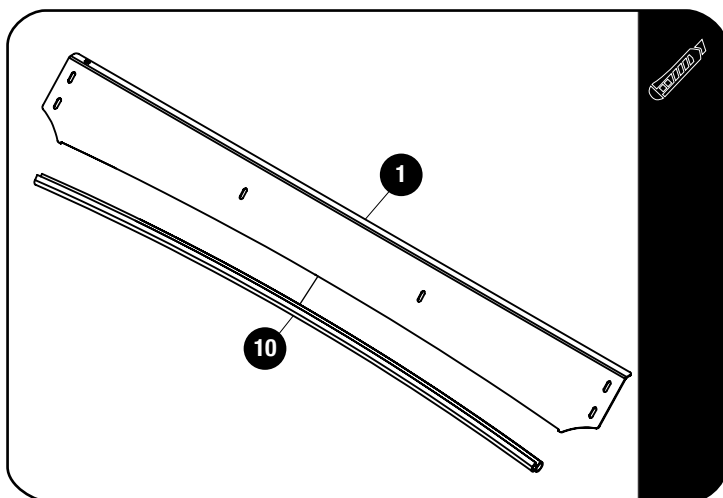

Fit the Wind Fairing Rubber (Item 10) to the Wind Fairing (Item 1). Using the notched section as a guide, trim if needed.

2.5

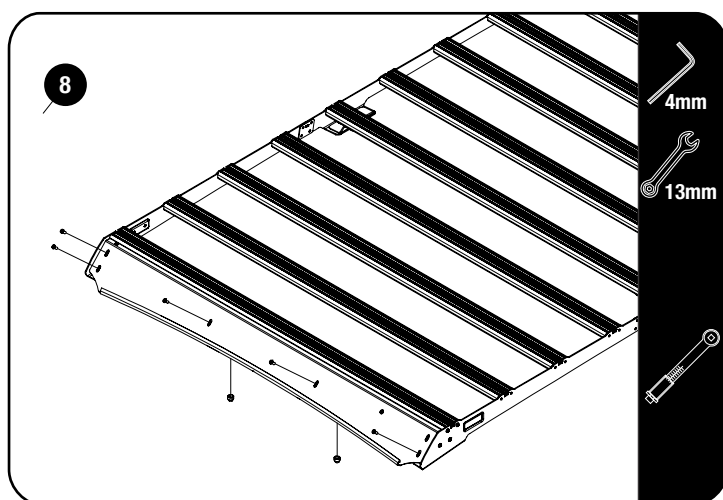

Secure the Wind Fairing assembly to the rack assembly, using M6 x 16 Button Head Bolts (Item 5) and fully tighten all fasteners.

Fully Tighten the M8 Nyloc Nuts Fitted in Step 2.1 and place the M8 Nut Caps (Item 9) over the M8 Nyloc Nuts.



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

