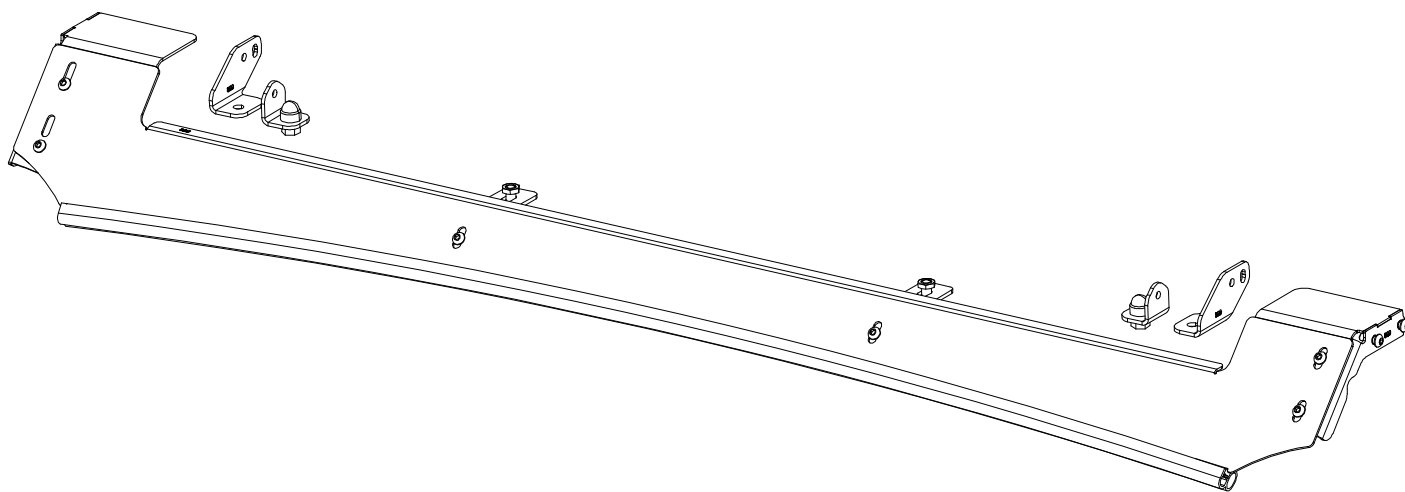


**READ ME !**

Thank you for purchasing a Front Runner Toyota Land Cruiser FJ (2026 - Current) Slimsport Rack 40" Light Bar Wind Fairing

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!



IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.


Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX**

1	1 X	Light Bar Wind Fairing
2	1 X	Wind Fairing LH Support Bracket
3	1 X	Wind Fairing RH Support Bracket
4	2 X	Wind Fairing Mid Support Bracket
5	1 X	Light Bar Bracket 01 LH - High Profile
6	1 X	Light Bar Bracket 01 RH - High Profile
7	2 X	Light Bar Bracket 02 - Low Profile
8	10 X	M6 x 16 Button Head Screw
9	2 X	M8 x 12 Button Head Screw
10	2 X	M8 x 20 Hex Bolt
11	2 X	M8 Nyloc Nut
12	2 X	M8 Nut Cap
13	1 X	Wind Fairing Rubber 1130mm Long
14	2 X	M8 Thin Nut
15	2 X	M8 Schnorr Washer

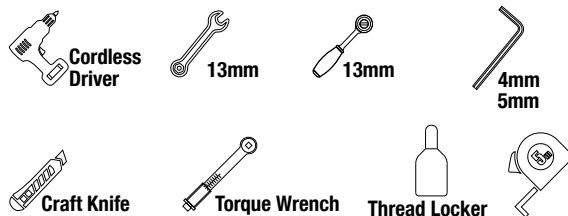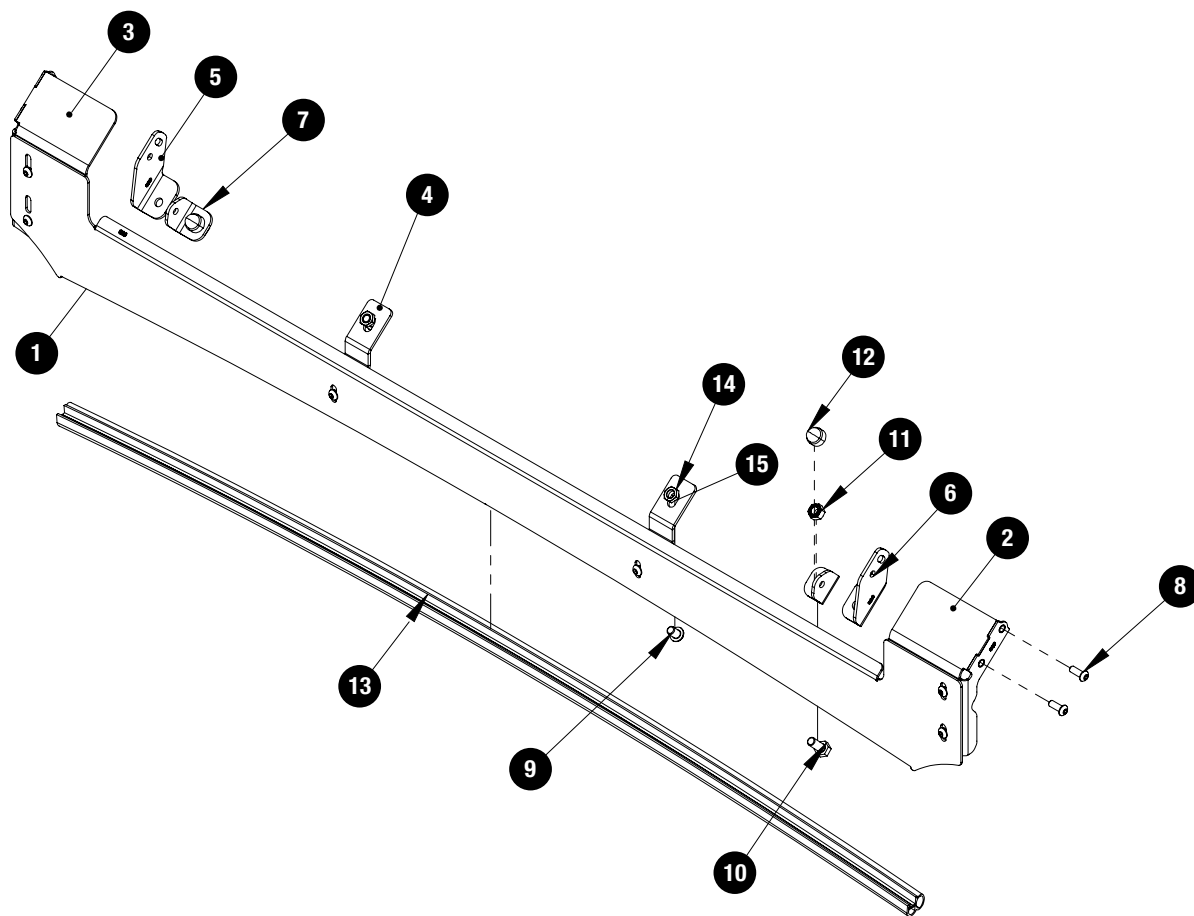TOOLS NEEDED**FIGURE 1.1**

2.1

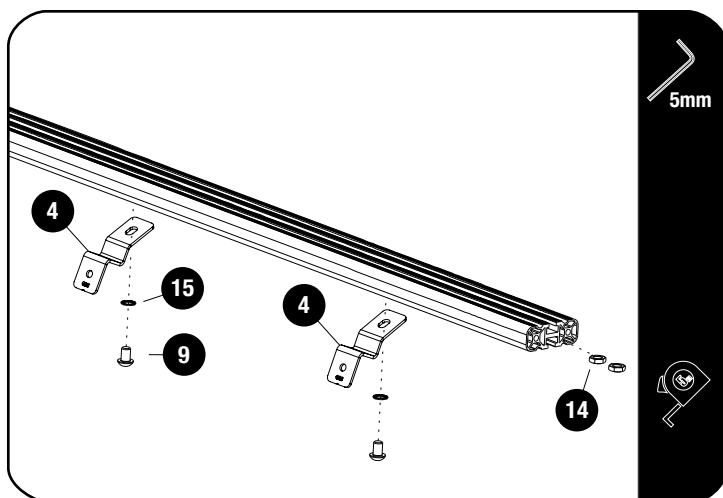


Start by removing the front slat of the Roof Rack.

Slide two M8 Thin Nut (Item 14) into the T-Slot of the front slat. Center the Mid Support Bracket (Item 4) in the Middle of the slat and loosely secure using Schnorr Washers and M8 x 12 Button Head Bolts (Item 15 & 9).

The fasteners will be fully tighten in 2.5.

2.2

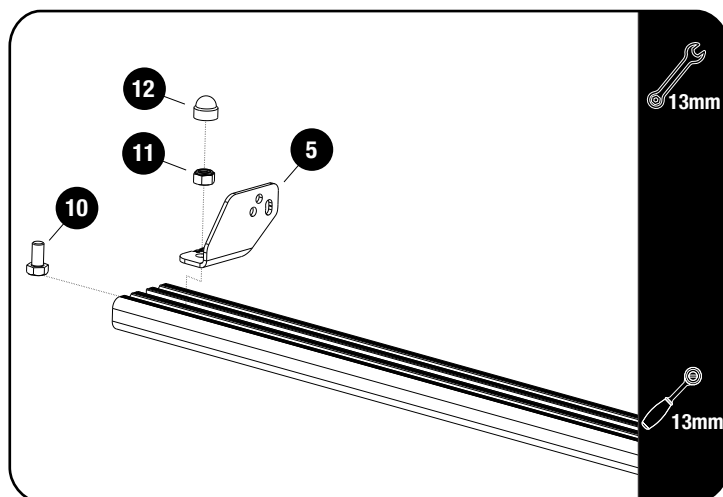

Fit the Light Bar Bracket 01 LH / RH (Item 5 & 6) for the 40" Light Bar, using M8 x 16 Hex Bolt & M8 Nyloc Nut (Items 10 & 11). Fit the light bar and center it on the slat before fully tightening the brackets.


Place M8 Nut Caps (Item 12) over all M8 Nyloc Nuts.



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb

2.3

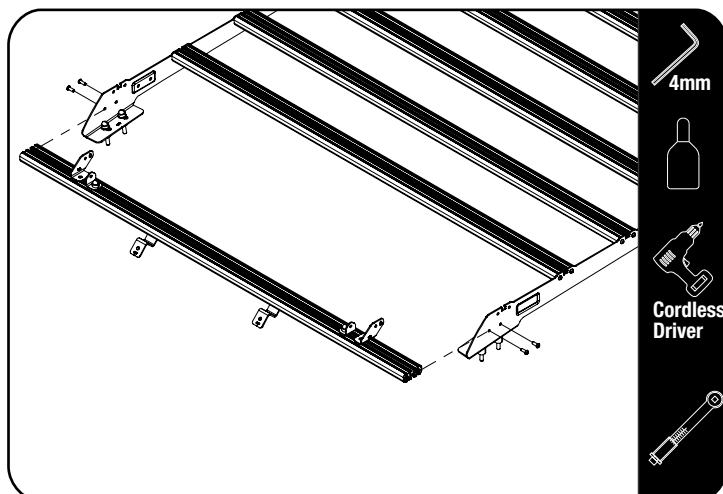

Secure assembly 2.2 to the front two top holes on the foot rails using the fasteners supplied with KSTL006.



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.




Use a little Thread Locker on screw threads before inserting.

Cordless Driver

2

FIT AND SECURE

2.4

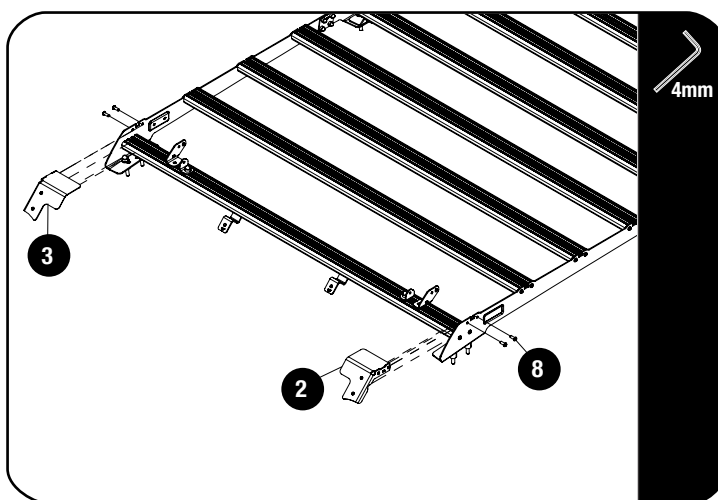


Secure the Wind Fairing Side supports LH / RH (Item 2 & 3) to the foot rails top holes as shown using M6 x 16 Button Head bolts (Item 8).



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

2.5

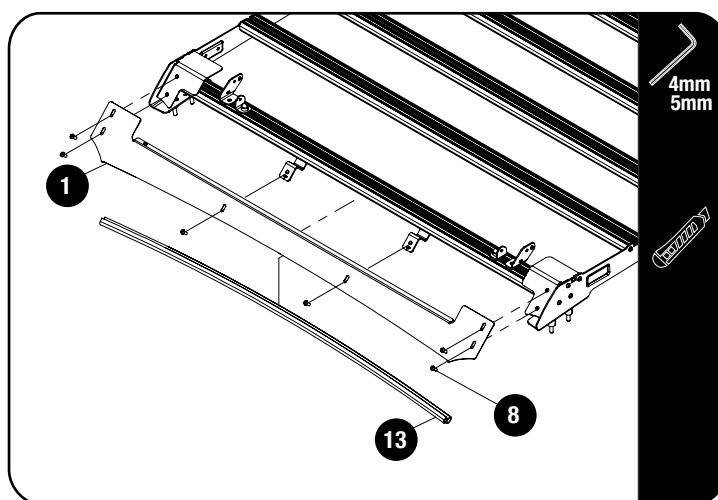

Fit the Wind Fairing Rubber (Item 13) to the Light Bar Wind Fairing (Item 1). Using the notched section as a guide, trim if needed.

Secure the Light Bar Wind Fairing assembly to the rack assembly, using M6 x 16 Button Heads Bolts (Item 8) and fully tighten.

Fully tighten the M8 x 12 Button Head Bolts (Item 9) Fitted in Step 2.1



Tightening Torque:

M8 : 15-20Nm / 11.06 ft lb - 14.75 ft lb



Tightening Torque 8-10Nm / 5.9 ft lb - 7.38 ft lb.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

