


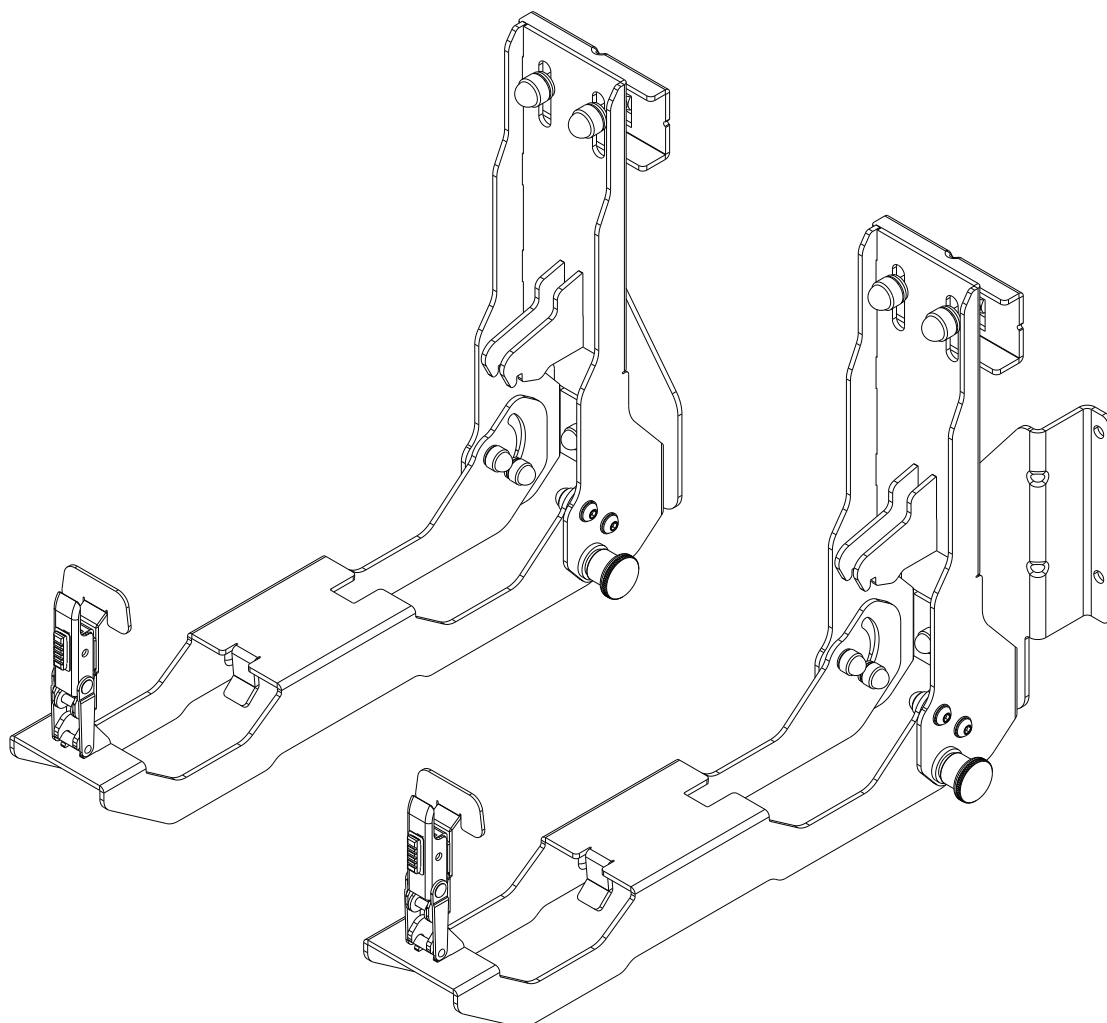

READ ME !

Thank you for purchasing a Front Runner Ford F150 (2014 - Current) Pelican Case Load Bed Mounting Bracket.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED


IN THE BOX

1	2 X	Load Bed Bracket
2	4 X	M8 Anti-Loss Washer
3	2 X	Clamp
4	4 X	M8 x 30 Carriage Bolt
5	2 X	Box Link Bracket (A & B)
6	2 X	Stud Plate
7	4 X	M6 Flat Washer
8	4 X	M6 Nyloc Nut
9	4 X	M6 Nut Cap
10	2 X	Pelican Case Latch
11	4 X	M8 Nut Cap
12	4 X	M8 Nyloc Nut
13	4 X	M8 Flat Washer


TOOLS NEEDED

10mm
13mm

FIGURE 1.1

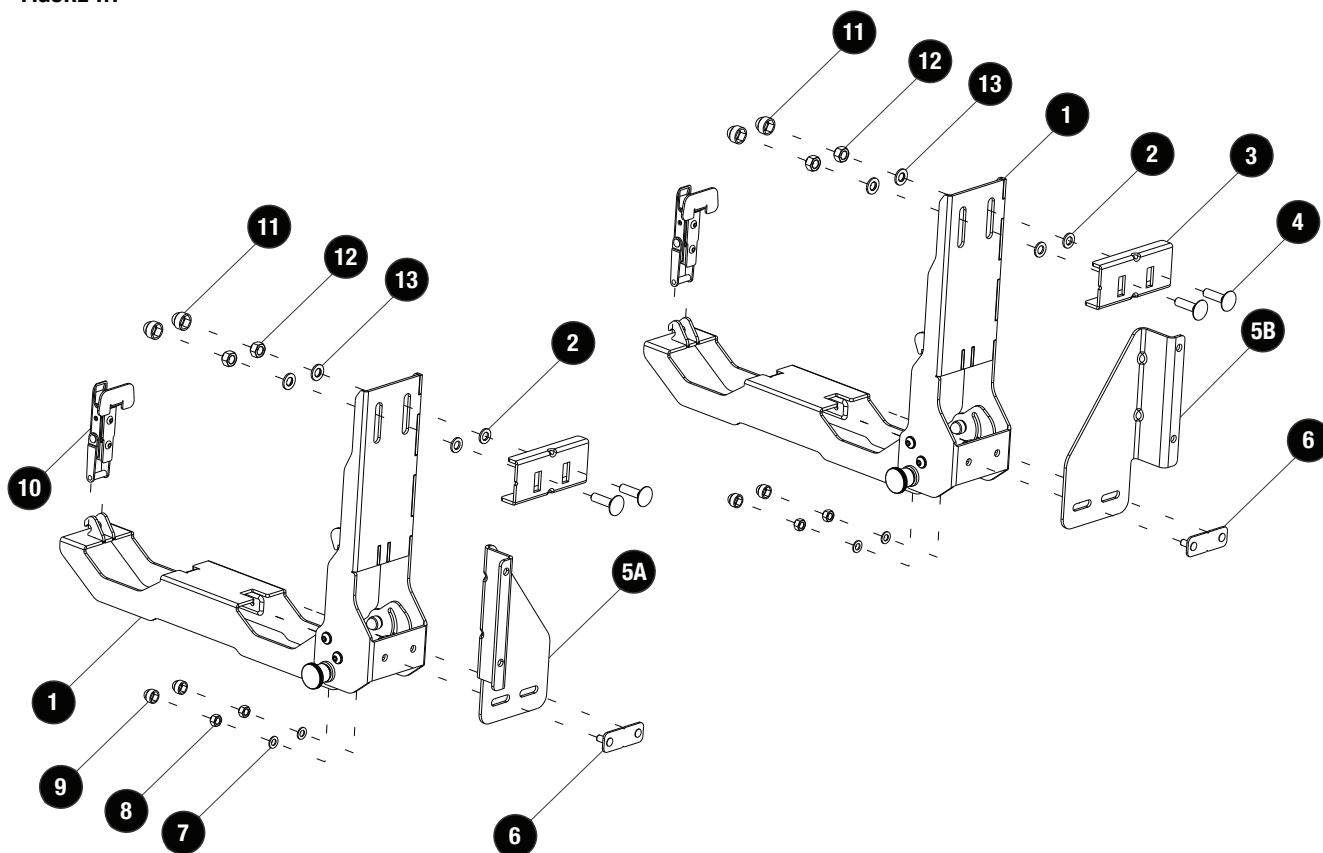


2.1

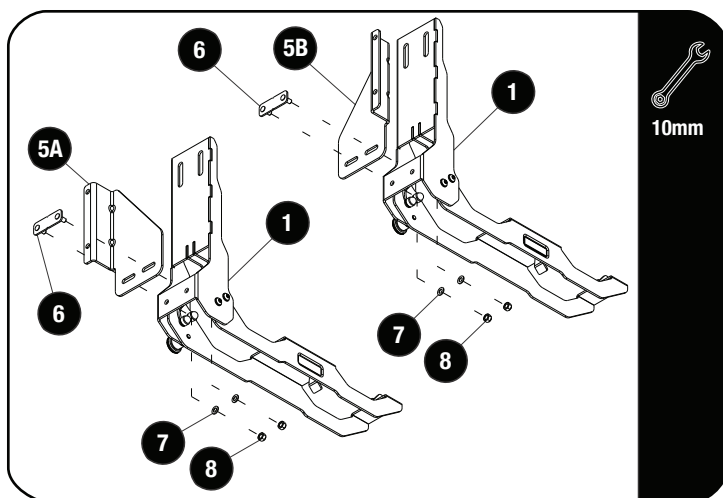

Loosely fit the Box Link Brackets (Item 5A & 5B) to the Load Bed Brackets (Item 1) inserting the Stud Plate (Item 6) as shown using four M6 Flat Washers and four M6 Nyloc Nuts (Item 7 & 8).

2.2

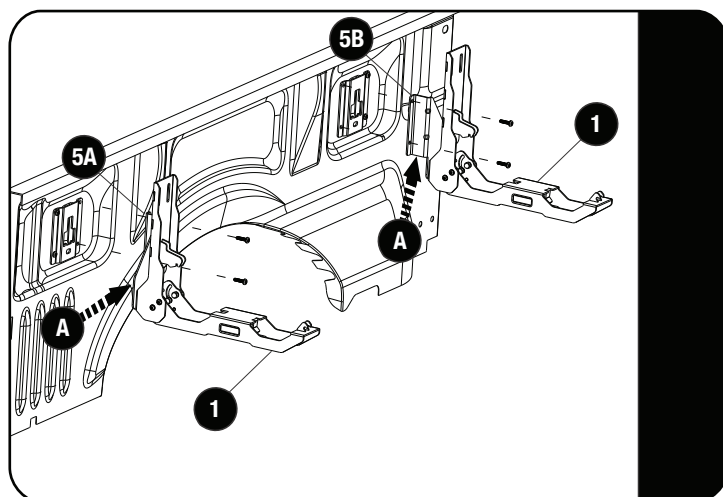

FITMENT TO 5.5' LOAD BED



Determine which side to mount your Pelican Case.


When mounting a Pelican Case to a 5.5 Foot load bed, remove the two screws from each factory fitted, Box Link Brackets as shown.



Secure the Load Bed Brackets orientated as shown with the screws removed.

Fully tighten the screws.

2.3

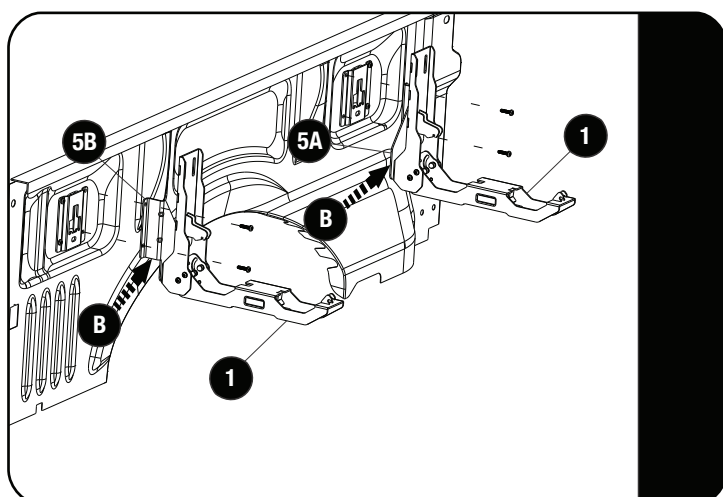

FITMENT TO 6.5' LOAD BED



Determine which side to mount your Pelican Case.


When mounting a Pelican Case to a 6,5 Feet load bed, remove the two screws from each factory fitted Box Link Brackets as shown.



Secure the Load Bed Brackets orientated as shown with the screws removed.

Fully tighten the screws.

2.4

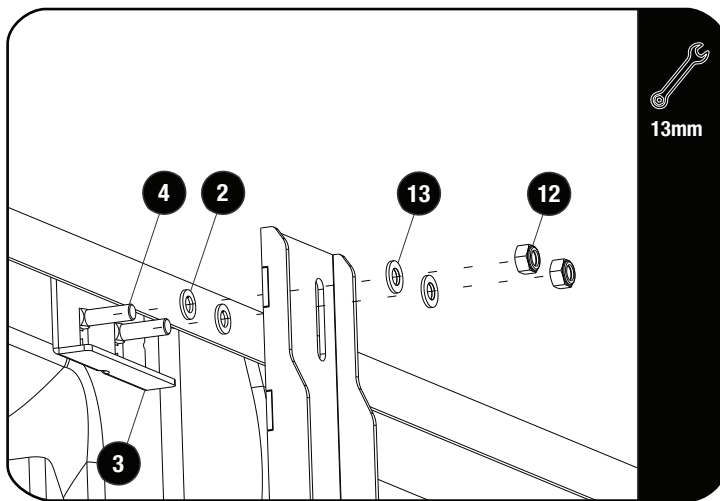


Insert two M8x30 Carriage Bolts (Item 4) through the rectangular slots provided in the Clamp (Item 3). Fit two M8 Anti-Loss Washers (Item 2) to the protruding M8 x 30 Carriage Bolts and push the Anti-Loss Washers up against the Clamp. Loosely secure the Load Bed Bracket with the Clamp assembly using two M8 Flat Washers and two M8 Nyloc Nuts (Item 13 & 12) as shown. Repeat this with the second Load Bed Bracket.



NOTE: The top short edge of the Clamp, should clamp the inner top edge of the load bed. The bottom long edge should clamp the Load Bed Saddle Bracket.

2.5

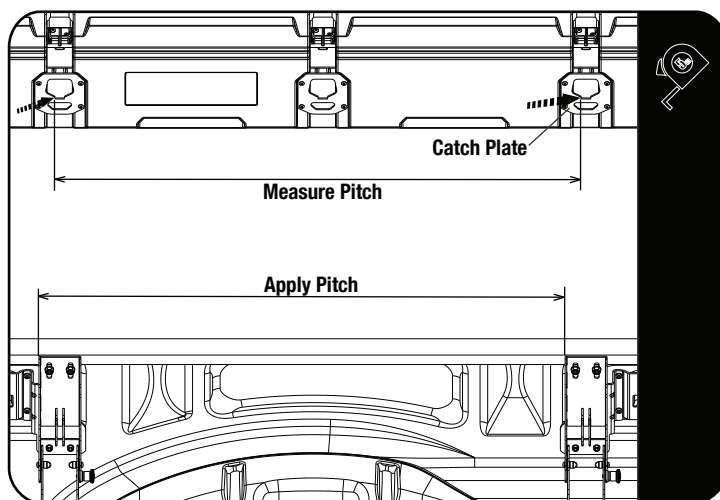


Measure the pitch on the Pelican Case Catch Plates as shown.

Apply the measured pitch to the Load Bed Brackets as shown. Adjust if necessary.

Fully tighten the M8 Nyloc Nuts at the top and M6 Nyloc Nuts at the bottom after both the Load Bed Bracket Catch Hooks are aligned with the Catch Plates on the case.


Finish off by placing four M8 Nut Caps (Item 11) on the M8 Nyloc Nuts and four M6 Nut Caps (Item 9) on the M6 Nyloc Nuts.

2.6

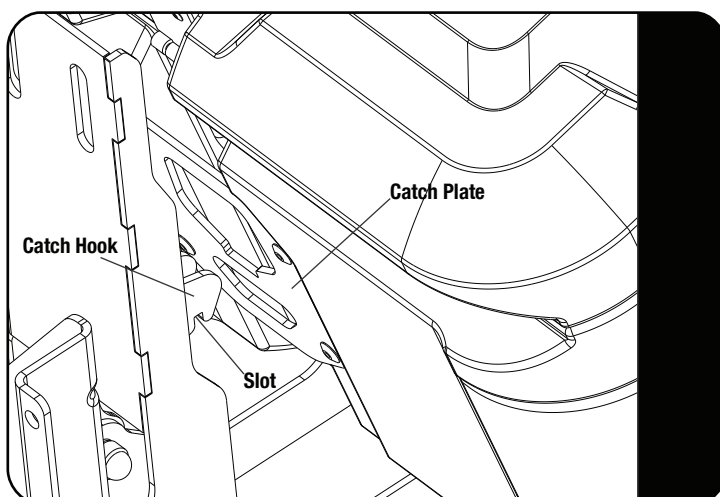

Place your Pelican Case on the Load Bed Brackets, aligning the Catch Plates on the case with the Catch Hooks on the Load Bed Brackets. Tilt the case and slide the Catch Plates under the hooks of the Load Bed Brackets. Insure the Catch Plates slide into the Slot provided in the Catch Hook.

2.7

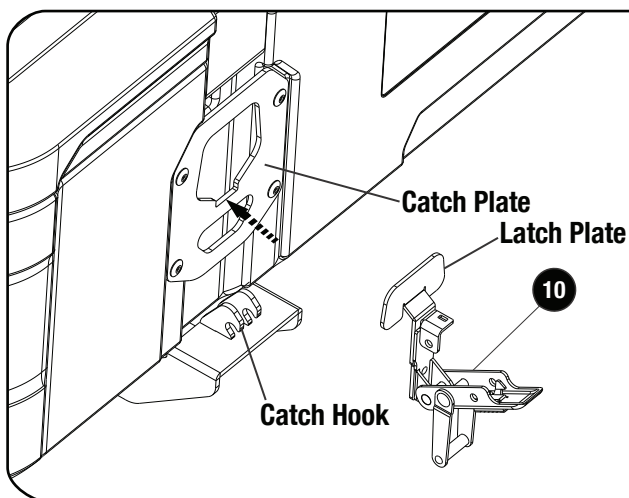


Before attaching the Case to the Load Bed Brackets, inspect the Latch Plates for damage or insecure fit.

IF THE LATCH PLATES ARE LOOSE OR ANY OF THE RIVETS ARE MISSING. DO NOT USE THE LATCH TO SECURE THE CASE.




Open the Latch (Item 10) and insert the Latch into the Catch Plate as shown in 2.8.

2.8

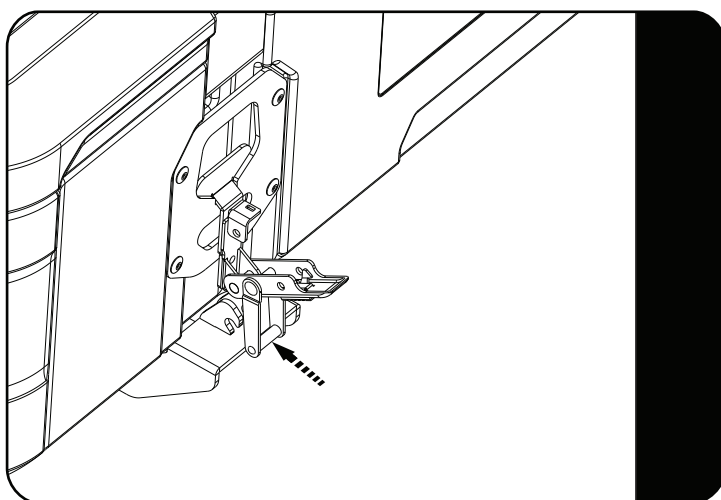

Place the Latch Loop over the Catch Hooks on the Load Bed Brackets.

2.9

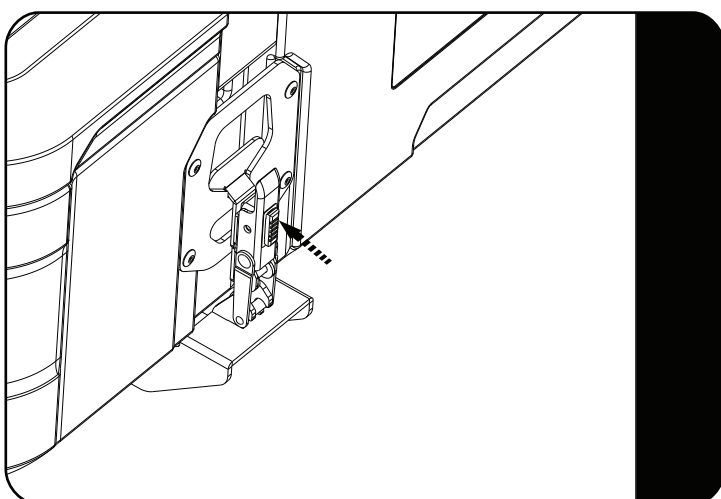

Close the Latch to secure the Pelican Case onto the Load Bed Bracket.

Do this with both Latches.

Latches can be locked using a Front Runner Cable Lock RRAC134 (sold separately) or similar lock.

3

IMPORTANT



WEIGHT LIMIT

Always distribute heavy loads as evenly as possible and secure the load appropriately. To avoid damage to the load bed brackets and vehicle, do not exceed the maximum load capacity specified by the manufacturer. Refer to Owner's Manual.



MOUNTING KIT CARE

Periodically check the mounting hardware to ensure that there are no loose parts. After exposure to salty coastal climates, or snowy regions, rinse off the mounts with water to remove salt deposits. To help prevent corrosion, apply a silicone based oil or spray to nuts and bolts to help prevent corrosion.

4

FINISH

Congratulations! You did it. Take a step back and admire your work!

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

