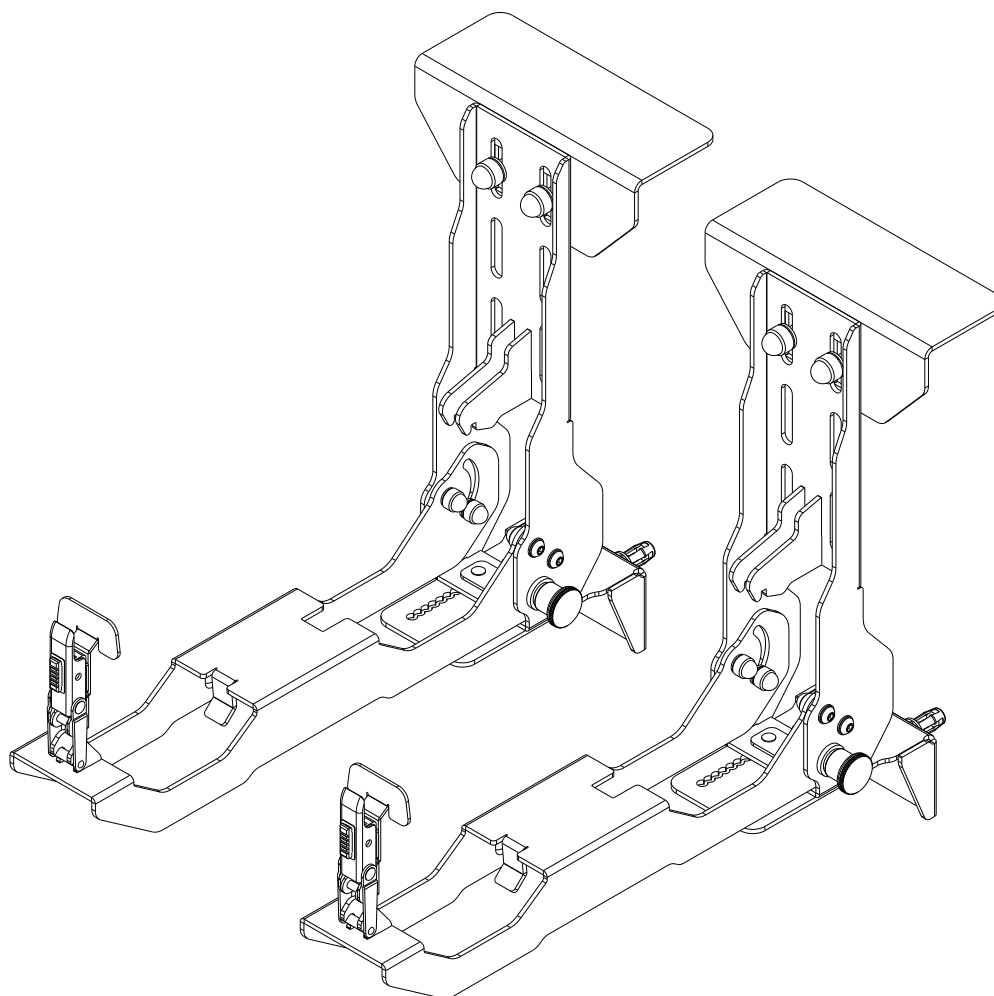


**READ ME !**

Thank you for purchasing a Front Runner Pelican Case Load Bed Bracket.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Load Bed Bracket
2	4 X	M8 Flat Washer
3	4 X	M8 Nyloc Nut
4	4 X	M8 Nut Cap
5	2 X	Pelican Case Latch
6	3 X	M6 x 35 Button Head Screw
7	2 X	M6 Spring Washer
8	6 X	M6 Flat Washer
9	2 X	Mount Bracket
10	4 X	M6 Nut Cap
11	4 X	M6 Nyloc Nut
12	1 X	M6 Jack Nut Tool
13	3 X	M6 Jack Nut
14	2 X	M6 Stud Plate
15	4 X	6mm Spacer
16	2 X	M8 Stud Plate
17	4 X	M8 x 45 Carriage Bolt
18	4 X	M8 x 40 Carriage Bolt
19	2 X	Clamp
20	4 X	M8 Anti-Loss Washer
21	2 X	Edge Plate

TOOLS NEEDED



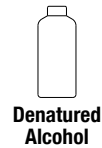


FIGURE 1.1

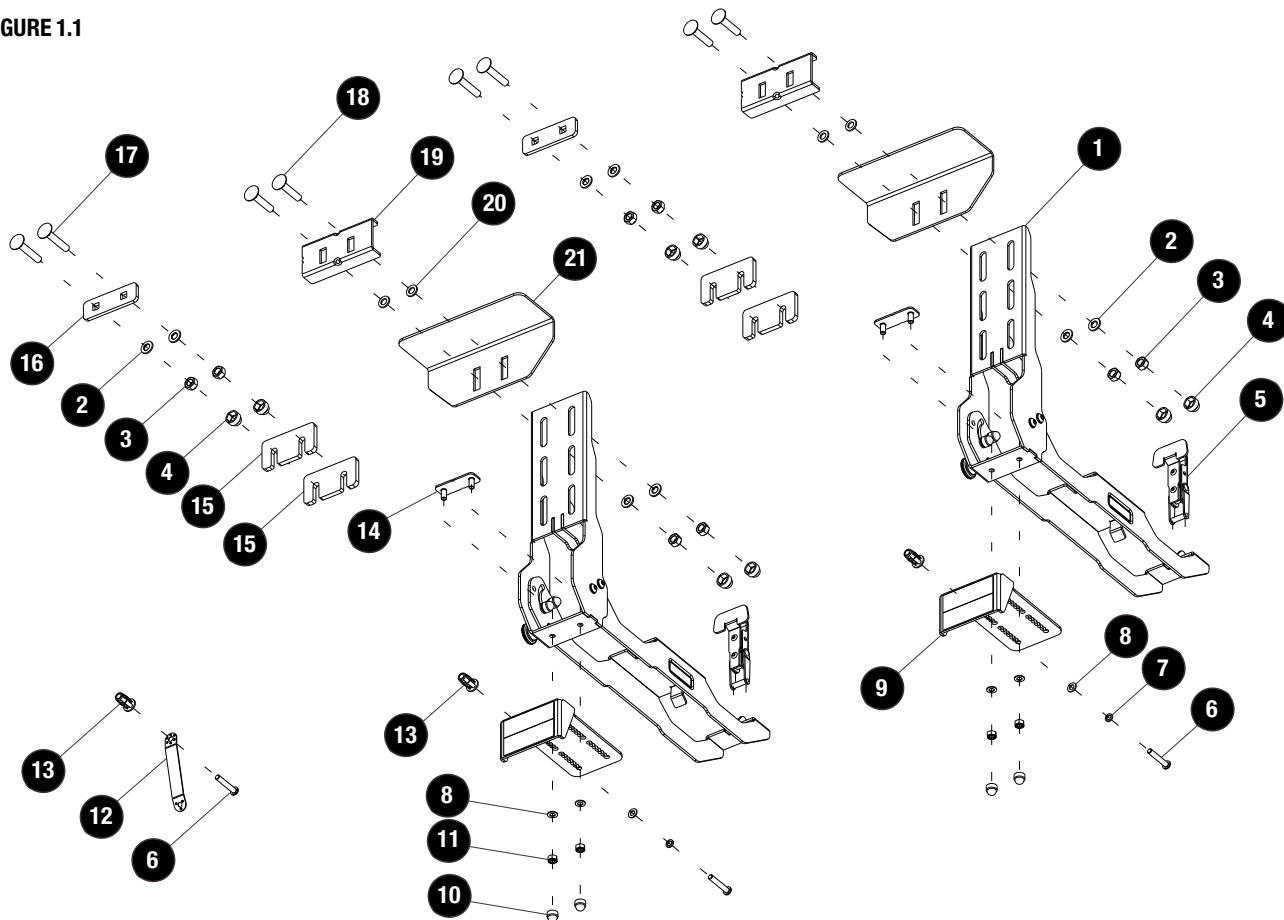

2.1

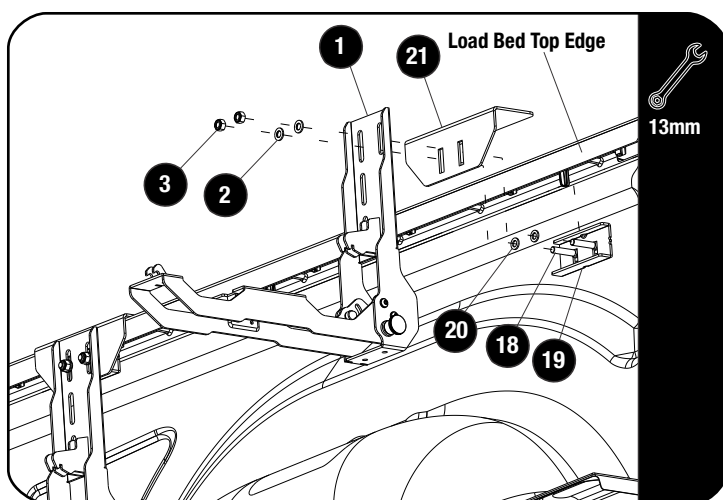


⌚ Determine on which side of the load bed you want to mount your Pelican Case.

Insert two M8x40 Carriage Bolts (Item 18) through the slots of each Clamp (Item 19) as shown and fit two M8 Anti-Loss Washers (Item 20) to the protruding M8 x 40 Carriage Bolts and push the Anti-Loss Washers up against the Clamp. Position the Clamp assembly behind the load bed top edge and fit the Edge Plate (Item 21) over the top side of the load bed with the M8x40 Carriage Bolt protruding through the Edge Plate Slots. Holding the components secure, loosely fit the Load Bed Bracket (Item 1) using two M8 Flat Washers and two M8 Nyloc Nuts (Item 2 & 3).

Tighten the M8 Nyloc Nuts enough to keep the assembly in position but still loose enough for positional adjustments of the Load Bed Bracket.


Do this to the second Load Bed Bracket as shown.

2.2

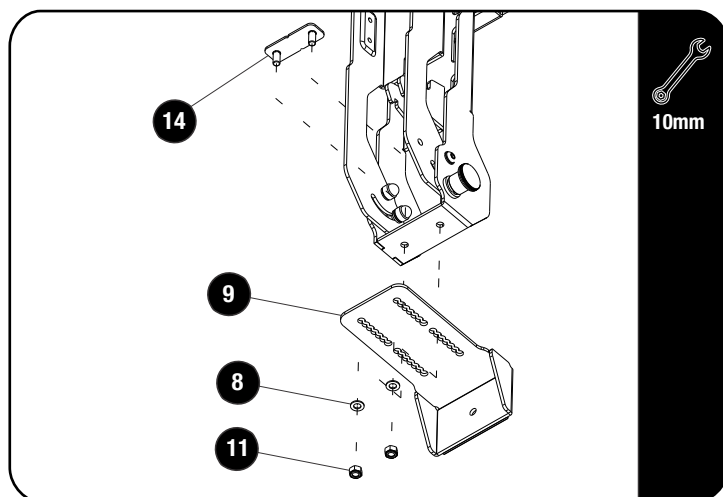

⌚ Fit the M6 Stud Plate (Item 14) to the Load Bed Bracket as shown. If required, fold the Support Arm of the Load Bed Bracket to position the Mount Bracket (Item 9) underneath the Load Bed Bracket and loosely secure the Mount Bracket to the Load Bed Bracket when the Mount Bracket is sitting flush against the load bed inner wall, using the M6 Stud Plate, two M6 Flat Washers and two M6 Nyloc Nuts (Item 8 & 11).

2.3

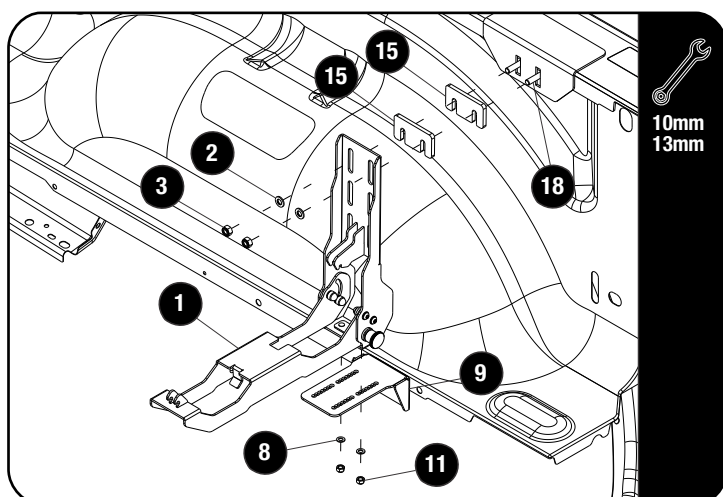


⌚ Depending on the vehicle load bed inner wall, one or two 6mm Spacers (Item 15) can be fitted to insure the Load Bed Brackets are secured vertically. When using the 6mm Spacers, the four M8x40 Carriage Bolts (Item 18) fitted in 2.1, need to be replaced with four M8x45 Carriage Bolts (Item 17).

Repeat 2.1 using the M8x45 Carriage Bolts.

Adjust the Mount Brackets (Item 9) accordingly as shown in 2.2.


2.4

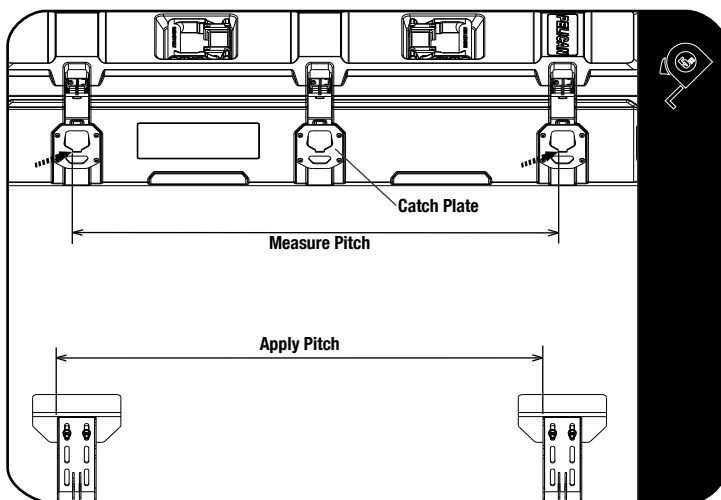

Measure the pitch on the Pelican Case Catch Plates as shown.

Apply the measured pitch to the Load Bed Brackets as shown. Adjust the Load Bed Brackets accordingly.

2.5

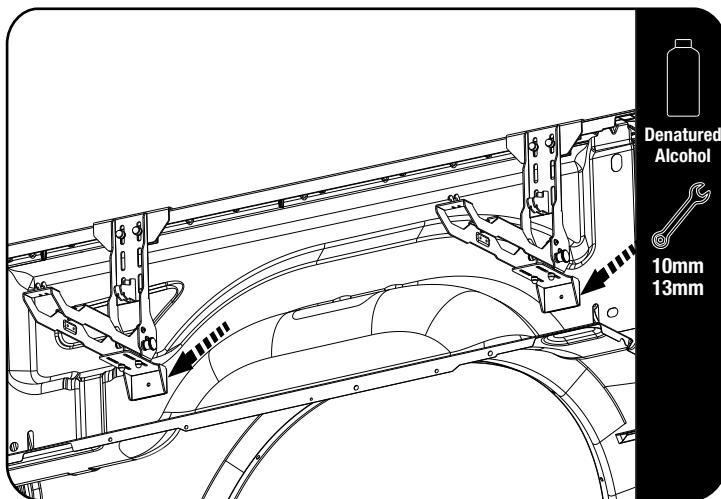

FOR PERMANENT FITMENT, SKIP THIS STEP AND CONTINUE TO 2.6.



Use Denatured Alcohol to clean all surfaces on the load bed inner wall before applying the Double Sided Tape.



Adjust the height of the Load Bed Brackets equally to clear the wheel fender arch when mounting your Pelican Case.




Insure not to change the pitch applied in 2.4. Fully tighten the M8 Nyloc Nuts and M6 Nyloc Nuts.

Remove the backing tape of the Double Sided Tape and push the Load Bed Brackets against the wall. Finish off by placing four M8 Nut Caps (Item 4) on the M8 Nyloc Nuts and M6 Nut Caps (Item 10) on the M6 Nyloc Nuts.



CONTINUE TO 2.10

2.6

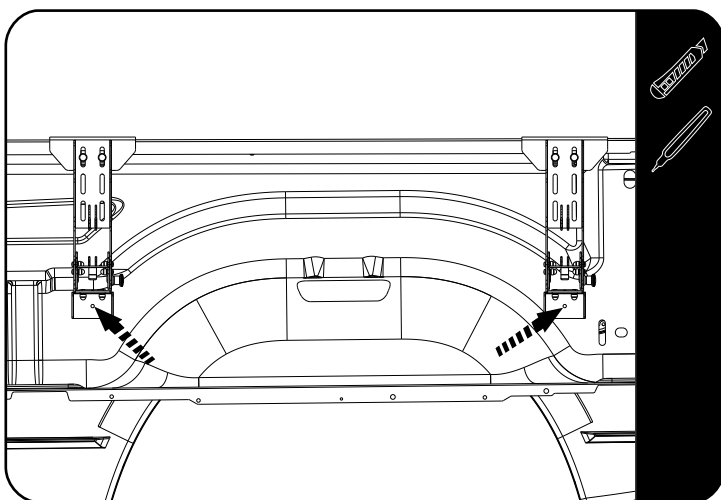

Fully tighten the M6 Nyloc Nuts securing the Mount Brackets to the Load Bed Brackets.


Using a Utility knife, remove the Double Sided Tape obscuring the bottom mounting holes as shown.



Insure the pitch is as measured in 2.4.

Mark the position of the bottom mounting holes, using the bracket holes as a guide.

2.7

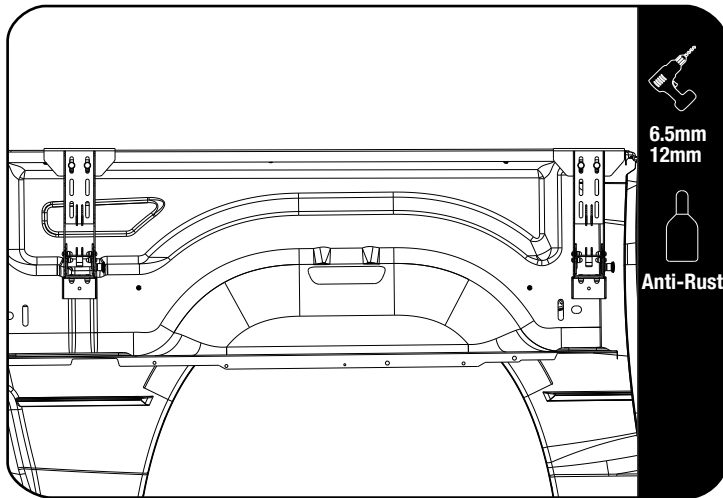


Slide the brackets one side to expose the markings. Using a 6.5mm drill bit, drill a pilot hole in the center of each of your markings. Open the holes using a 12mm drill bit.

Only drill through the first inner skin of the load bed.

Apply some Anti Rust on the exposed metal of each hole.

2.8

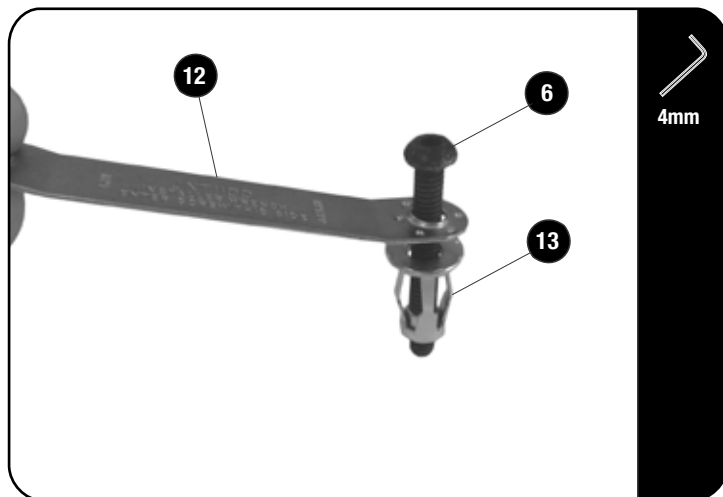

Insert the M6 x 35 Button Head Screw (Item 6) into the one side of the Jack Nut Tool (Item 12). Loosely fit a Jack Nut (Item 13) to the M6 x 35 Button Head Screw as shown.


Place the assembly into the hole drilled in 2.7. Using a 4mm Allen Key, insert the Jack Nut into the hole while holding the Jack Nut Tool firmly and tighten the M6 x 35 Button Head Screw to pull and set the Jack Nut up against the inside of the vehicle.



Make sure the Jack Nut has pulled up all the way to the inside skin of the load bed wall.

A Corded/Cordless Drill with a H4 Bit can also be used. Care must be taken not to damage the screw head. Remove the Button Head Screw and Jack Nut Tool.


2.9

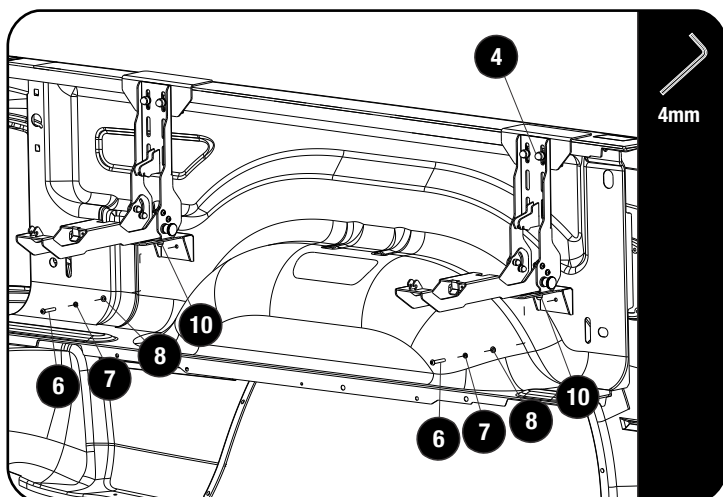

Move the Load Bed Brackets back in position. Fully tighten the M8 Nyloc Nuts assembled Mount Brackets, using two M6 x 35 Button Head Screws, two M6 Spring Washers and two M6 Flat Washers (Item 6, 7 & 8).


Finish off by placing four M8 Nut Caps (Item 4) on the M8 Nyloc Nuts and four M6 Nut Caps (Item 10) on the M6 Nyloc Nuts.

2.10

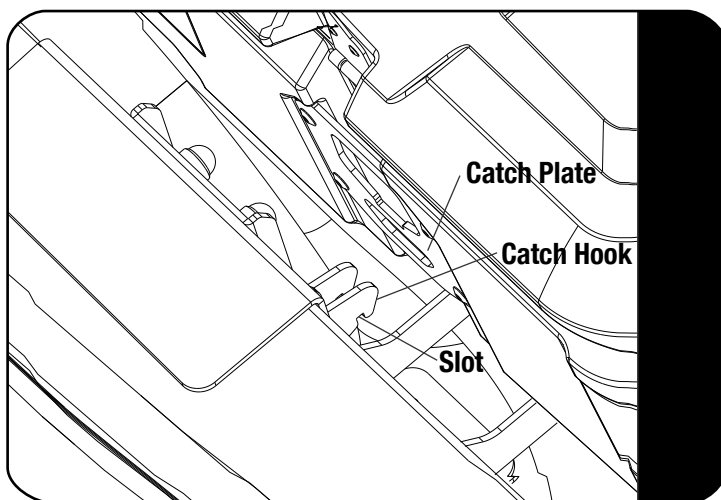

Place your Pelican Case on the Load Bed Brackets, aligning the Catch Plates on the case with the Catch Hooks on the Load Bed Brackets. Tilt the case and slide the Catch Plates under the hooks of the Load Bed Brackets. Insure the Catch Plates slide into the Slot provided in the Catch Hooks.

2.11

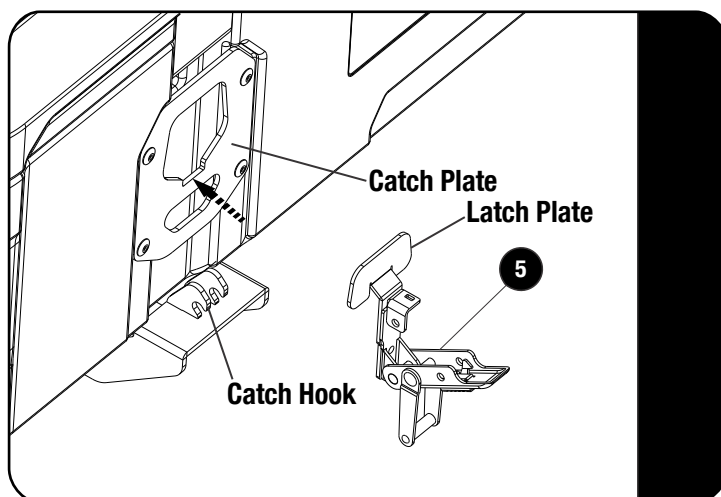


Before attaching the Case to the Load Bed Brackets, inspect the Latch Plates for damage or insecure fit.

IF THE LATCH PLATES ARE LOOSE OR ANY OF THE RIVETS ARE MISSING. DO NOT USE THE LATCH TO SECURE THE CASE.



Open the Latch (Item 5) and insert the Latch into the Catch Plate as shown in 2.12.

2.12

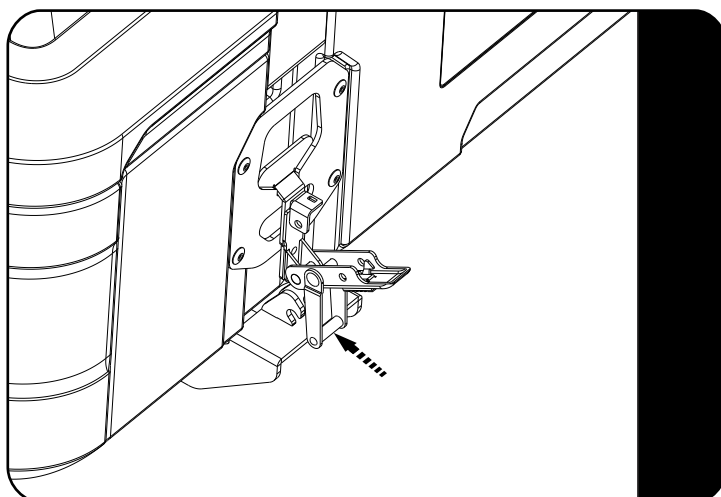


Place the Latch Loop over the Catch Hooks on the Load Bed Brackets.

2

FIT AND SECURE

2.13

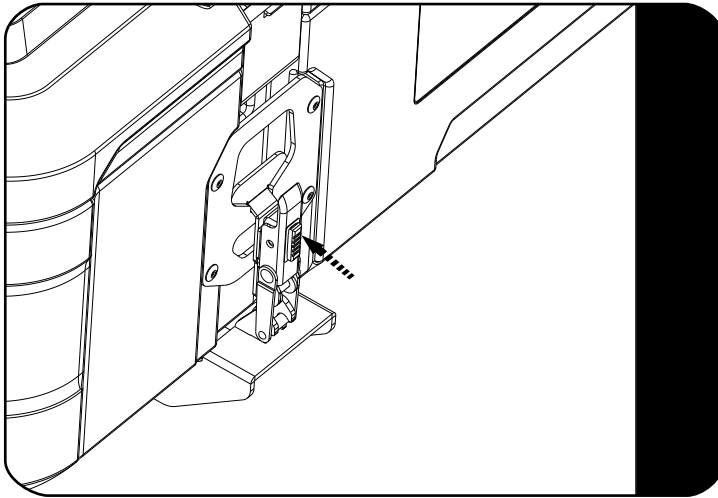

Close the Latch to secure the Pelican Case onto the Load Bed Bracket.

Do this with both Latches.

Latches can be locked using a Front Runner Cable Lock RRAC134 (sold separately) or similar lock.

3

IMPORTANT



WEIGHT LIMIT

Always distribute heavy loads as evenly as possible and secure the load appropriately. To avoid damage to the load bed brackets and vehicle, do not exceed the maximum load capacity specified by the manufacturer. Refer to Owner's Manual.



MOUNTING KIT CARE

Periodically check the mounting hardware to ensure that there are no loose parts. After exposure to salty coastal climates, or snowy regions, rinse off the mounts with water to remove salt deposits. To help prevent corrosion, apply a silicone based oil or spray to nuts and bolts to help prevent corrosion.

4

FINISH

Congratulations! You did it. Take a step back and admire your work!

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

