


START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.

Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

This document will guide you through the assembly of the mounting system and assist you in fitting the Service kit to your specific Cargo Slide. Please refer to the next page for a list of all the components, quantities and tools required.

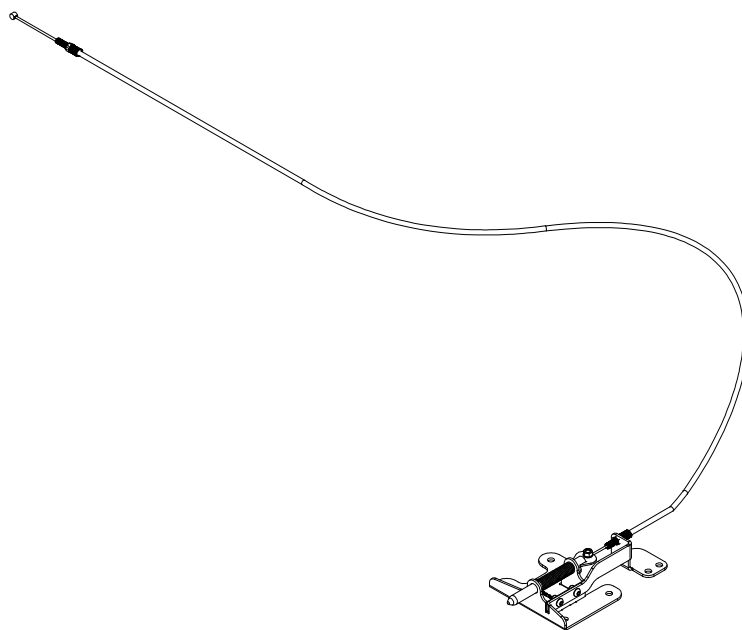

IMPORTANT WARNING! ⚠


IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

**1 GET ORGANIZED****IN THE BOX**

1	1 X	Spring - 1.8mm wire dia, 14mmID x 57mm L
2	1 X	Spring Pin 4 x 20mm
3	5 X	Cable Ties
4	1 X	Latch Cable Kit

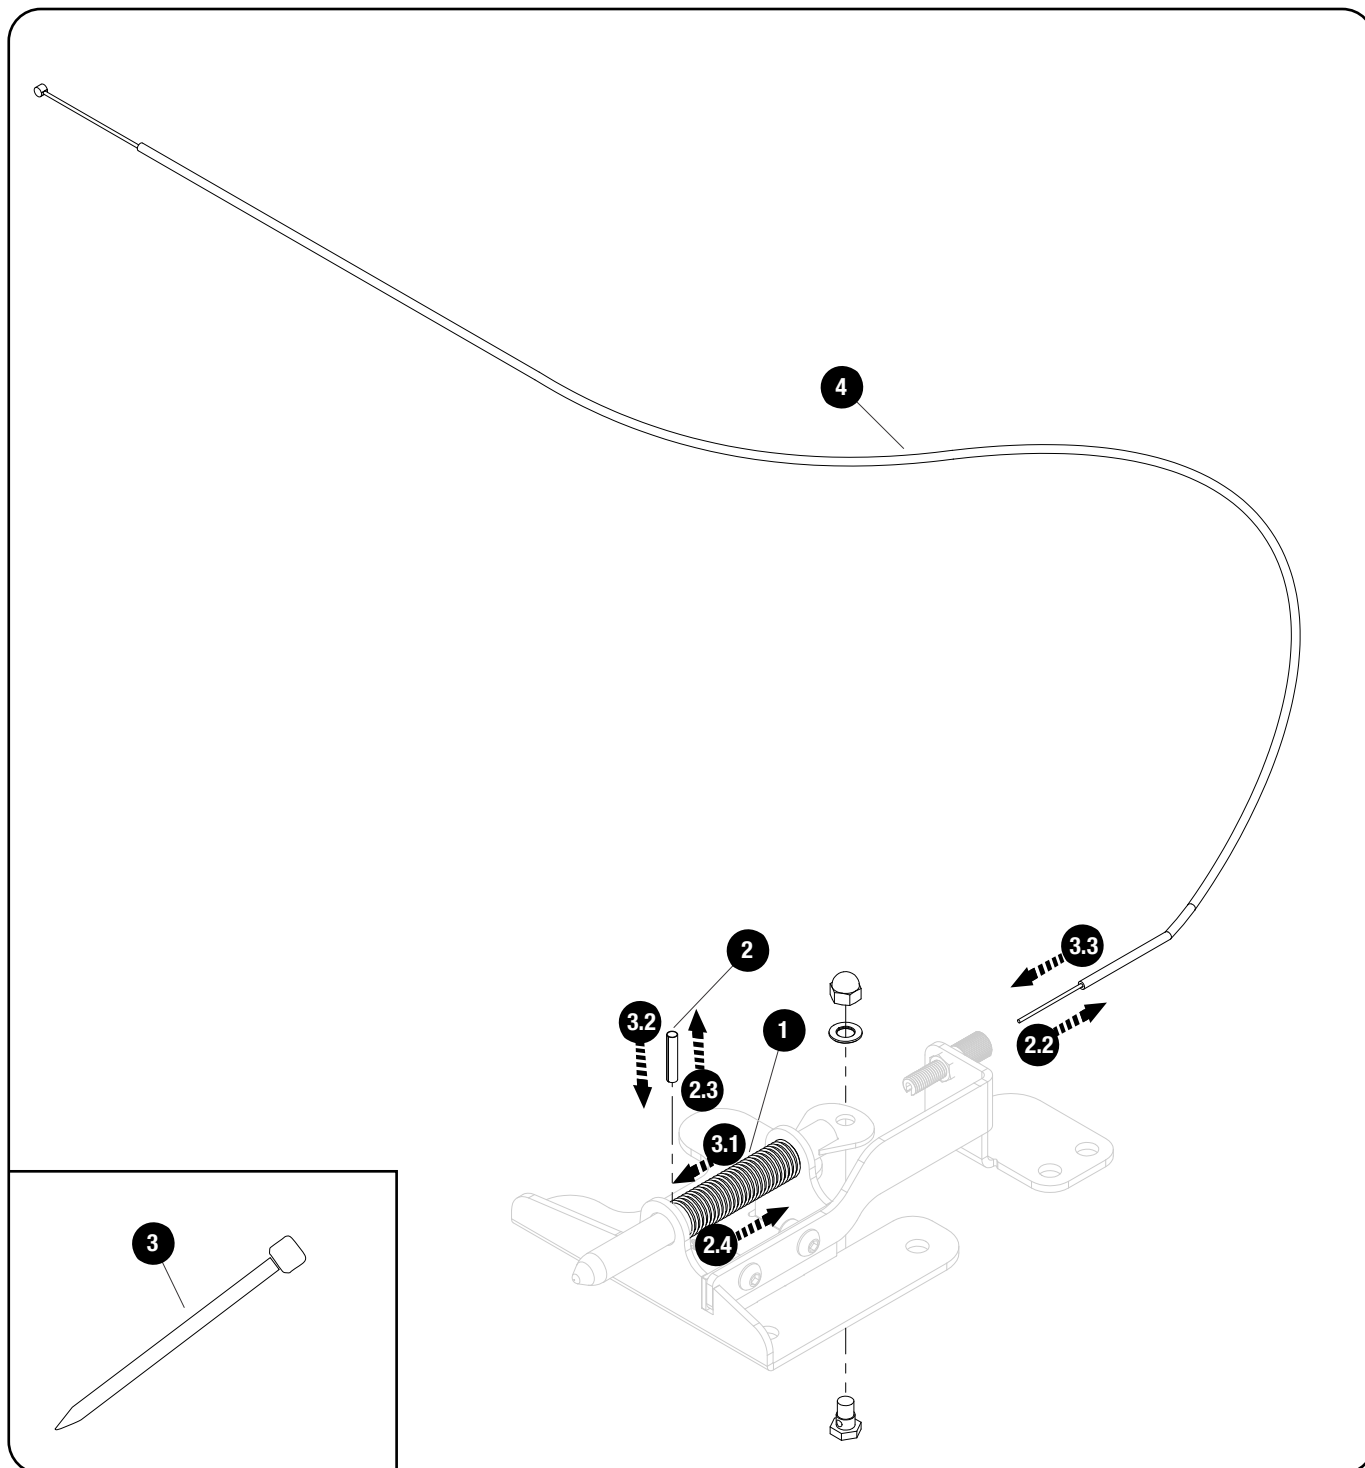TOOLS NEEDED10mm
13mm

2 SERVICE GUIDE - DISASSEMBLY

- 2.1 Start by removing the existing Zip Ties (Item 3) that attaches the Cable to the Clamps.
- 2.2 Loosen the Cable Anchor and slide the cable out of the hole on the bolt.
- 2.3 Position a Punch or similar tool on the Spring Pin and tap with a hammer until free of the Latching Pin.
- 2.4 Remove the Latching Pin from the Latch to free the Spring from the Latch.

3 SERVICE GUIDE - ASSEMBLY

- 3.1 Holding the Replacement Spring in the original position, slide the Latching Pin into the Latch.
- 3.2 Compress the spring, revealing the hole for the Spring Pin, align the Replacement Spring Pin with the hole and knock it in using a hammer.
- 3.3 Feed the Replacement Cable through the hole in the handle, both Cable Adjusters and back through the hole in the Cable Anchor. Follow the tightening procedure outlined in Step 4.8 in your Cargo Slide Fitting Instructions (available on our website).
- 3.4 Realign the cable with the Cable Clamps and fit the Replacement Zip/Cable Ties to secure, as outlined in Step 4.9 in your Cargo Slide Fitting Instructions (available on our website).

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:    