


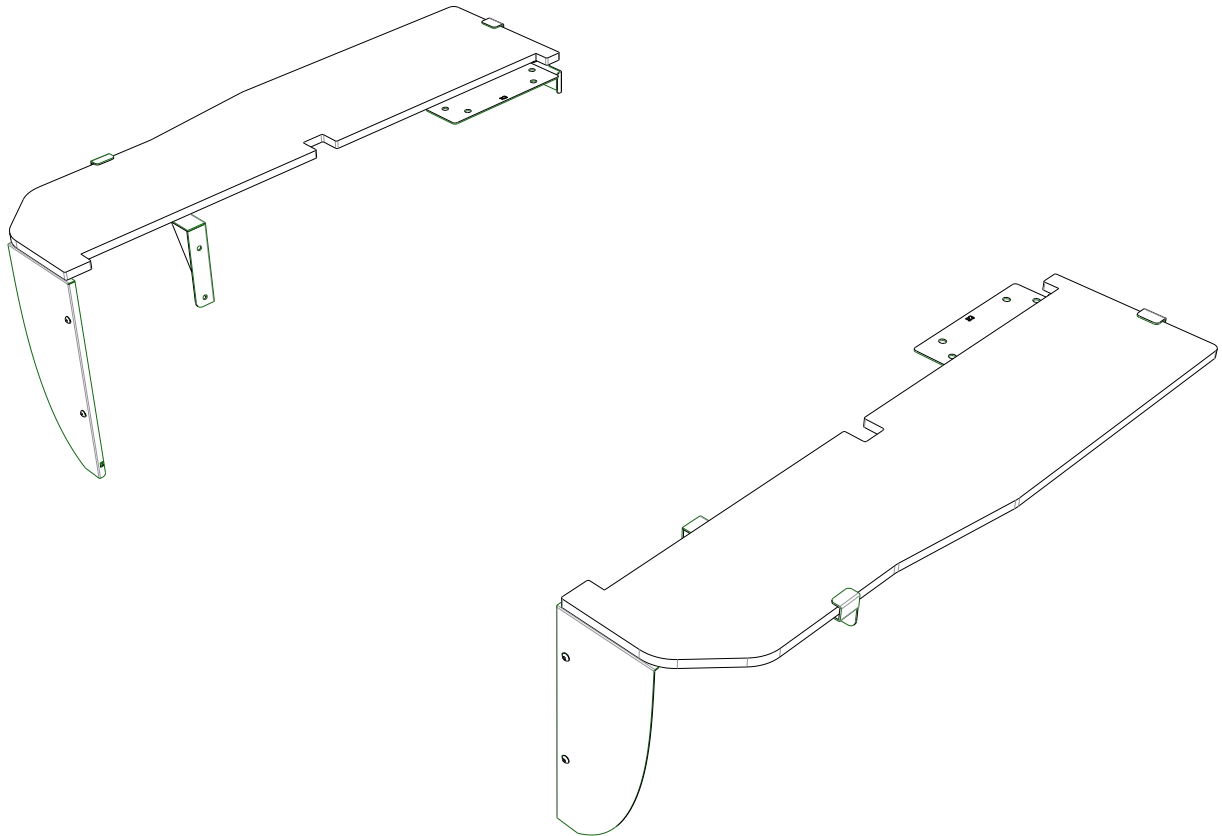

READ ME !

Thank you for purchasing a Front Runner Drawer Deck Completion Set.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1

GET ORGANIZED


IN THE BOX

1	2 X	Side Deck LH + RH
2	4 X	M6 x 12 Button Head
3	2 X	Top Rear Wing LH + RH
4	2 X	Bottom Rear Wing LH + RH
5	4 X	M6 x 12 x 1SS Flat Washer
6	8 X	M6 Nyloc Nut
7	12 X	M6 x 19 x 1SS Flat Washer
8	2 X	Adjustable Front Wing LH + RH
9	2 X	Fixed Front Wing LH + RH
10	8 X	M6 x 16 Hex Bolt
11	4 X	M6 Spring Washer
12	2 X	Pinch Weld 350mm
13	2 X	Front Face LH + RH
14	4 X	M5 x 10 Button Head
15	4 X	M5 x 10 x 1SS Flat Washer
16	4 X	M5 Nyloc Nut
17	2 X	37mm Laser Cut Carabiner

TOOLS NEEDED



FIGURE 1.1

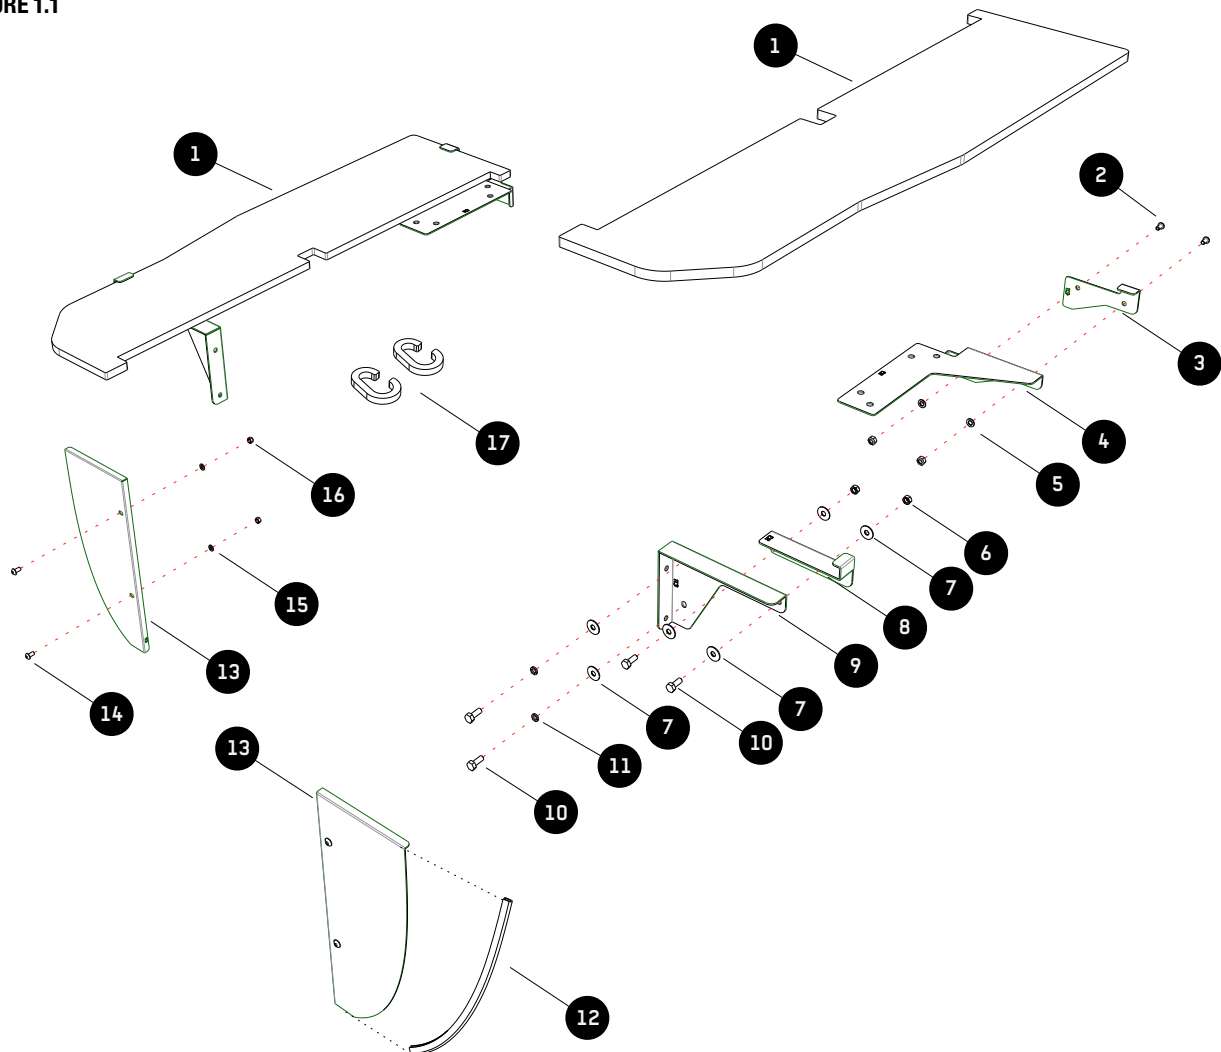

2


FIT AND SECURE

2.1



Loosen and remove the the two rear seats. Use the bolts that you have removed to secure the D-Rings supplied with the Drawer system (SSDR005) as shown.


2.2

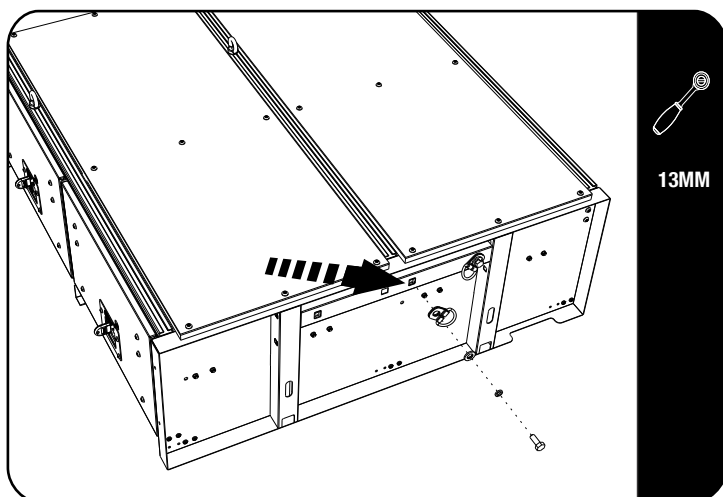

You will need to relocate the two front D-Rings on the Drawer. Loosen the D-Rings and unclip the Cage Nuts. Move the Cage Nuts to the new positions as shown and secure.


Place the Drawer System into the vehicle taking care not to damage any of the interior plastic panels. Position the Draw System as close to the rear door as possible and center in the vehicle.

2.3

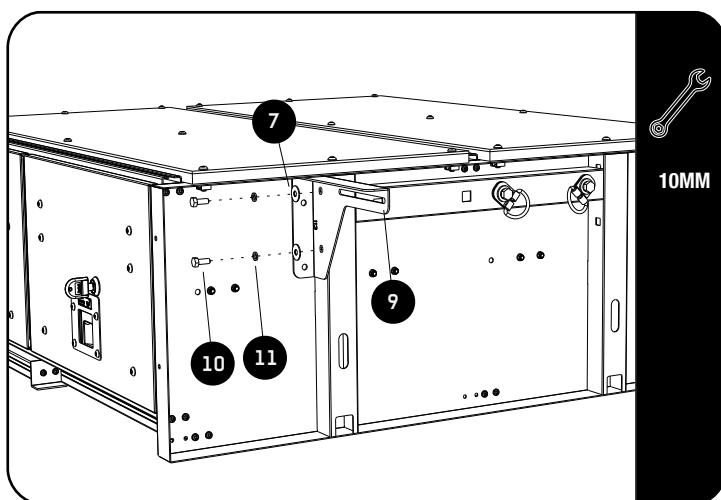

Secure the Fixed Front Wings (Item 9) on the left and right side of the Drawer by using M6 x 16 Hex Bolts, M6 Spring Washers and M6 x 19 x 1SS Flat Washers (Items 10, 11 & 7) as shown.

2.4

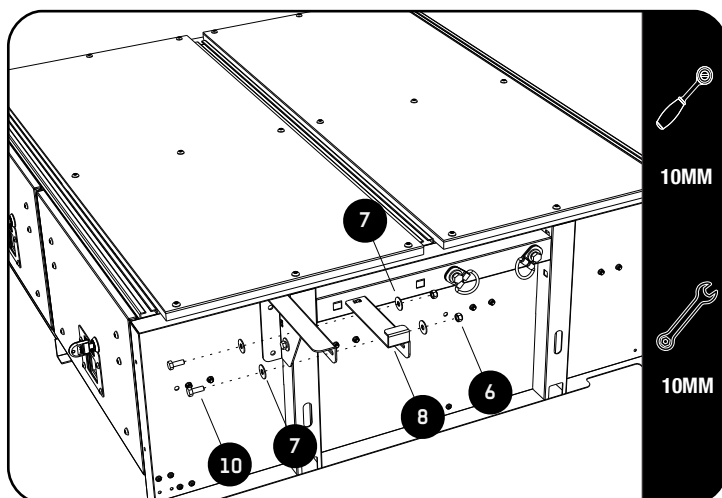


Loosely assemble the Adjustable Front Wings (Item 8) to the Fixed Front Wings (Item 9) using M6 x 16 Hex Bolts, M6 x 19 x 1SS Flat Washers and M6 Nyloc Nuts (Items 10, 7 & 6) as shown.

Do this on the left and right side of the Drawer System.


The fasteners will be fully tightened in Step 2.9.

2.5

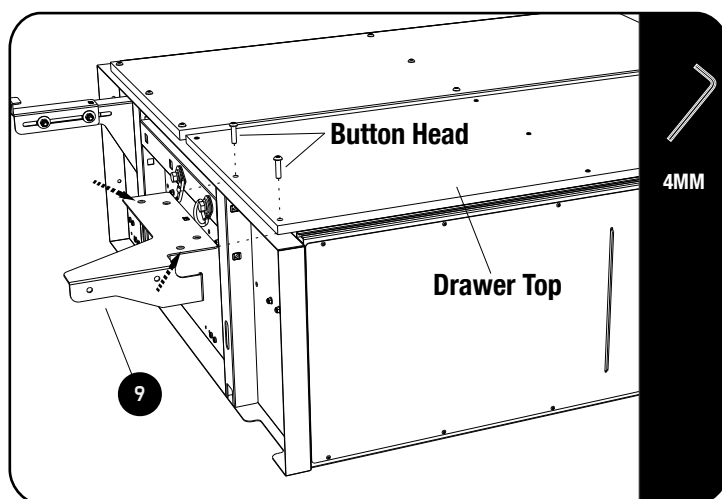


Loosen and remove the two rear Button Head Screws on either side, securing the deck to the drawer. Slide the Bottom Rear Wings (Item 4) between the drawer and the deck. Refit the Button Head Screws and tighten.

2.6

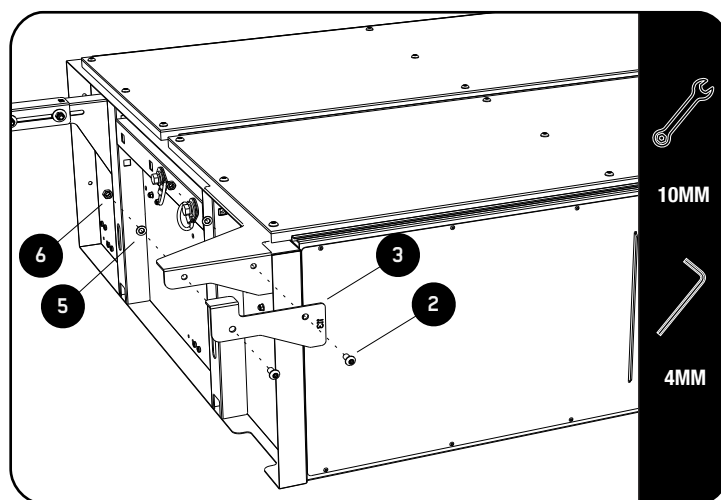

Fit the Top Rear Wing (Item 3) to the Bottom Rear Wing (Item 4) using M6 x 12 Button Heads, M6 x 12 x 1SS Flat Washers and M6 Nyloc Nuts (Items 2, 5 & 6) as shown.


2.7

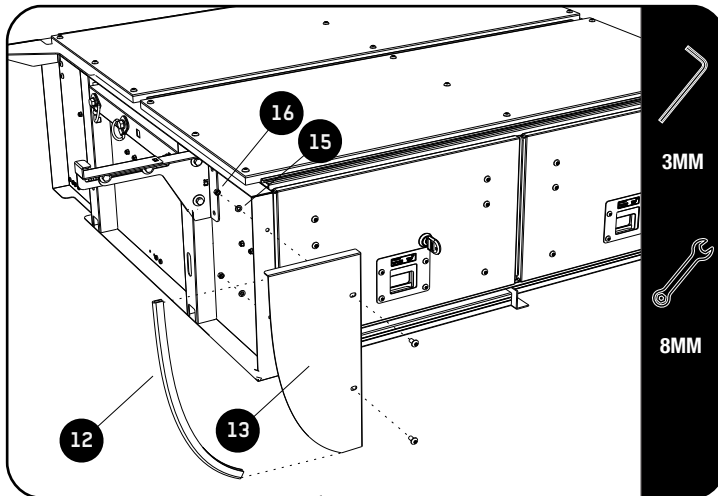

Fit the Pinch Weld (Item 12) onto the Front Faces (Item 13) before securing the Front Faces to the Drawer.

Secure the Front Face to the Drawer using M5 x 10 Button Heads, M5 x 10 x 1SS Flat Washers and M5 Nyloc Nuts (Items 14, 15 & 16) as shown.


2.8

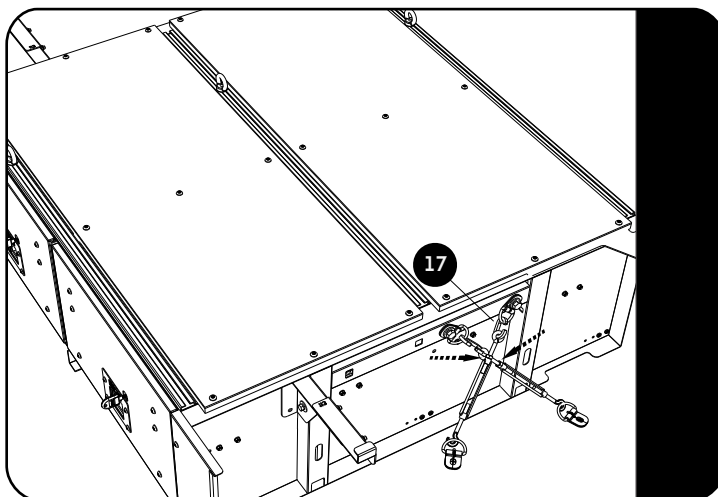

Secure the Drawer System in position using the 37mm Laser Cut Carabiner (Item 17) and the Turn Buckles (supplied with SSDR005) as shown.

Tighten the wing nut on each Turn Buckle to prevent it from coming loose.

2.9

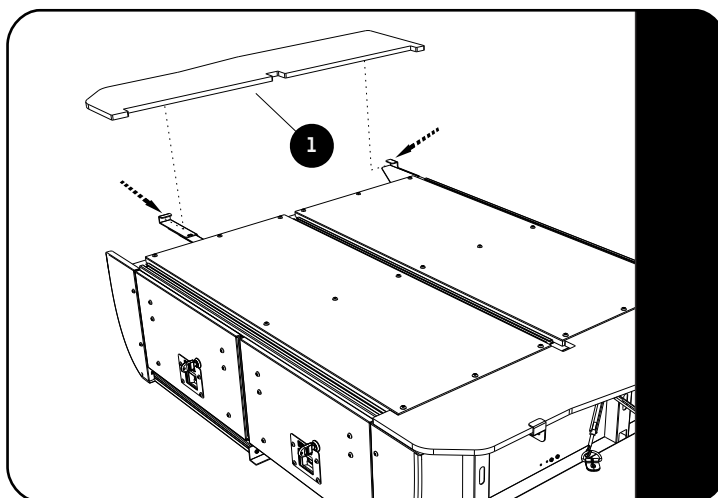

Place the Side Decks (Item 1) onto the Drawer making sure that you slide it into the C-clip of the Front and Rear Side Wings. Push the Adjustable Front Wing up against the Side Deck.

Carefully remove the Side Deck so that the adjustable Front Wings do not move. Secure the Adjustable Front Wings and refit the Side Decks.

3

COMPLETION

3.1



Congratulations! You did it. Take a step back and admire your work!

4

Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions. Please call us if you have any questions about the installation of this product.

5

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    