


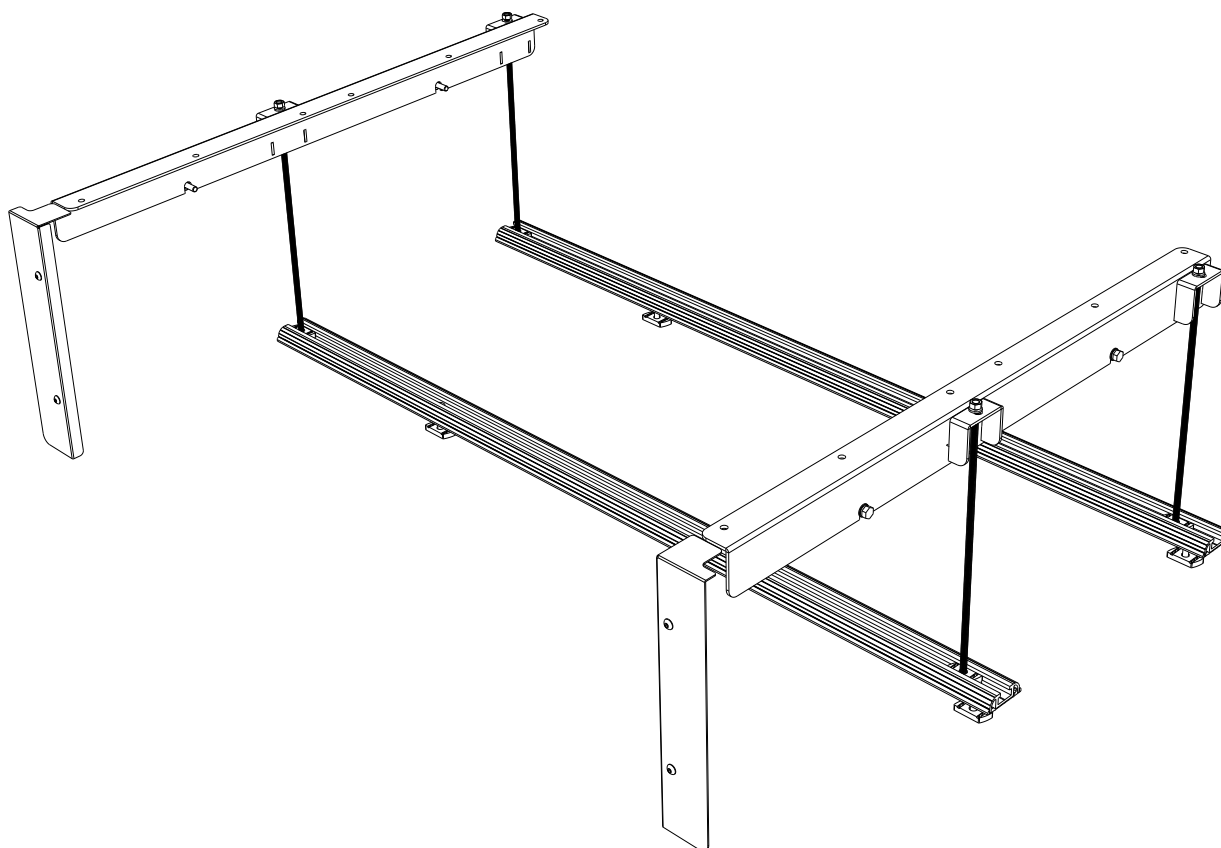

READ ME !

Thank you for purchasing a Front Runner Drawer Mounting Kit.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Side Mount Bracket - 1LH + 1RH
2	2 X	Front Face - 1LH + 1RH
3	2 X	Track - 1050mm Long
4	2 X	Track Rubber - 1050mm Long
5	4 X	6mm Treaded Rod
6	4 X	M6 Nylon Washer
7	8 X	M6 Channel Nut
8	4 X	M6 x 30 Countersink Screw
9	4 X	M5 Nyloc Nut
10	4 X	M5 x 10 x 1SS Flat Washer
11	4 X	M5 x 10 Button Head Bolt
12	20 X	M6 x 20 Hex Bolt
13	20 X	M6 Spring Washer
14	20 X	M6 x 12 x 1 SS Flat Washer
15	3 X	Self-Adhesive Rubber - 730mm Long

TOOLS NEEDED







FIGURE 1.1

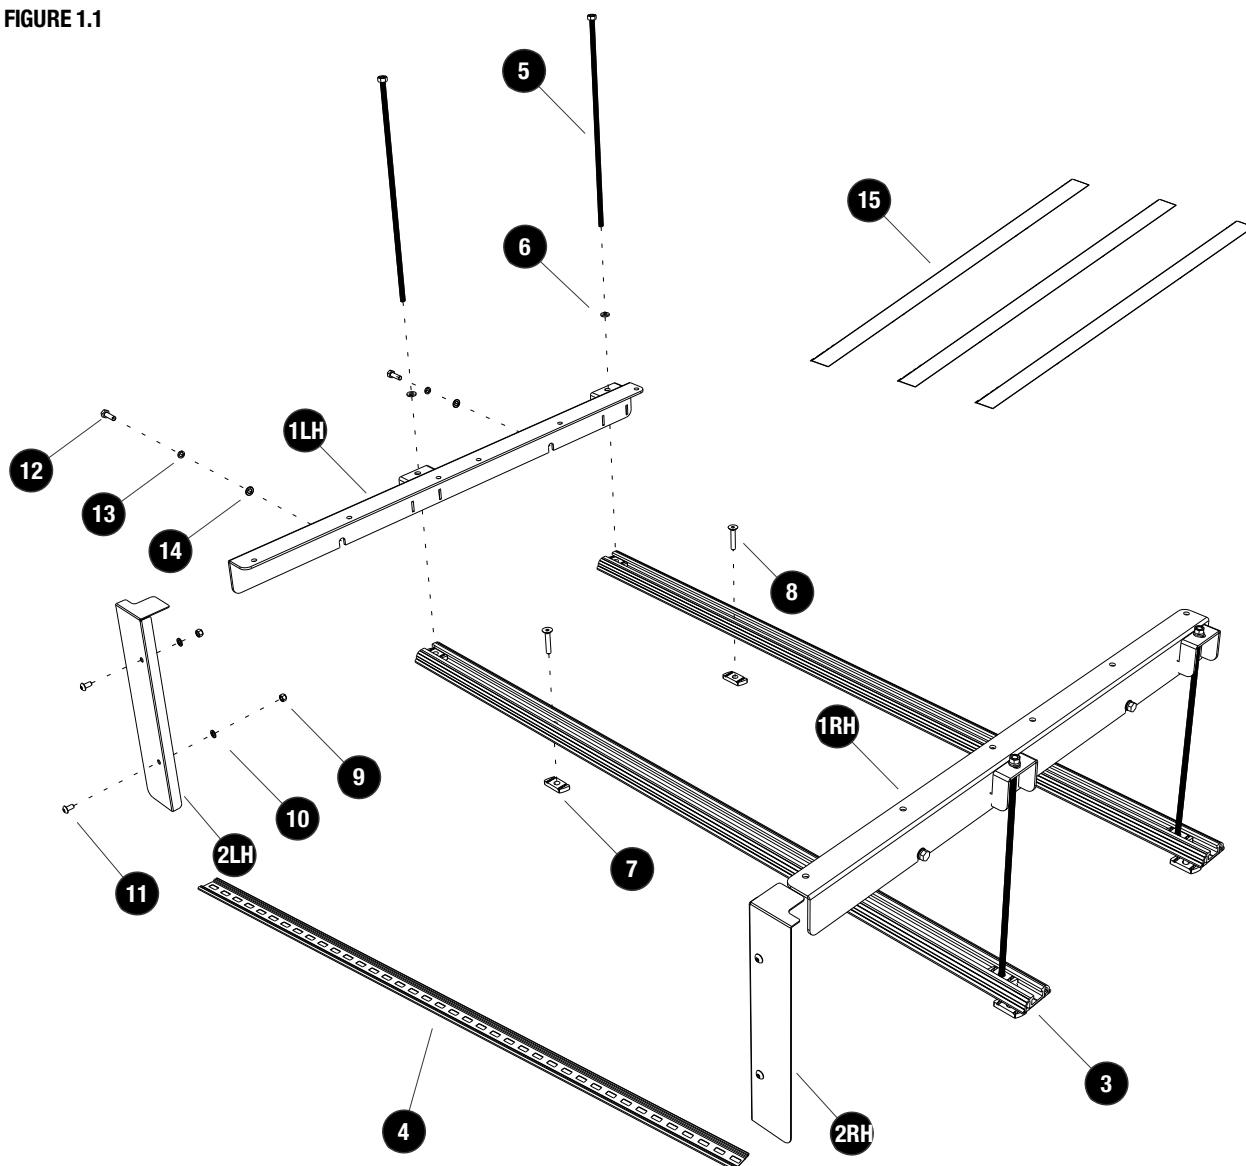


2.1

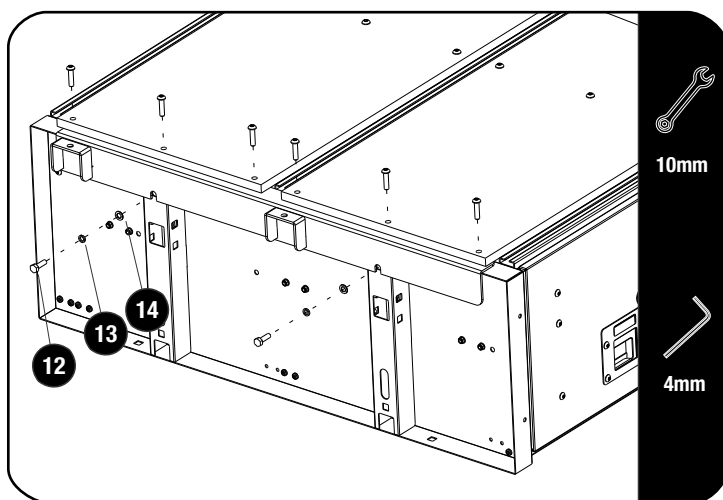

Loosen the drawers decks before securing the Side Mount Brackets (Item 1) to the drawer using M6 x 20 Hex Bolts, M6 SS Spring Washers and M6 x 12 x 1SS Flat Washers (12, 13 & 14).


Do this on both sides of the drawer.

2.2

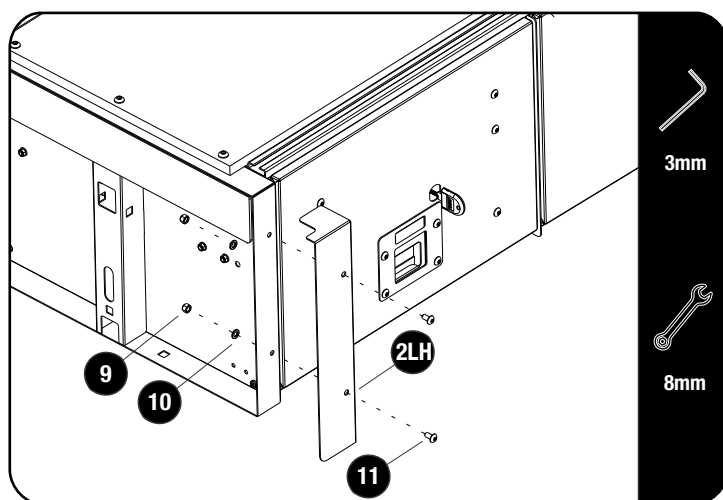


Secure the left and right Front Faces (Item 2 LH & RH) to the drawer using M5 x 10 Button Head Bolts, M5 x 10 x 1SS Flat Washers and M5 Nyloc Nuts (Items 9, 10 & 11).

2.3

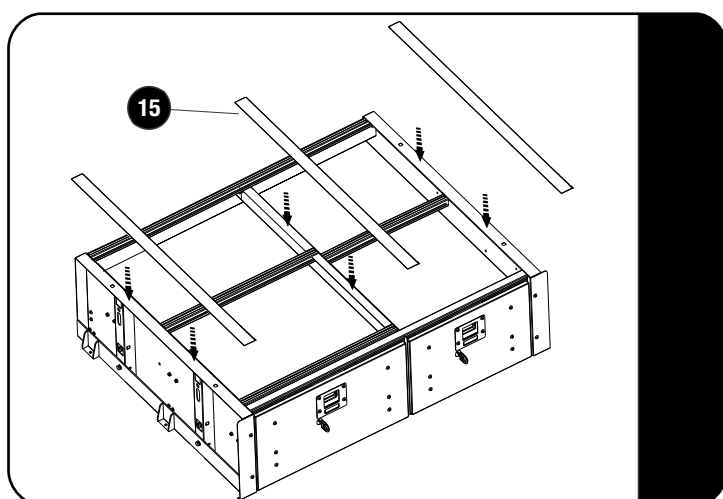

Flip the drawer upside down and stick the three strips of Self Adhesive Rubber down (Item 15).


2.4

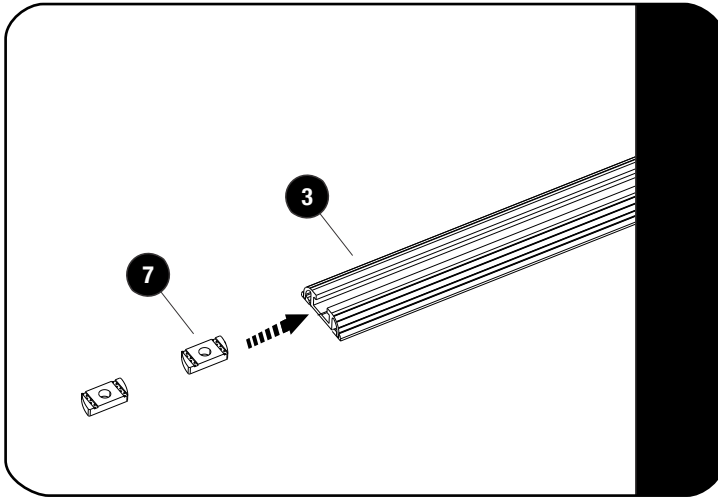

Slide two M6 Channel Nuts (Item 7) into each of the two tracks (Item 3).

These will be used in 2.7 to secure the drawer.

2.5

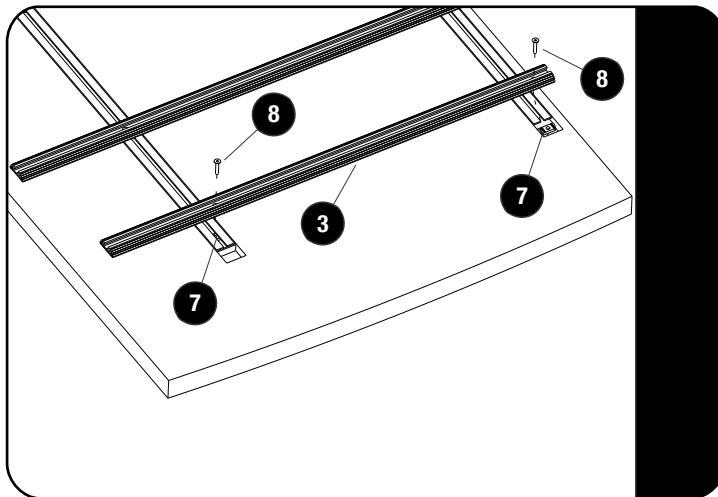


Slide two M6 Channel Nuts (Item 7) into each of the two seat rails.

Loosely fit the tracks to the vehicles seat rails using M6 x 30 Countersink Screws and M6 Channel Nuts (Items 7 & 8).

Refer to 2.6 for placement.

2.6

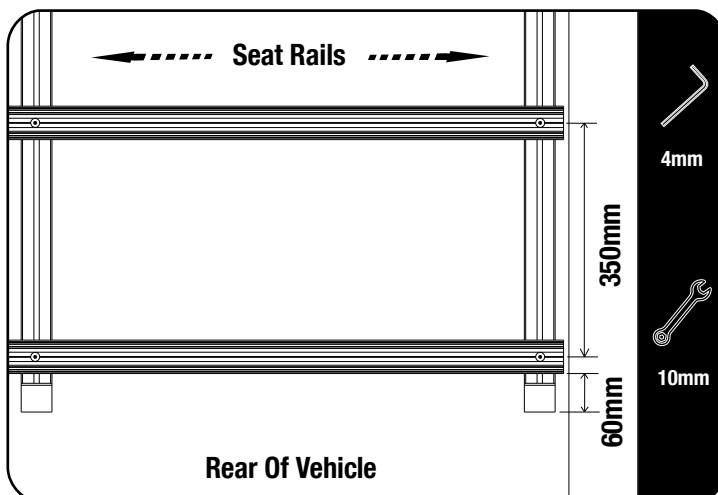


Secure the first Track (Item 3) 60mm from the rear end of the seat rails.

Secure the second Track 350mm center to center from the first track as shown,

2

FIT AND SECURE

2.7

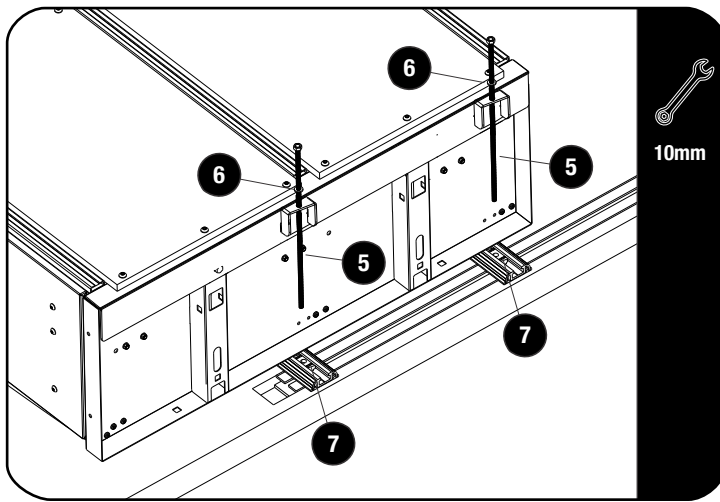

Before placing the drawer in the vehicle, ensure that the M6 Channel Nuts inserted in 2.4 are moved toward the outer ends of the tracks one on each side.



Place the drawer onto the tracks. Align the holes in the Side Mount Brackets with the M6 Channel nuts.

Secure the drawer to the tracks using the 6mm Treated Rods and M6 Nylon Washer and M6 Channel Nuts. (Items 5, 6 & 7) as shown.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

