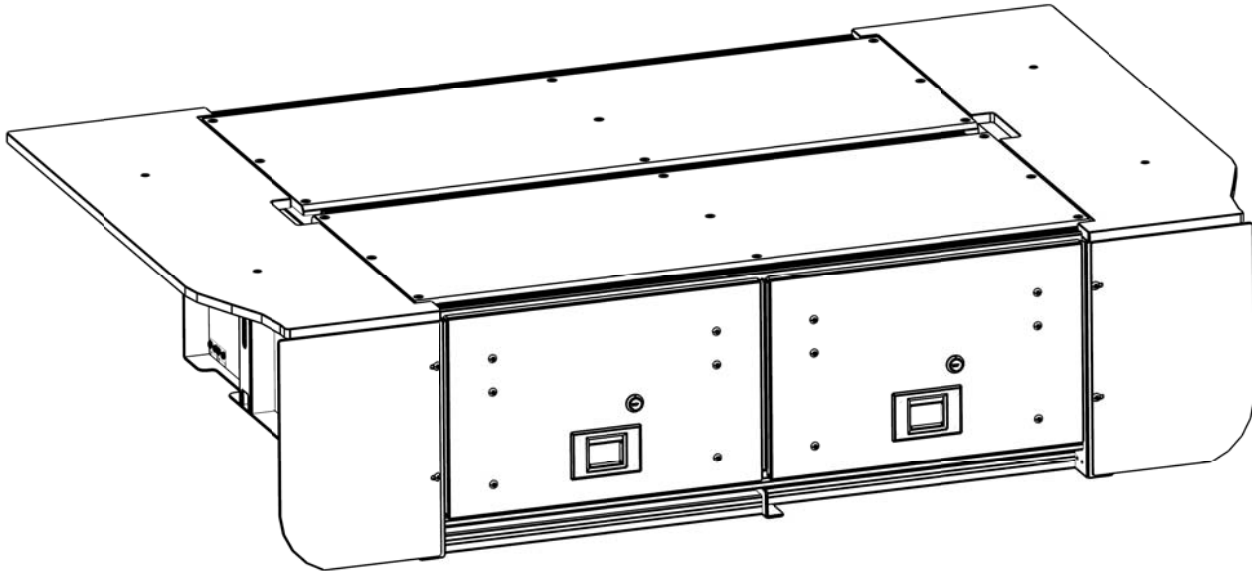


**INSTALL TIME: 30 mins**

Thank you for purchasing a Front Runner Storage System.

This Storage System is made up of the following components:

- 1. A Drawer System - SSDR005**
- 2. A Vehicle Specific Deck Set - SSDS103**

Before you start, take a moment to familiarize yourself with these Fitting Instructions and all the components received. Depending on the vehicle not all components received will be used. Refer to Page 2 for a list of all the components and quantities of required.


IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

1 GET ORGANIZED...


Here is what you are looking at for SSDR005:

Item #	Quantity	Description
1	1	DRAWER SYSTEM
2	4	SIDE SUPPORTS - 2 LEFT, 2 RIGHT
3	4	CARABINER
4	4	TURNBUCKLE
5	4	M6 WING NUT
6	8	M6 SPRING WASHER
7	8	M6 x 16 HEX BOLT
8	6	M6 EYE NUT
9	6	M6 STUD PLATE
10	6	M8 NYLON WASHER

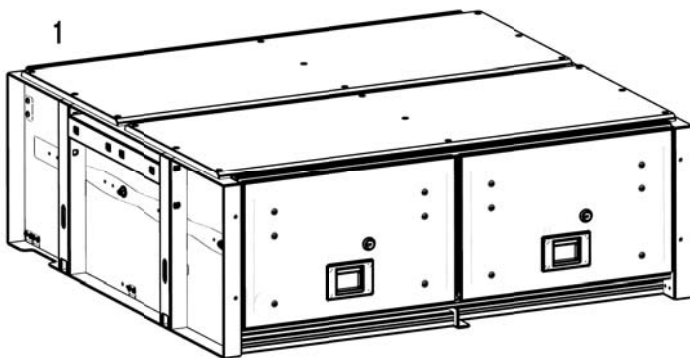



You will need:

- ☐ 8 mm Flat or Socket Wrench
- ☐ 10 mm Flat or Socket Wrench
- ☐ 12 mm Flat or Socket Wrench
- ☐ 13 mm Flat or Socket Wrench
- ☐ 3 mm Hex Key
- ☐ Measuring Tape

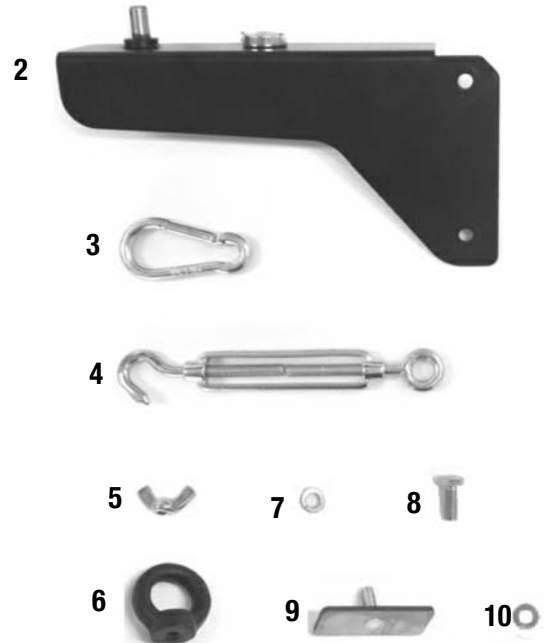


Here is what you are looking at for SSDS103:

Item #	Quantity	Description
11	2	LARGE C-HOOK
12	2	M10 D-RING
13	4	M5 x 12 BUTTON HEAD BOLT
14	4	M5 FLAT WASHER
15	4	M5 NYLOC NUT
16	2	SIDE DECK - 1 LEFT, 1 RIGHT
17	2	FRONT FACE - 1 LEFT, 1 RIGHT

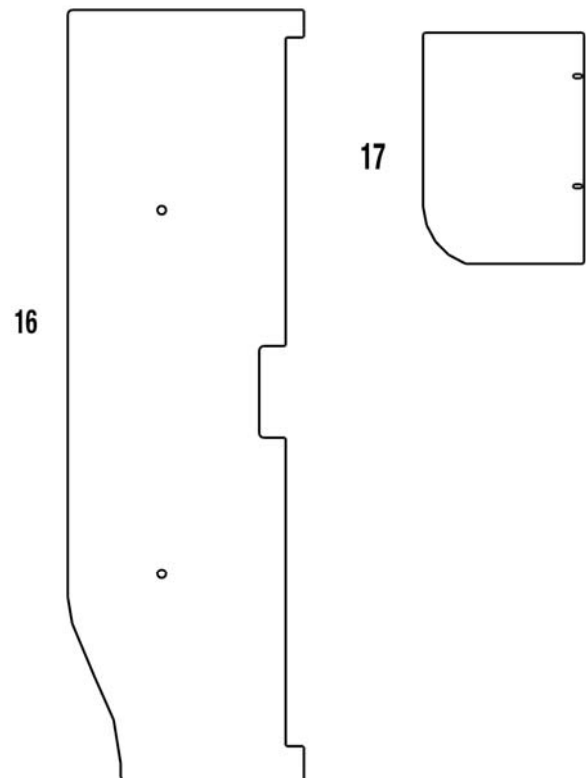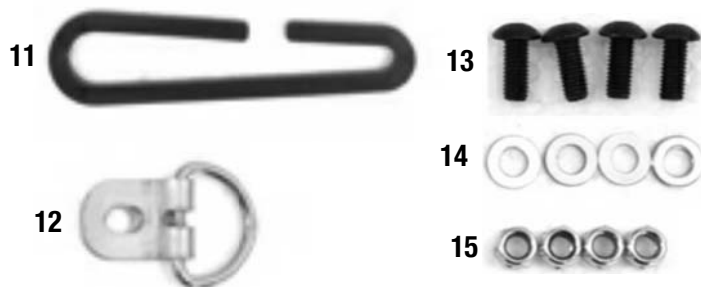


2 INSTALL DRAWER SYSTEM

- (A) The Drawer System can be fitted without removing the rear passenger seats. Should you wish to leave the seats in the vehicle, you will not be able to fit the Side Decks. Depending on the fitment chosen, remove the appropriate plastic covers as indicated below by gently pulling on them.

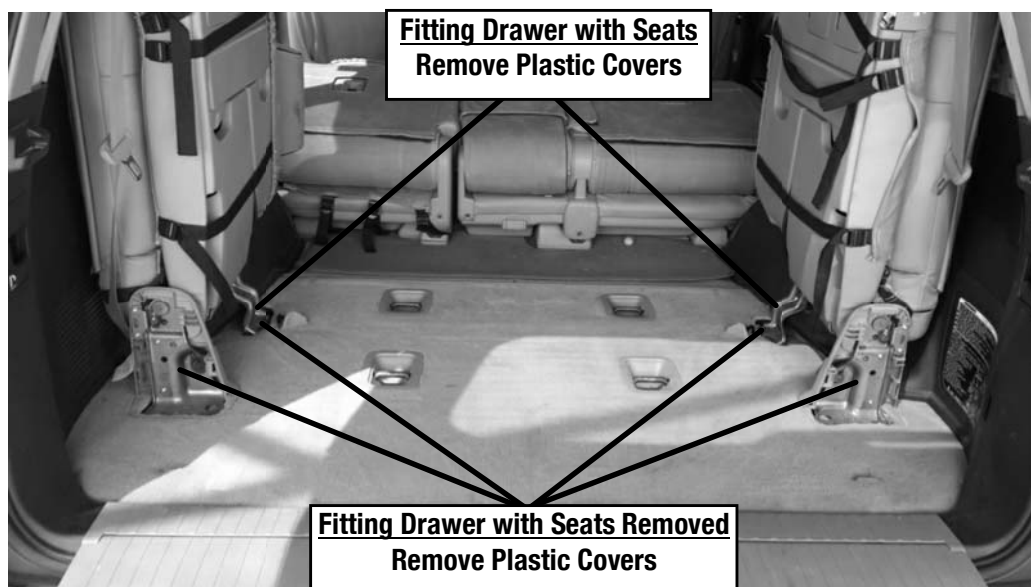


- (B) If you have chosen to remove the seats, refer to the left hand side of the image. Loosen and remove the four bolts securing each seat to the vehicle as indicated. Pull the seat release mechanism and remove the seats from the vehicle. Using one of the original bolts secure a M10 D-ring (Item 12) to the vehicle as shown.

If you have chosen to leave the seats in the vehicle, refer to the right hand side of the image. Remove the bolt either side as indicated and secure a M10 D-ring (Item 12) to the vehicle using the bolt just removed.

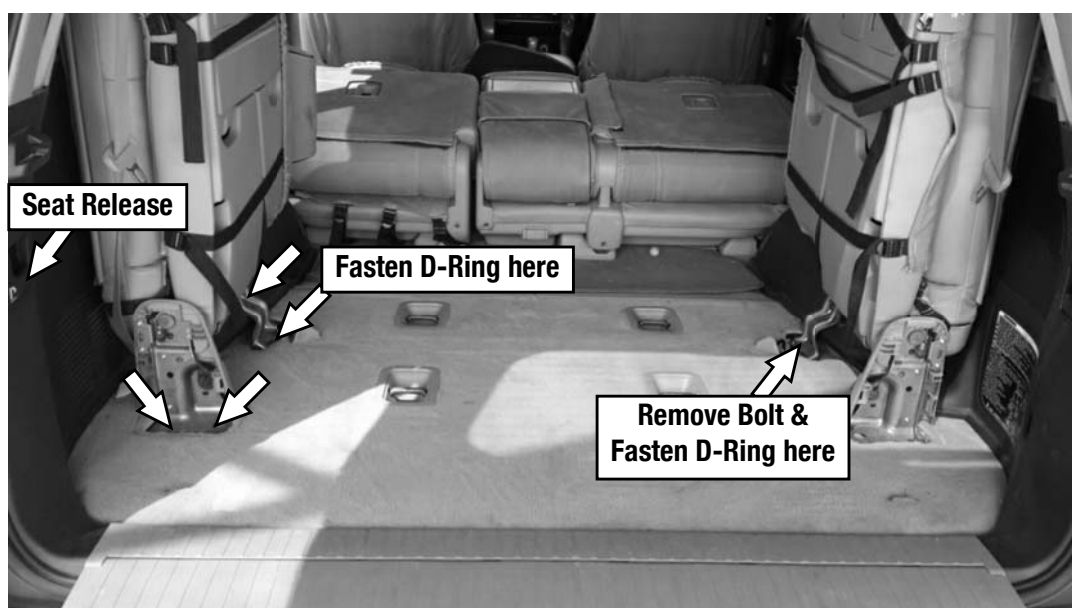


2 INSTALL DRAWER SYSTEM CONT...

- (C) Loosen the round end of the four Turn Buckles (Item 2) supplied with SSDR005 and assemble a M6 Wing Nut (Item 3) as shown. Reassemble the Turn Buckle.

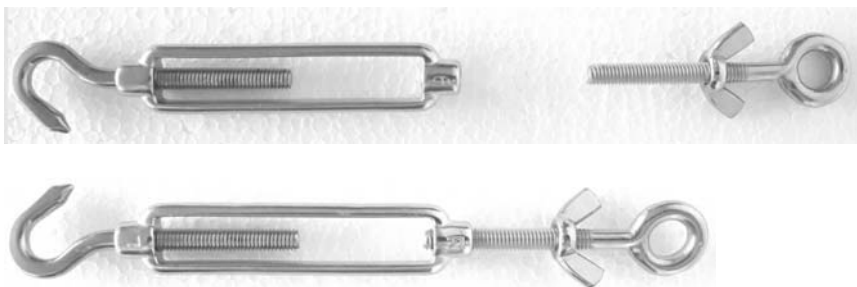

- (D) Looking at the side of the Drawer System, loosen and reposition the D-rings that come assembled to Drawer to the positions as shown.

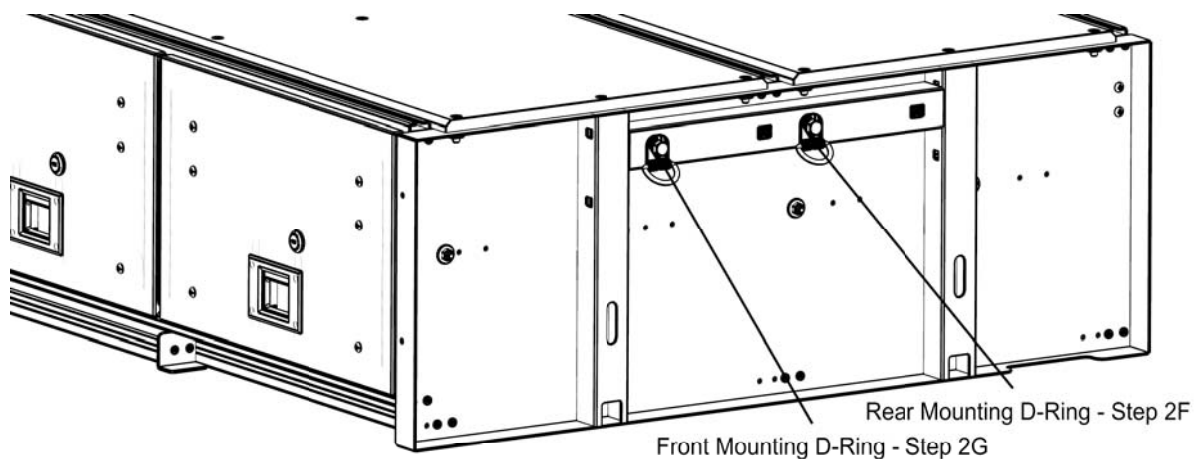


- (E) Place the Drawer System into the vehicle, lining up the front of the Drawer System with the edge of the plastic trim as shown. Center the Drawer System left to right.




2 INSTALL DRAWER SYSTEM CONT...

- (F) Assemble the four Side Supports (Item 2) to the Drawer System as shown using eight M6 x 16 Hex Bolts and eight M6 Spring Washers (Items 7 & 8).

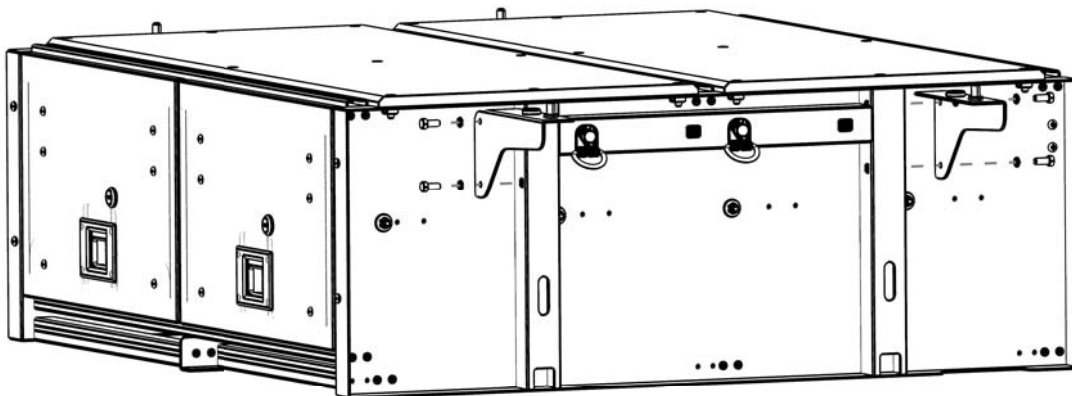

If you struggle to fit the Turnbuckles between the two mounting points in Steps 2G & 2H, unscrew one end of the Turnbuckle, hook it into position and screw the Turnbuckle back together.

- (G) Loosely secure the front of the Drawer to the vehicle's rear tie down rings using four Carabiners and two Turnbuckles (Items 3 & 4) as shown. Ensure that the Wing Nuts are at the top.

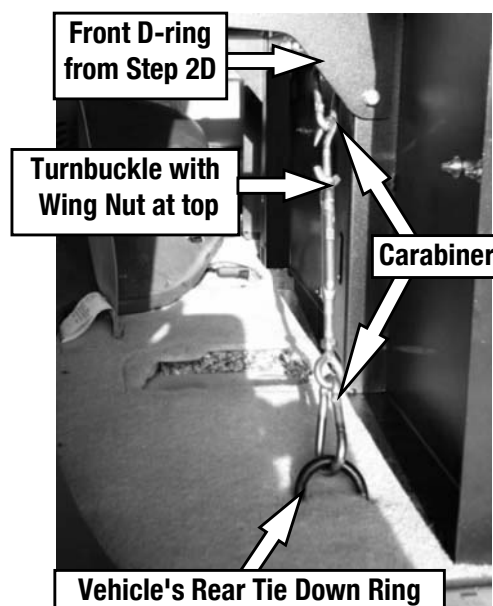

- (H) Loosely secure the rear of the Drawer System to the vehicle, using the two Large C-hooks and two Turnbuckles (Items 4 & 11).




2 INSTALL DRAWER SYSTEM CONT...

- (I) Tighten all the Turnbuckles making sure that the Drawer System remains centered left to right and in position against the edge of the plastic trim. Tighten the Wing Nuts and bolts securing the D-rings to the Drawer System.

- (J) If you have removed the seats to install the Drawer, assemble the two Front Faces (Item 17) to the side of the Drawer System using the four M5 x 12 Button Head Bolts, four M5 Flat Washers and four M5 Nyloc Nuts (Items 13, 14, 15).

Fit the Side Decks (Items 16) to the Drawer.

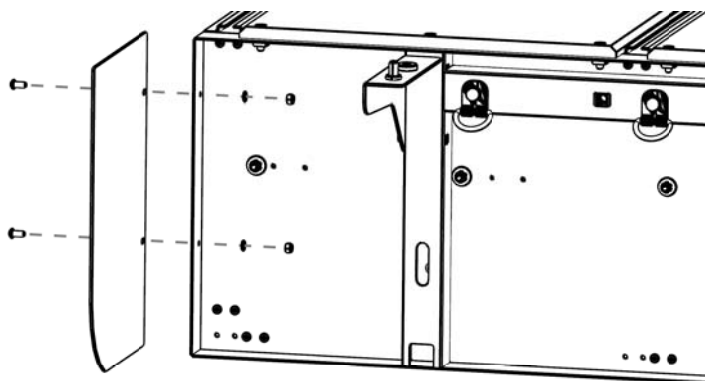

- (K) Congratulations, you have completed your installation. Take a Step back and admire your work. Good Job!

