




FRONT RUNNER
VEHICLE OUTFITTERS

CLICK TIGHT FRIDGE STRAPS

ENG

STRA056

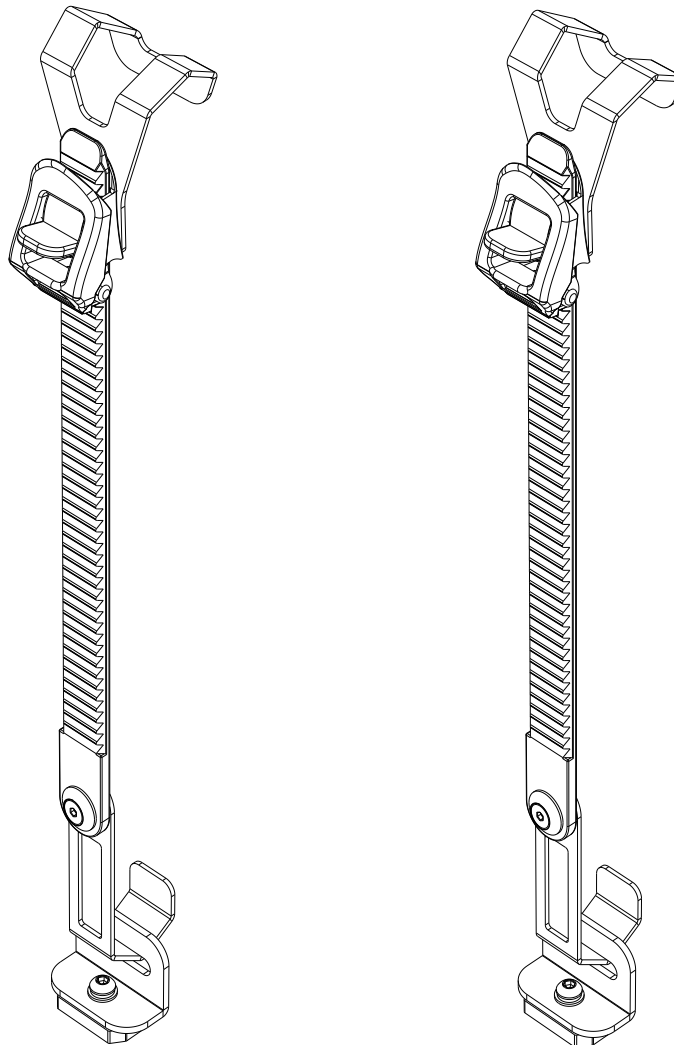

READ ME !

Thank you for purchasing Front Runner Click Tight Fridge Straps.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the components received.

Refer to Page 2 for a list of all the components, quantities and tools required.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.
Please call us if you have any questions about the installation of this product.

IMPORTANT WARNING!

FRONT RUNNER CAN NOT RECOMMEND A MAXIMUM LOAD CARRYING CAPACITY. PLEASE REFER TO YOUR VEHICLE MANUFACTURER'S RECOMMENDATIONS. IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE. CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1

GET ORGANIZED**IN THE BOX**

1	2 X	Click Tight Fridge Straps Assembly
2	2 X	Tie Down Bracket
3	2 X	M6 x 16 Button Head Bolt
4	2 X	M6 M6 SS Spring Washer
5	2 X	M6 x 12 x 1SS Flat Washer
6	2 X	M6 Channel Nut


TOOLS NEEDED

5mm

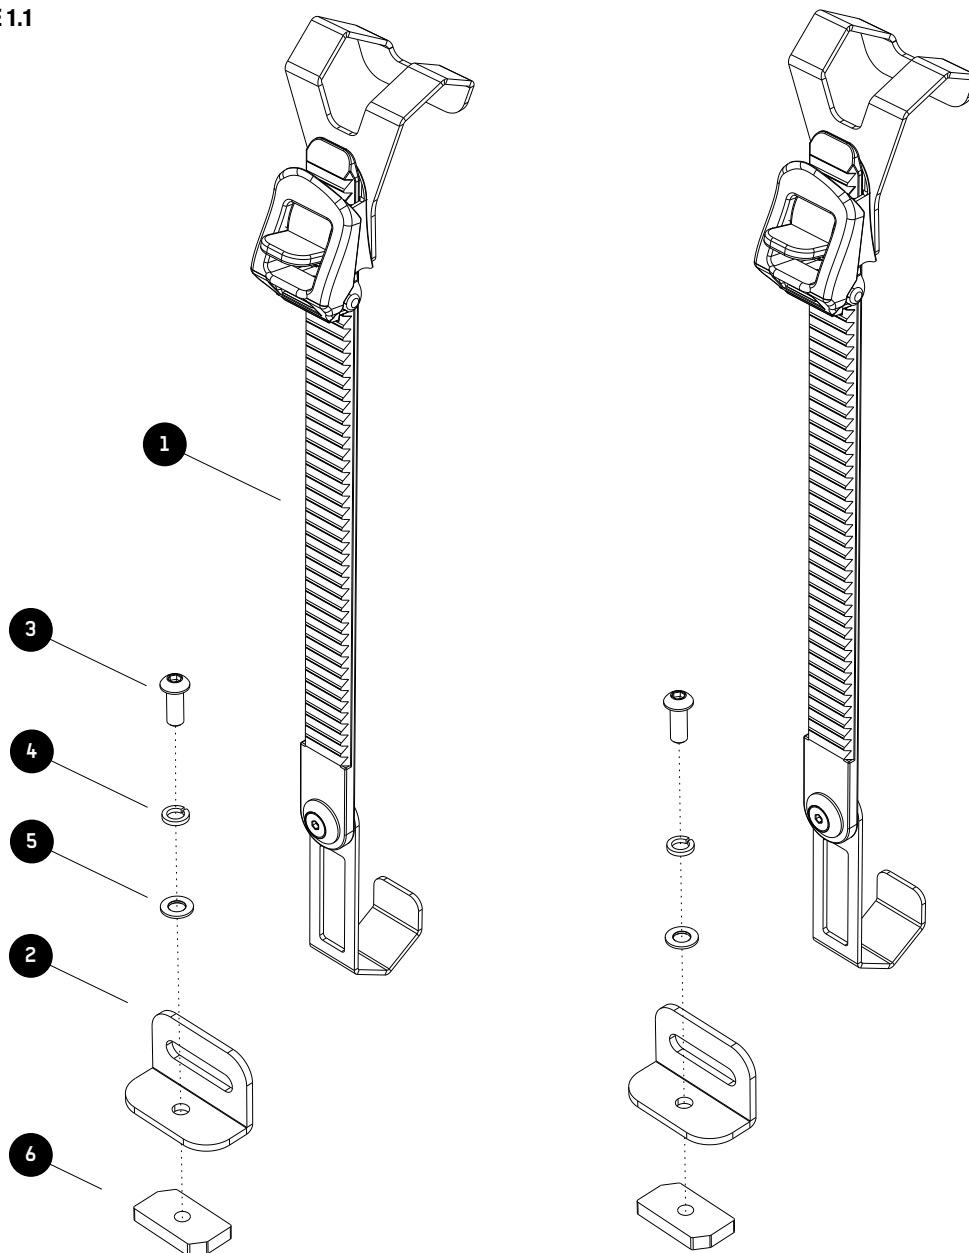FIGURE 1.1

Click Tight Fridge Straps With Fridge Slide

2.1

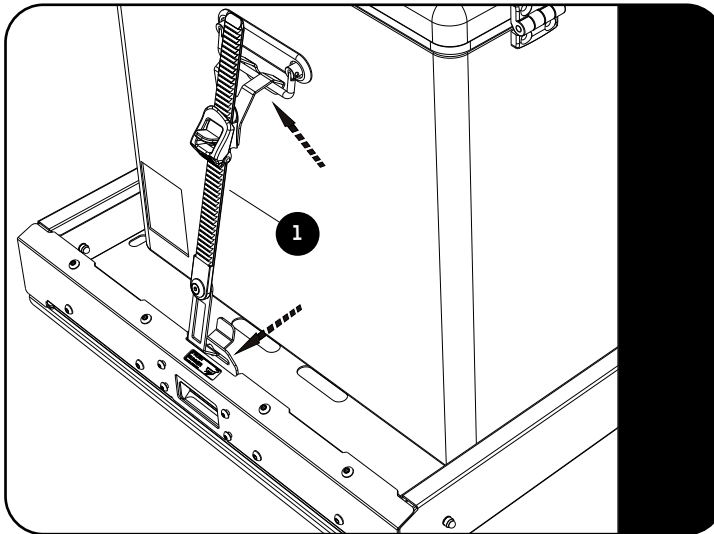


When using the Click Tight Fridge Straps with a Front Runner Fridge Slide, hook the small side onto the tie-down bracket of the fridge slide and hook the large hook over the handle of the fridge. Do the same at the rear of the fridge slide.

Ratchet to secure the fridge.

When removing the fridge, use the release button on the ratchet to release the strap.

Click Tight Fridge Straps With Drawer


2.2

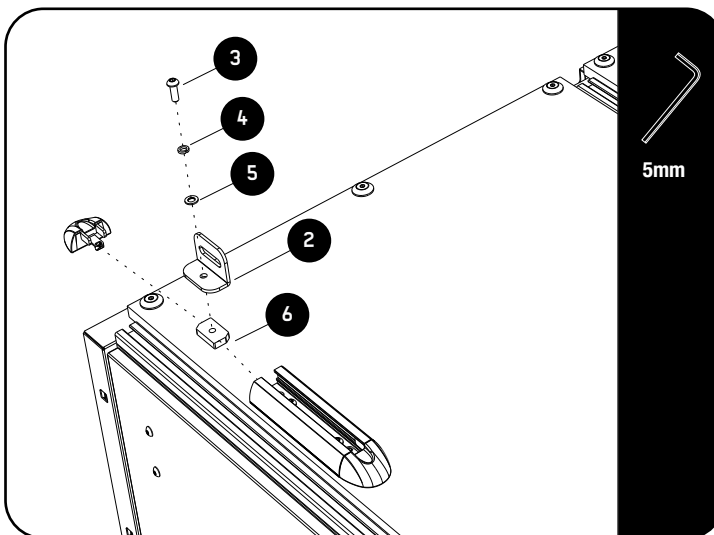

When using the Click Tight Fridge Straps with a drawer system you will need a Universal Track (TRCA008 not included). Follow the Fitment Guide.

After securing the track to the drawer, slide an M6 Channel Nut (Item 6) into the track. Secure the Tie-Down Bracket (Item 2) to the track using an M6 x 16 Button Head Bolt, M6 SS Spring Washer and M6 x 12 x 1SS Flat Washer.

2.3

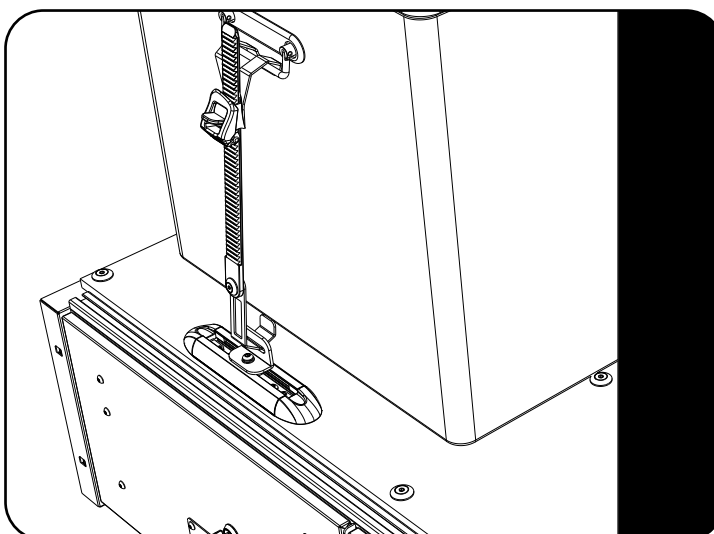


Hook the small side onto the Tie-Down Bracket and hook the large hook over the handle of the fridge. Do the same at the rear of the drawer.

Ratchet to secure the fridge.

When removing the fridge, use the release button on the ratchet to release the strap.

3

COMPLETION

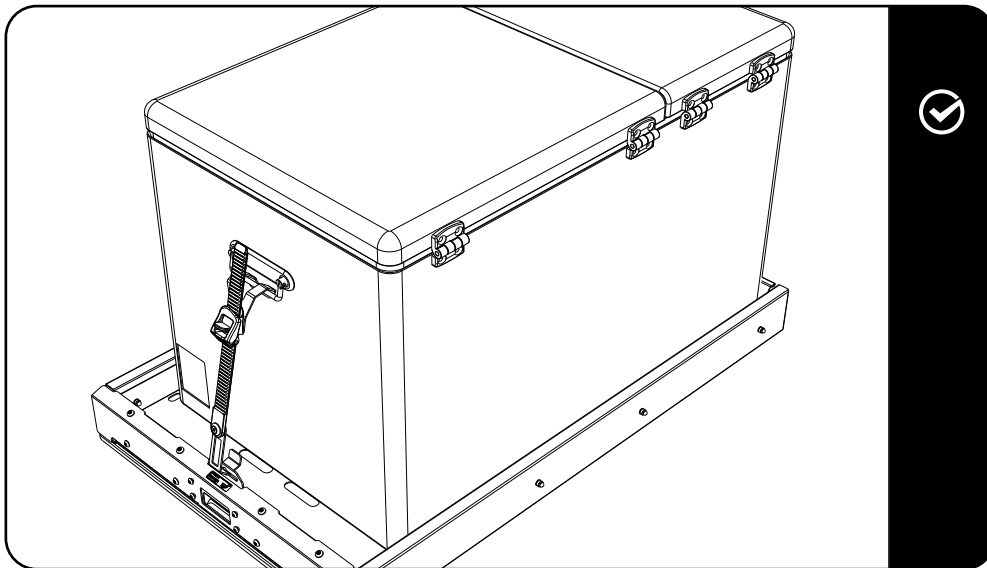3.1

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or Online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    