




INSTALL TIME: 45 Minutes

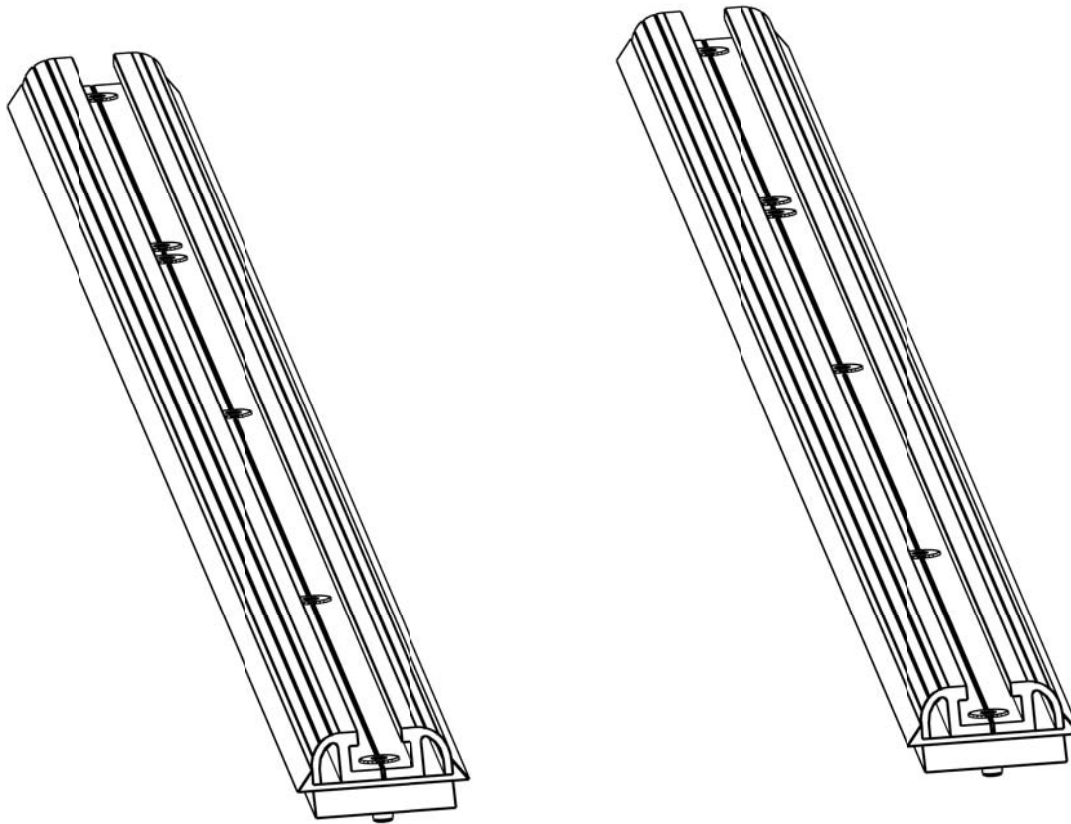

1 GET ORGANIZED

you will need:

- ☐ Jeep Grand Cherokee
- ☐ Flat screw driver
- ☐ 4 mm & 6 mm Allen key

...CONT'D

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.


1

GET ORGANISED

...CONT'D

Here is what you are looking at:

Item#	Quantity	Description
1	2	PLASTIC SPACER STRIP
2	2	RUBBER STRIP
3	2	TRACK
4	12	M6 x 20 COUNTERSUNK SCREW

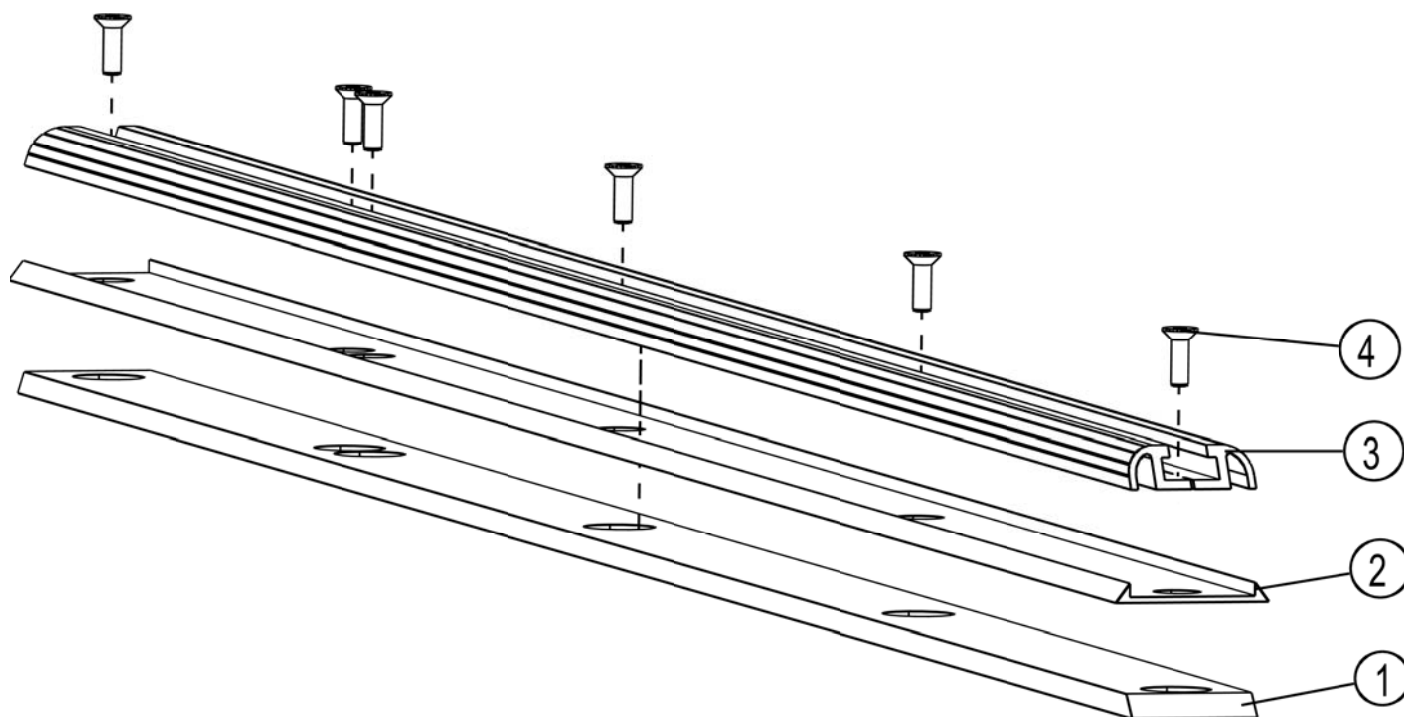**B)**

Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Grab a cup of coffee and take a moment. A little prep now may save you a lot of time later.

2

REMOVE ORIGINAL TRACK**A)**

Using a 6 mm allen key loosen the 5 bolts on the two original tracks.

**B)**


In the middle, using a flat screw driver remove the rivet, stainless steel track and the plastic skirting from the roof by sliding it backwards and then lift it off on both sides.



3 INSTALL TRACK Cont


A)

NOTE: Looking at the roof of the vehicle and the position of the original inserts. Take the plastic spacer strips provided, remove the double sided tape backing and place it on the rubber strips provided. Making sure the holes are aligned.

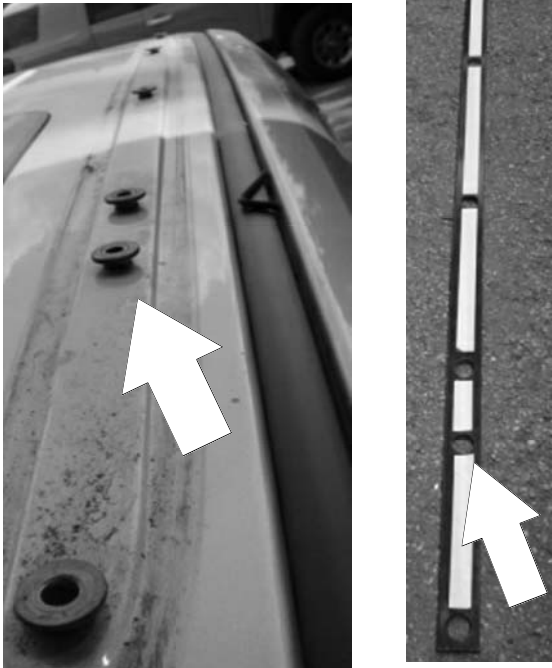

B)

With the plastic strips lined up, place the spacer rubber side down on the roof over the inserts. Making sure all the holes line up. Starting from the front of the vehicle by putting in the M6 x 20 Countersunk Screws and move towards the back of the vehicle. Using a 6mm allen key tighten all Screws.

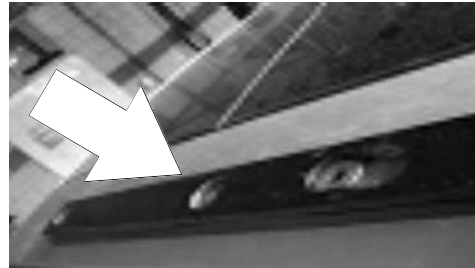

Congratulations, you have completed the track installation.

4

INSTALL YOUR RACK OR LOAD BARS.

See the specific install guides.

Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.

2012 Front Runner Outfitters, Inc.