

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

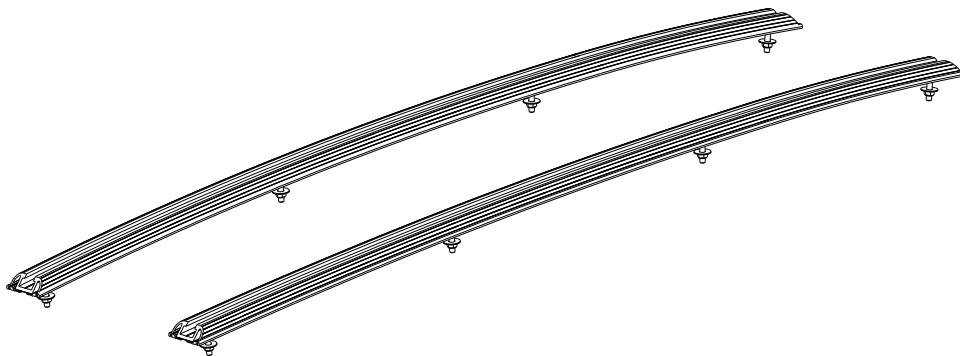

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	2 X	Track LH + Track RH
2	2 X	Rubber Strip - 1220mm
3	8 X	M6 x 30 CSK Socket Screw
4	8 X	M6 Large Flat Washer
5	8 X	M6 Nyloc Nut

TOOLS NEEDED



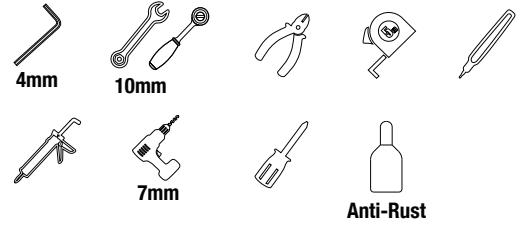


FIGURE 1.1

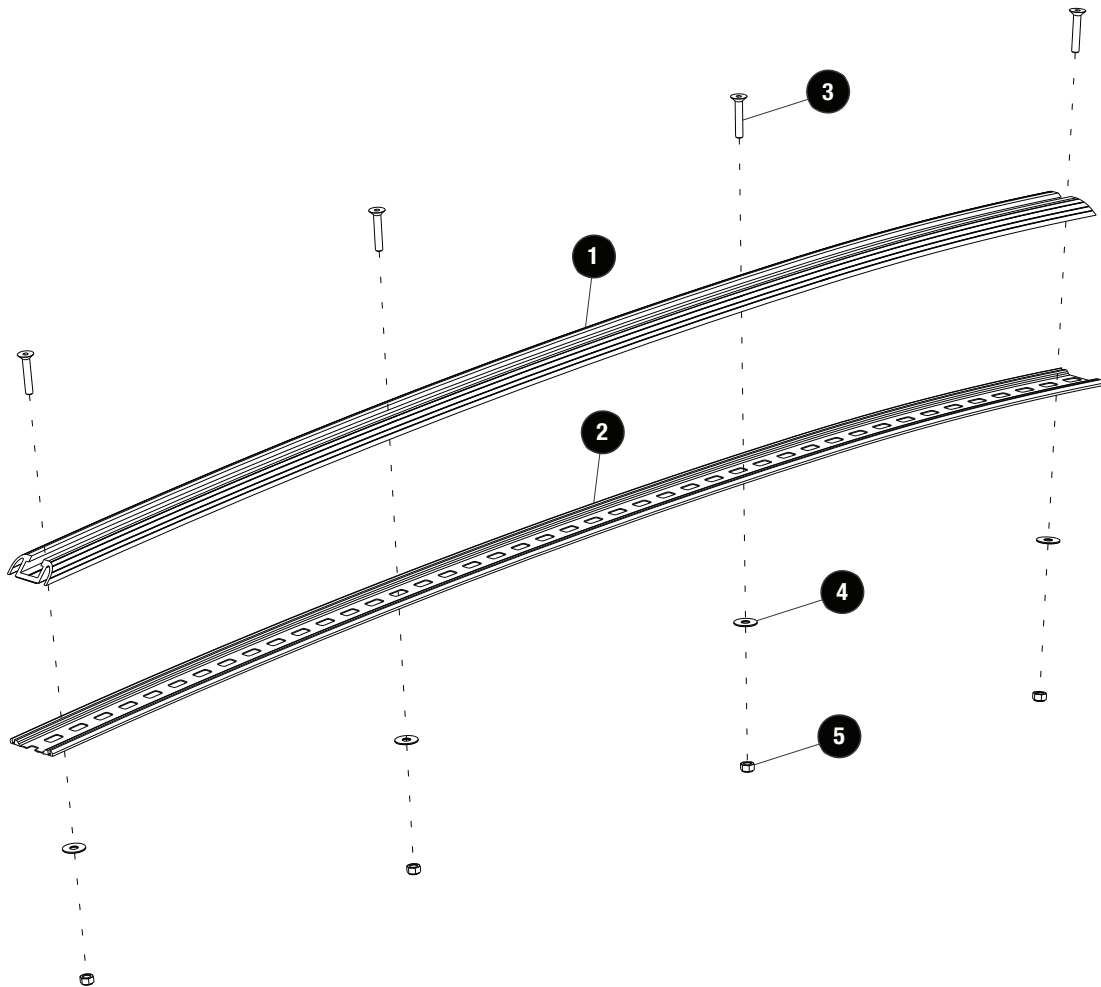

2.1

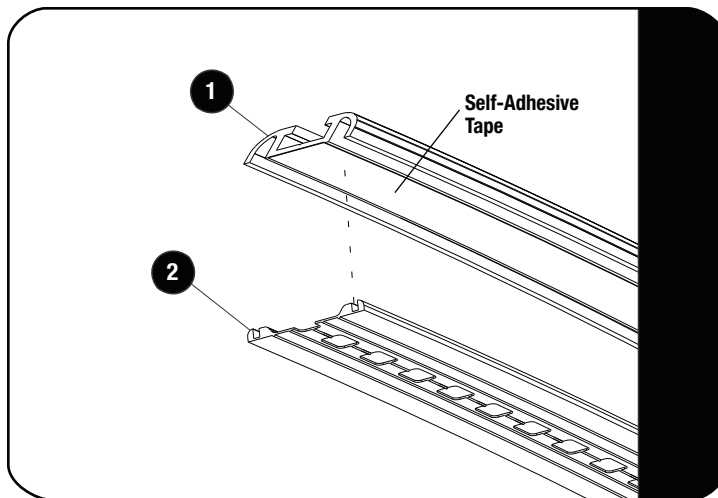

Remove the backing tape of the Self-Adhesive Tape on the bottom of the Tracks (Item 1) and secure the Rubber Strips (Item 2) to each Track.

2.2




Remove all fittings attached to the Roof Lining. Once all the fittings are removed, assist the lining to come down.

2.3



Place the LH and RH Track (Item 1) over the LH and RH ditch moulding. Align the rear of the Track with the rear roof trim as shown.

2.4

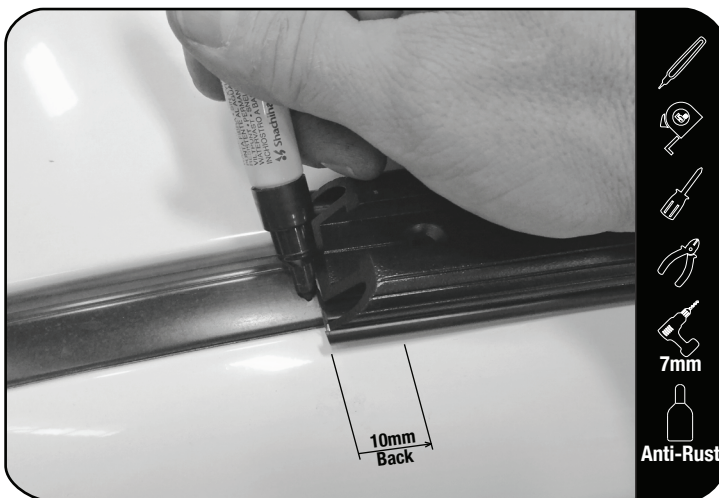

Mark the ditch moulding at the front of the LH and RH Track. Remove the track.

Measure and mark 10mm backwards from the initial mark made on the ditch moulding. Remove the ditch moulding.

Use a Side Cutter to cut the ditch moulding at the new mark.

Do this with the right hand ditch moulding.


Refit the the front cut piece of the moulding and replace and centralize each track as in 2.3.

Mark all the track holes on the roof and remove the tracks.

Drill a 7mm hole in the center of the markings.

Apply Anti-Rust to the exposed metal of each hole.

2.5

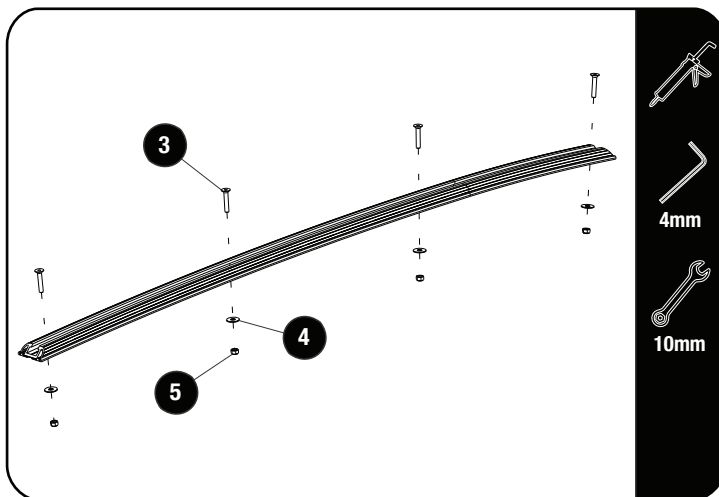

Apply a bead of silicone in and around each of the holes.

Refit the tracks.

Apply a bead of silicone on the threads of M6x30 CSK Socket Screws (Item 3) and secure the LH and RH Tracks to the roof with eight M6 Large Washers and eight M6 Nyloc Nuts (Item 4 & 5).

2.6



Position the roof lining back in place and refit all the fittings attaching through the roof lining.

3

FINISH

Congratulations! You did it. Take a step back and admire your work!

4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

