

START HERE!

READ ME FIRST

Don't be a hero and muscle through this installation without reading these fitting instructions first! Improper installation of this gear may void certain aspects of your warranty.


Before you begin, take a moment and open all your Front Runner rack kit boxes and gather the assembly instructions for the various components.

A complete kit will contain:

1. A Front Runner Mounting System specific to your vehicle
2. A Front Runner Rack Tray or Load Bar Slats

This document will guide you through the assembly of the mounting system and assist you in fitting the roof rack tray or load bars to your specific vehicle.

Please refer to the next page for a list of all the components, quantities and tools required.

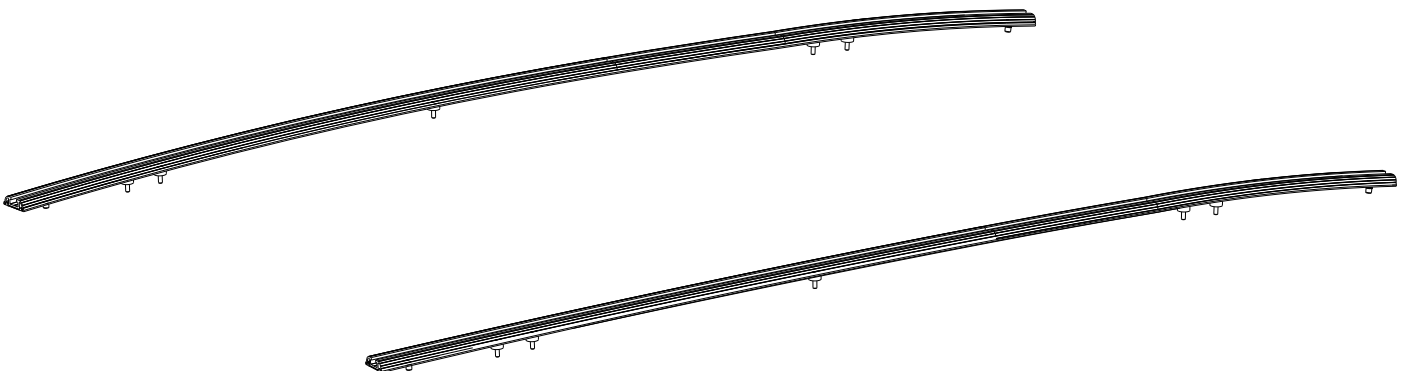

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1 GET ORGANIZED

IN THE BOX

1	2 X	Track - 1LH + 1RH
2	1 X	Track Rubber - 3700mm Long
3	10 X	M6 x 30 Countersink Screw
4	10 X	Spacer
5	4 X	M6 Riv Nut
6	4 X	M6 x 16 Countersink Screw

TOOLS NEEDED





FIGURE 1.1



2.1

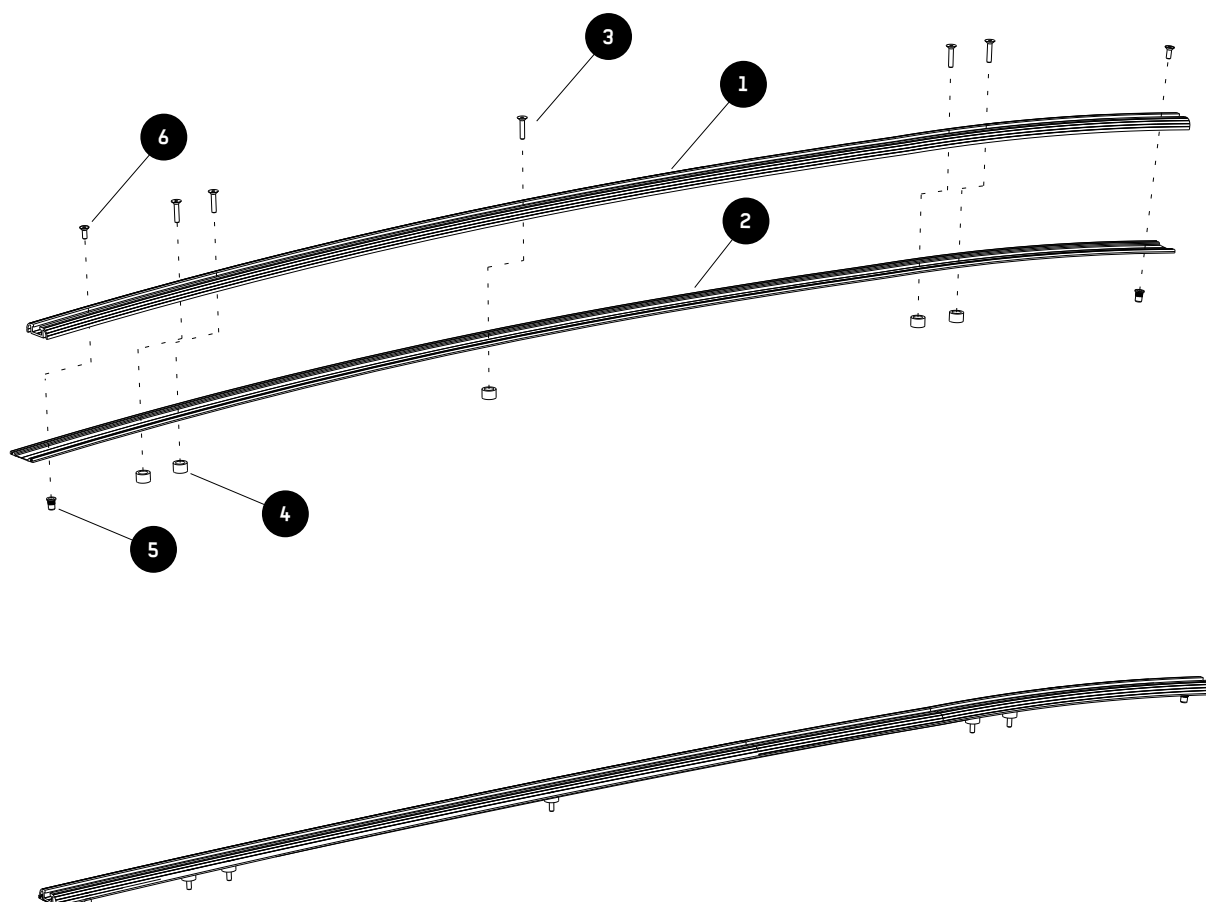

Looking at the original tracks, you will see five plastic clips on either-side. Using a panel tool or flat screw driver, unclip the clips.

Using a 10mm wrench, loosen the ten M6 bolts securing the tracks to the vehicles roof.

2.2



Using a panel tool or flat screw driver, unclip the original tracks in the front and rear of the vehicle and remove.

2.3



Looking at the roof, you will see four original brackets at the front and rear of the vehicle. Using a drill machine and a 9mm drill bit, drill each hole to 9mm.

On the drill bit measure 10mm from the tip and wrap some insulation tape around the drill bit. This will stop you from drilling too deep and damaging the roof.


9mm

2.4



Using a clinch nut tool, fit a M6 clinch nut to each hole drilled in 2.3.

2.5

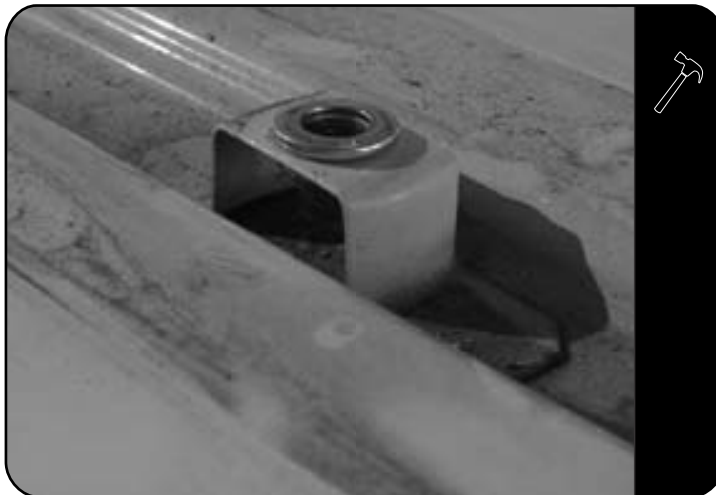

Using a small hammer, gently knock each clinch nut/bracket down so they are level with the roof channel.

The clinch nut/bracket only needs to be knocked down 1 to 2mm only.

2.6



Place some silicone into each of the original Threaded holes. Place an aluminum spacer (Item 3) on top of the silicone lining it up with the threaded hole.

The aluminum Tracks ship with the rubber seal loosely fitted in place. There are two quick steps to prep the seal and tracks. First, remove the paper to expose the glue. Then carefully centre the holes in the seal with the holes in the track and press the seal into place. Using your utility knife trim the rubber at the end of each track so it doesn't overhang.

2

FIT AND SECURE

2.7



Place the Tracks on the roof with the curved side to the front of the vehicle lining up the holes in the track with the threaded holes in the roof. Insert a M6 x 16 Countersunk Bolt (Item 5) in the hole at the back of the vehicle. On the next five holes insert M6 x 30 Countersunk Bolts (Item 4) for the last hole in the front of the vehicle, insert a M6 x 16 Countersunk Bolt. Tighten all bolts using a 4mm allen key.

3

COMPLETION

3.1

Congratulations! You did it. Take a step back and admire your work!



4

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

IMPORTANT!

FRONT RUNNER RACK KITS OFTEN HAVE A HIGHER LOAD RATING THAN THE VEHICLES THEY ARE MOUNTED TO. PLEASE REFER TO YOUR SPECIFIC VEHICLE MANUFACTURER FOR A RECOMMENDED ROOF RATING. FRONT RUNNER CANNOT BE RESPONSIBLE FOR IMPROPER LOADING BEYOND THE VEHICLE MANUFACTURER'S STATED LOAD CAPACITY.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:    