



FRONT RUNNER

**TOYOTA PRADO 120
TRACKS - 1600 MM**

ENG

TRTP001



INSTALL TIME: 1 Hour



IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.


1 GET ORGANIZED...

Here is what you are looking at:

Item #	Quantity	Description
1	12	M8 x 50 COUNTERSUNK BOLT
2	2	ROOF TRACK
3	2	TRACK LINER
4	12	SPACER

You will need:




- ☐ 10 mm Flat or Socket Wrench
- ☐ 12 mm Flat or Socket Wrench
- ☐ 5 mm Hey Key
- ☐ Rag and Methylated Spirits / Denatured Alcohol
- ☐ tube of silicone
- ☐ Panel Tool or Flat Screw Driver

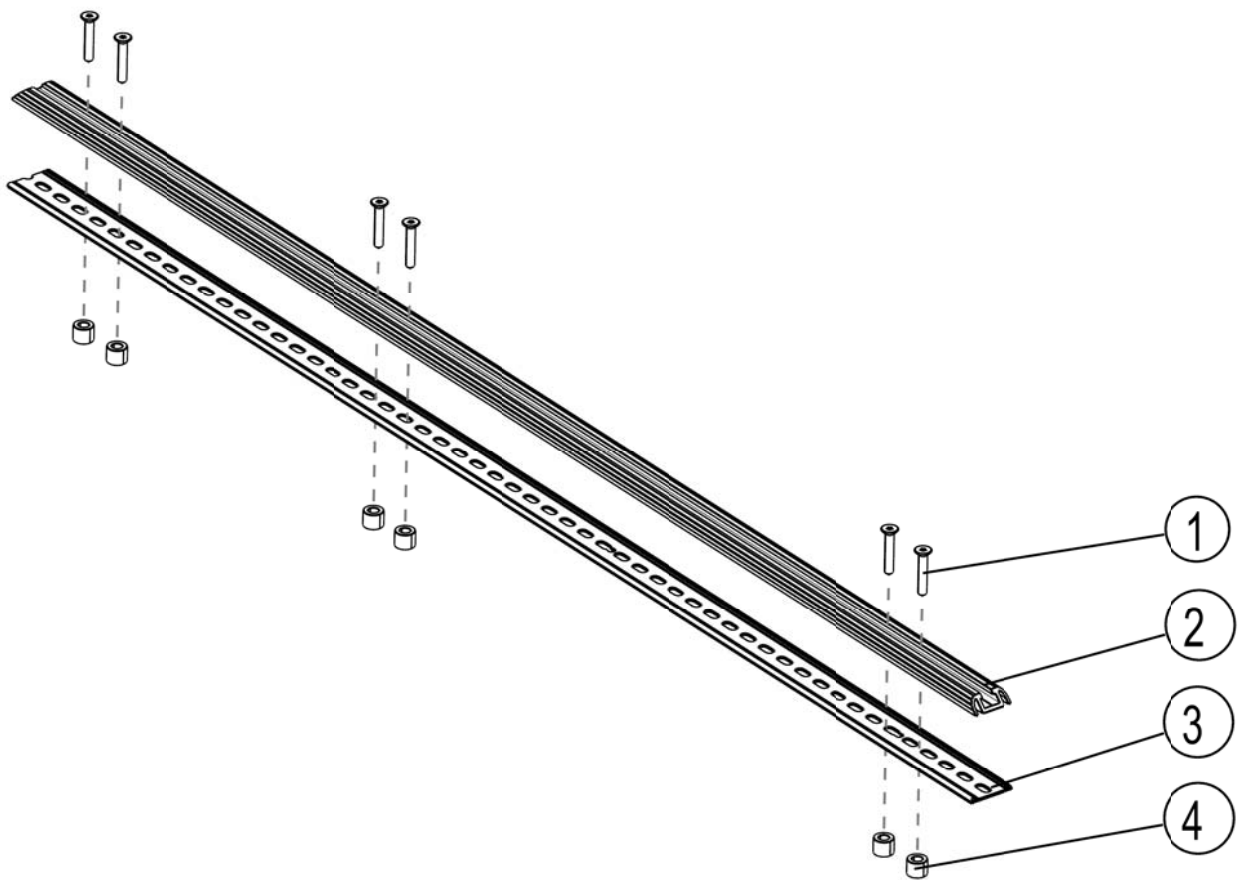


- (A) Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Take a moment as little prep now may save you a lot of time later.

2 REMOVE ORIGINAL RAILS

- (A) Using a panel tool or flat screw driver, remove the plastic covers (front, middle & rear) from the original roof rail. Loosen the five bolts (as indicated by the arrows) and remove the roof rail from the vehicle.

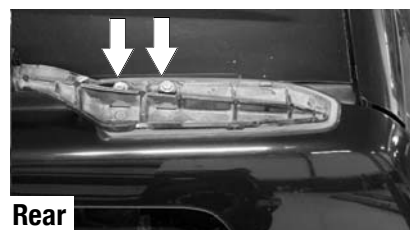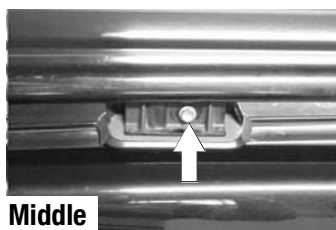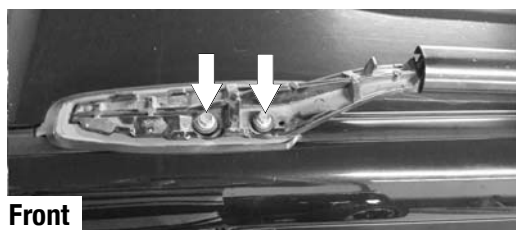


- (B) Looking at the middle mounting after removing the roof rails, you will see that a mounting bracket has remained behind. Loosen the two bolts as indicated by the arrows and remove the bracket

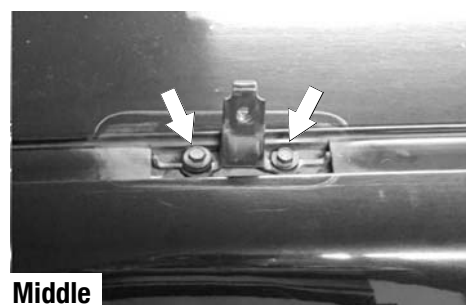

3 INSTALL TRACKS


- (A) The Tracks (Item 2) ship with the Rubber Track Liner (Item 3) loosely fitted in place. There are two quick steps to prep the Track Liners and Tracks. First, remove the paper to expose the glue. Then carefully center the holes in the Liner with the holes in the Track and press the Liner into place. Using your utility knife trim the Liner at the end of each Track so it doesn't overhang.

- (B) Clean the area around each of the threaded mounting points in the vehicle's roof using a rag and some methylated spirits / denatured alcohol. Apply a small amount of silicone over each of the mounting points. Place a Spacer (Item 4) over each mounting point, lining up the hole in the spacer with the mounting point.

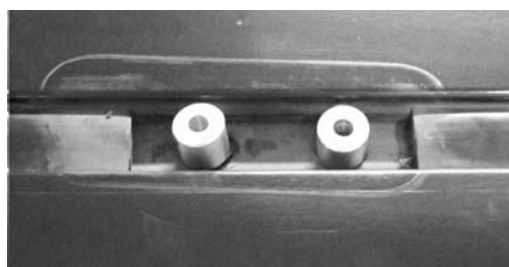

3 INSTALL TRACKS CONT...

- (C) Place the Tracks onto the vehicle, lining up the holes in the Track with the holes in the Spacers. The curve in the Track goes towards the front and outside of the vehicle. Starting from the rear of the vehicle, secure the Tracks to the vehicle's roof using the M8 x 50 Countersunk Bolts (Item 1) supplied.

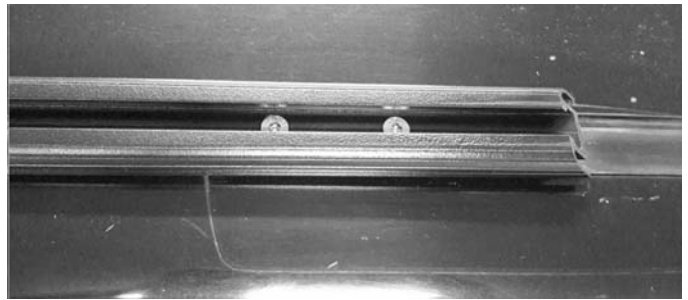

- (D) Congratulations, you have completed your installation. Take a step back and admire your work. Good Job!



4 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

- (A) Now's the time to visit your favorite Front Runner dealer in person or online.