


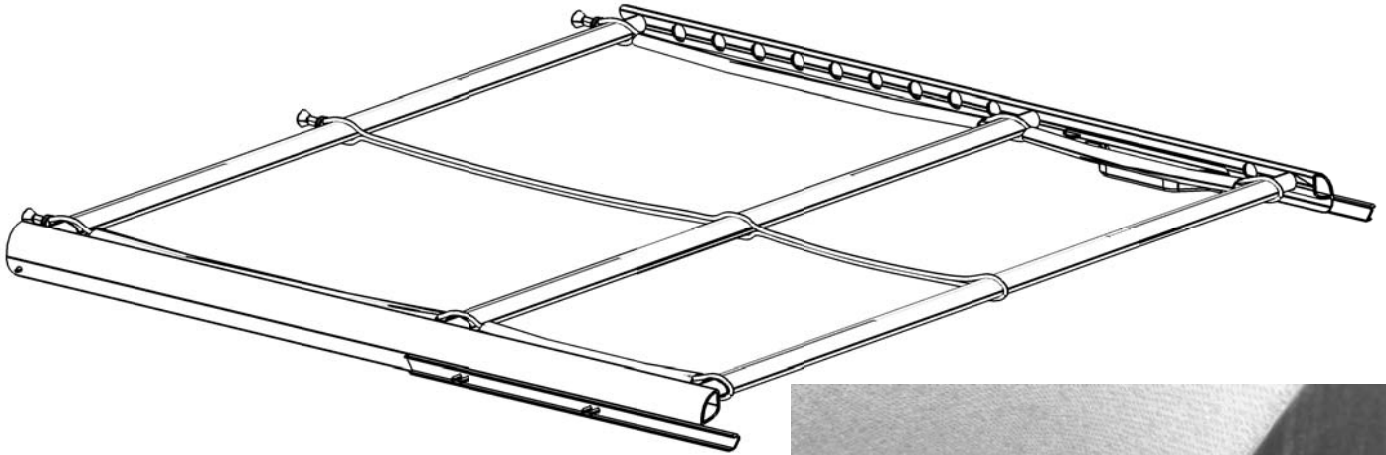

•HINT• *Please consult
FRONTRUNNEROUTFITTERS.COM should
you have any queries.*

INSTALL TIME: 0.5 hours



NOTE!!

*This is ONLY for G-wagon
types 461, 463 up to 2010
and 461 Professional.*

1 GET ORGANIZED

you will need:

- ☐ a 4-door Gelaendewagen 461 or 463
- ☐ a screw driver (flat)
- ☐ a screw driver (philips)
- ☐ a drill with a 4 mm bit
- ☐ a 8 mm wrench

...CONT'D

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.


1

GET ORGANISED


...CONT'D

Here is what you are looking at:

Auto #	Quantity	DESCRIPTION
1	1	NET
2	3	NET POLE
3	1	BRACKET- LHS
4	1	BRACKET- RHS
5	1	BRACKET SPACER- RHS
6	1	BRACKET SPACER- LHS
7	2	HANDLE (FROM VEHICLE)
8	8	SCREW- 4.8 x 40 mm LG
9	2	SCREW- SELF TAPPING x 25 mm LG

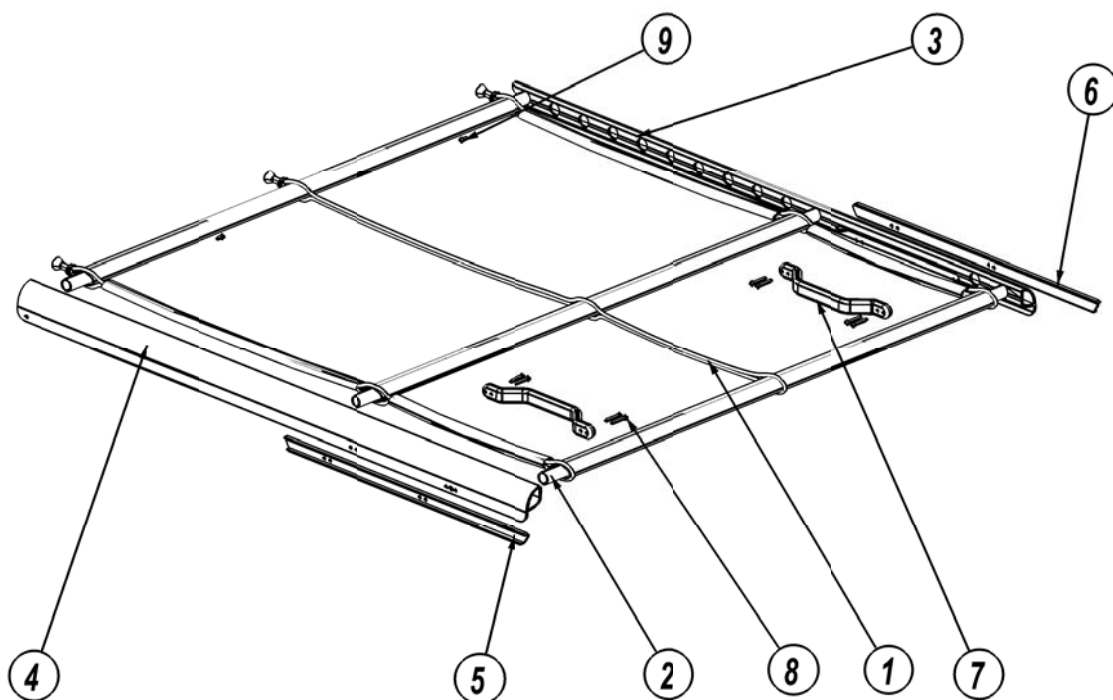

Packed separately- 2 Nylon ties and fasteners

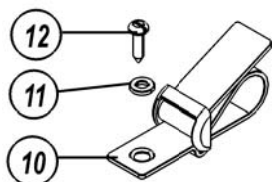

Auto #	Quantity	DESCRIPTION
10	2	NYLON TIE
11	2	WASHER
12	2	SCREW- 4.8 x 16 mm LG

A)


Familiarize yourself with the parts and then step away from the work area and read through these instructions from beginning to end. Grab a cup of coffee and take a moment. A little prep now may save you a lot of time later

2

PREPARE THE NET


A)

Unpack the net and slide the 3 telescopic poles into the sleeves within the net. Make sure the elastic cord goes around each telescopic pole.

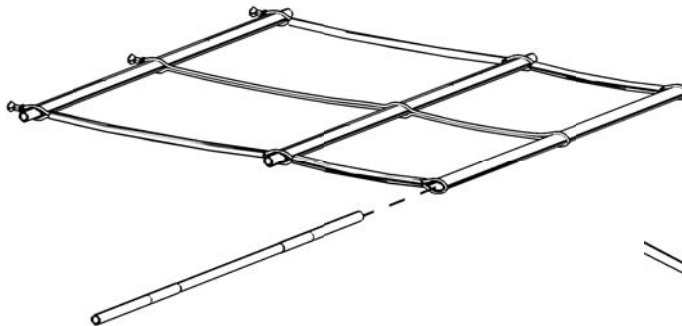

B)

The smaller compartment is orientated towards the front of the vehicle.

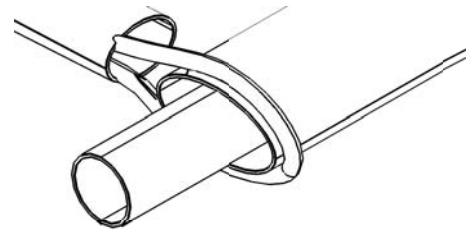


3

INSTALL THE NET BRACKETS

NOTE: If you have a 461 Gelaendewagen, you will **NOT** need to use the supplied spacer parts and you **WILL** re-use the 4 grab handle screws securing the handle. If however, you have a 463, you **WILL** require the spacer parts and please use the supplied screws when re-installing the grab handle.

A)

Remove the rear grab handles by unscrewing the 4 screws holding the handles on. There are 4 cylindrical spacers between the handle and the vehicle body. If they come off, don't lose them as you will need them when re-installing.

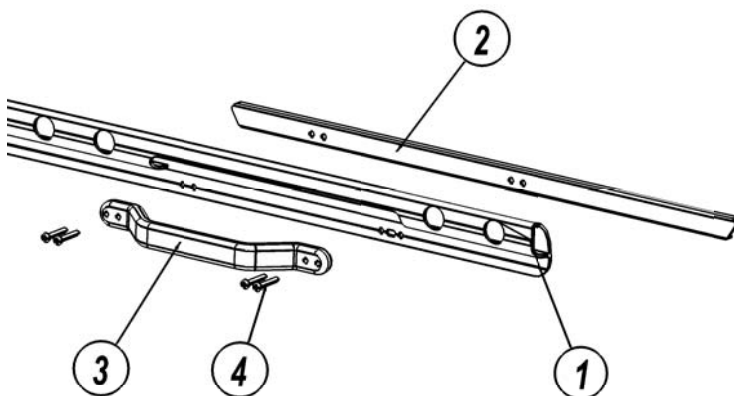

B)

Place the left hand side spacer against the left hand side net bracket, making sure to align the rear holes of the bracket with the rear holes of the spacer. Align the handle to the holes and screw the handle with the bracket back on to the vehicle. Make sure the original cylindrical spacers are in position. Similarly for the right hand side. **IMPORTANT!! Remember to use the existing screws and no spacers if you have a 461.**

C)

IMPORTANT!! Step continued on next page.

Auto #	Quantity	DESCRIPTION
1	1	NET BRACKET- LHS
2	1	SPACER- LHS
3	2	GRAB HANDLE
4	8	SCREW- 4.8 x 40 mm
5	2	SCREW- SELF TAPPING x 25 mm


....CONT'D

3**INSTALL THE NET BRACKETS**

...CONT'D


C)

IMPORTANT!! Make sure the groove (indicated by the arrow) lines up with the join between side panel and roof panel. You are drilling into a narrow area of metal here, rather err higher than lower.

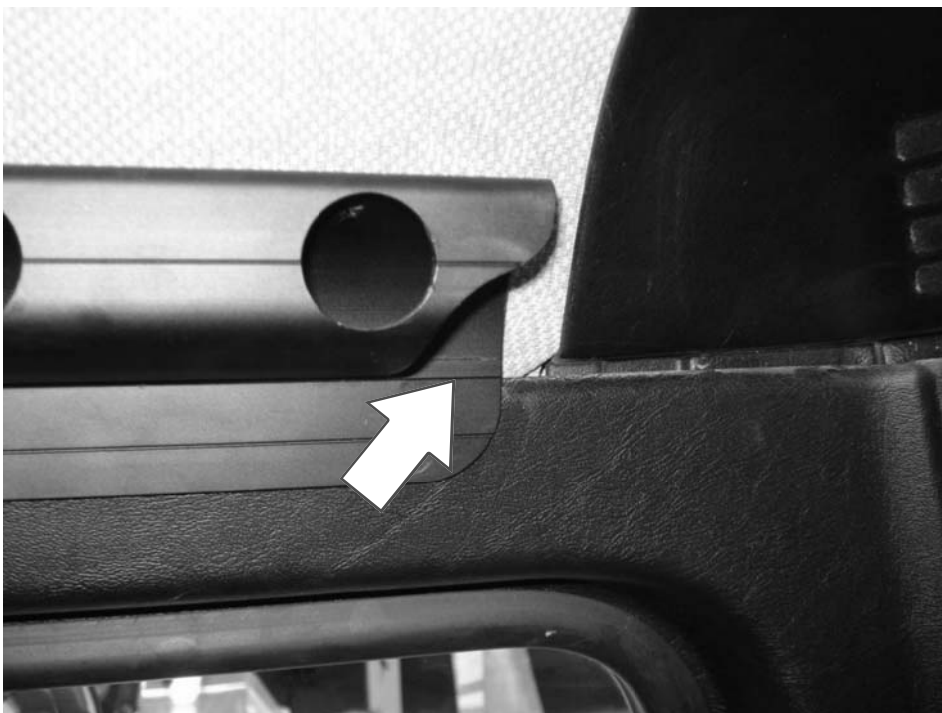

D)

Using the slot at the rear of the bracket as a guide, Grab the drill and drill a 4 mm pilot hole for Item 5 to screw into.

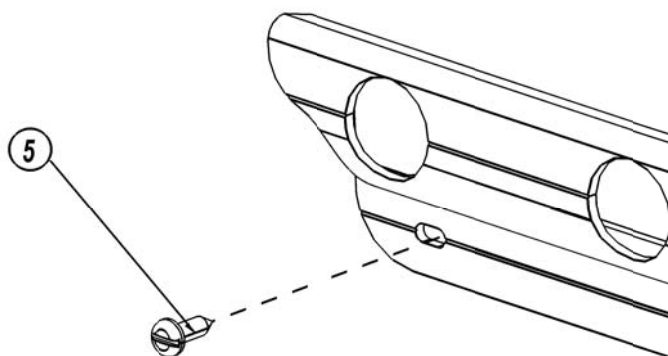

4

INSTALL THE NET

A)

Install the net by placing the telescopic poles in net bracket holes 1, 3 and 13, counting from the front. The small partition of the net is towards the front of the vehicle. Compress the poles and place them into the opposite net bracket hole. Variations in net tautness can be achieved by using different combinations of the net bracket holes.

B)

Pull the elastic chords through the net toggles in order to get more tension on the net.



C)

The net has eyelets on it to secure it to the net bracket. This prevents the net sagging to the middle.



5

ADDITIONAL USES

The Gelaendewagen Storage Net can also be used as a safety net to prevent objects stored in the rear of the vehicle coming through into the cabin area under severe braking or particularly rough roads. To this end all Gelaendewagen Storage Net Kits come with two Nylon straps and the necessary fasteners.

A)

If you have a 463, undo the screws shown in the image. Take the Nylon strap and fasten it using the existing screw and the supplied washer. You will **NOT** use the supplied screws.



B)

Reverse the direction of the net from your standard install method so that the small compartment is at the back. Counting from the back, insert the net telescopic poles in holes 1 and 8. The last telescopic pole will be fastened down using the Nylon straps. You can adjust the tension on the net by adjusting the straps or selecting other holes in the net bracket.



LHS STRAP



RHS STRAP

5

ADDITIONAL USES

...CONT'D

C)

If you have a 461 Gelaendewagen then you will need to drill 2 holes in the rear bench seat as there are no existing mounting points for the Nylon straps.

D)

The holes are to be made at a height that is equal to the level of the wheelarches. Measure 50 mm from either side of the bench. Drill a 4 mm hole in these positions. Attach the Nylon straps with the supplied self tapping screw and washer.

E)

Reverse the direction of the net from your standard install method so that the small compartment is at the back. Counting from the back, insert the net telescopic poles in holes 1 and 8. The last telescopic pole will be fastened down using the Nylon straps. You can adjust the tension on the net by adjusting the straps or selecting other holes in the net bracket.



6

CHECK FOR OTHER COOL ACCESSORIES

Now's the time to take a trip to your dealer or visit www.FRONTRUNNEROUTFITTERS.COM

7

TAKE A TRIP

A)

After your first adventure, check the tension on all the bolts and screws and re-tighten where needed. You'll find a small amount of settling has happened.

B)

Go on many more adventures. Periodically check the screws- it's always wise to double check your fasteners once in a while.

→ Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.

8

IMAGES

A)

The net should be packed with light things. In the image it is packed with a sleeping bag, down jacket, umbrella, hat, cushion and a pressure gauge as an example.

