



**USE THIS KIT FOR G-WAGEN MODEL
W463 MY2002 to MY2011**

INSTALL TIME: 30 minutes

1 GET ORGANIZED



The W463 Adapter Kit includes:

- 2x mounting plates
- 4x M6 flat washers

9

To install you will need:

- ☐ The G-Wagen Net Kit
- ☐ Measuring tape
- ☐ Small flat head screwdriver
- ☐ Drill with a 1/4" bit
- ☐ 1/4" ratchet tool with:
- ☐ 8mm socket
- ☐ T-25 Torx Bit



IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER RACKS AND ACCESSORIES BE PROPERLY AND SECURELY ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH TO YOU OR TO OTHERS. YOU ARE RESPONSIBLE FOR SECURING THE RACKS AND ACCESSORIES TO YOUR CAR, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR, AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER SUCH AS A QUALIFIED GARAGE OR AUTO BODY SHOP.

➡ Modifying your vehicle involves some risks and may void certain aspects of your vehicle's warranty.

2 PREP INTERIOR

A) REMOVE THE REAR LEFT AND RIGHT GRAB HANDLES

- Lift up both end trim pieces with flat head screwdriver to reveal hex head screws
- Unscrew the 4 hex head screws on each handle using 8mm socket
- Remove the grab handles



B) REMOVE ALL 4 OEM PARTITION BRACKETS

- Use the T-25 Torx bit to unscrew the M6 x 12mm bolts
- Keep the four M6 x 12mm bolts for later re-use
- The OEM partition brackets will not be used again

3 INSTALL ADAPTER TABS

A) POSITION ADAPTER PLATES IN REAR OEM PARTITION LOCATIONS (LEFT AND RIGHT)

- Use the original M6 x 12mm Torx head bolt through the un-threaded hole of the plate
- Add two M6 flat washers on the back of the plate, to compensate for headliner thickness
- Fasten adapter plate into the rear OEM bracket location, pointed straight down




4

PREP BRACKETS FOR MOUNTING


A) MEASURE

On each bracket, measure 415mm (16-3/8") from the rearward grab handle mounting hole toward the rear of the bracket

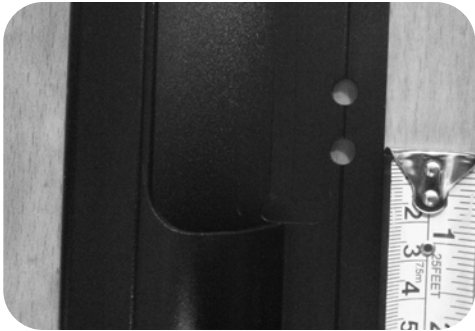

B) MARK

Mark the 415mm (16 3/8") dimension in line with the existing mounting holes of the mounting bracket.

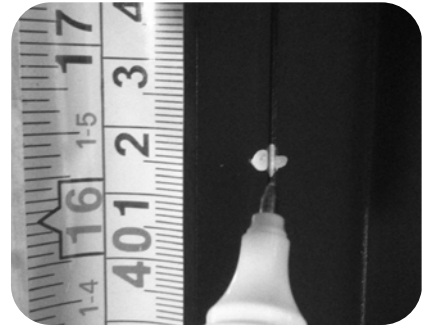

C) DRILL

Drill a 6 – 7mm (1/4") hole into each bracket at the marked location.



5

MOUNT BRACKETS

A) MOUNT BRACKET TO PLATE



Use a M6 x 16mm Torx head bolt to fasten the bracket loosely to the adapter plate using the threaded hole.

B) RE-ATTACH GRAB HANDLES

Align the bracket with the grab handle holes and fasten the handle together with the mounting bracket using the existing hex head screws. With the 8mm socket attach the brackets and grab handles to the vehicle.

C) ADJUST AND TIGHTEN

Adjust the mounting bracket position if needed and tighten all the fasteners.

Press the end trims of the grab handles back into position.

