
FRONT RUNNER

SUZUKI JIMNY 5 DR
REAR CARGO SHELF

ENG

VACC157

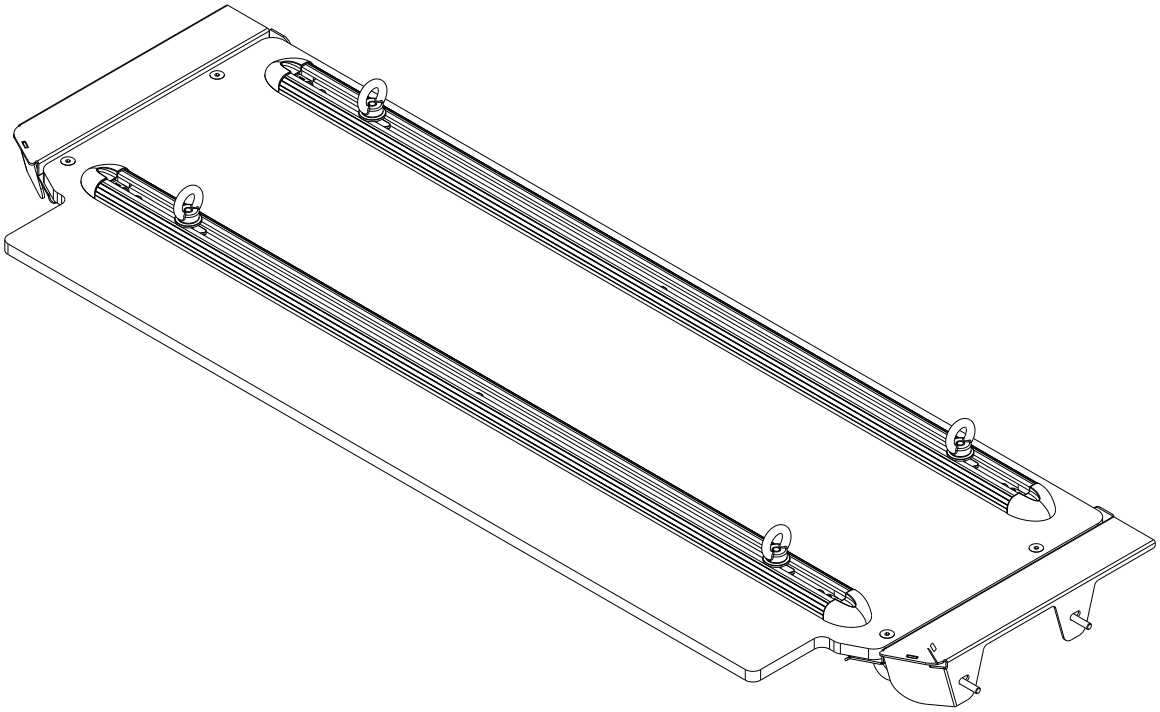

READ ME !

Thank you for purchasing a Suzuki 5 Door Jimny Light Duty Rear Cargo Shelf.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING!

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

© 2024 FRONT RUNNER VEHICLE OUTFITTERS

1 GET ORGANIZED

IN THE BOX


1	1 X	Board & Track Assembly
2	2 X	Vehicle Mounting Bracket - 1 LH & 1 RH
3	4 X	M8 x 20 T-Bolt
4	4 X	M8 x 25 x 8 Flat Washer
5	4 X	M8 Eye Nut
6	4 X	M6 x 25 Countersunk Screw
7	4 X	M6 Eye Nut
8	4 X	M6 x 19 x 1 Flat Washer
9	4 X	M6 x 25 Button Head Bolt

TOOLS NEEDED


4mm


Panel Tool

FIGURE 1.1

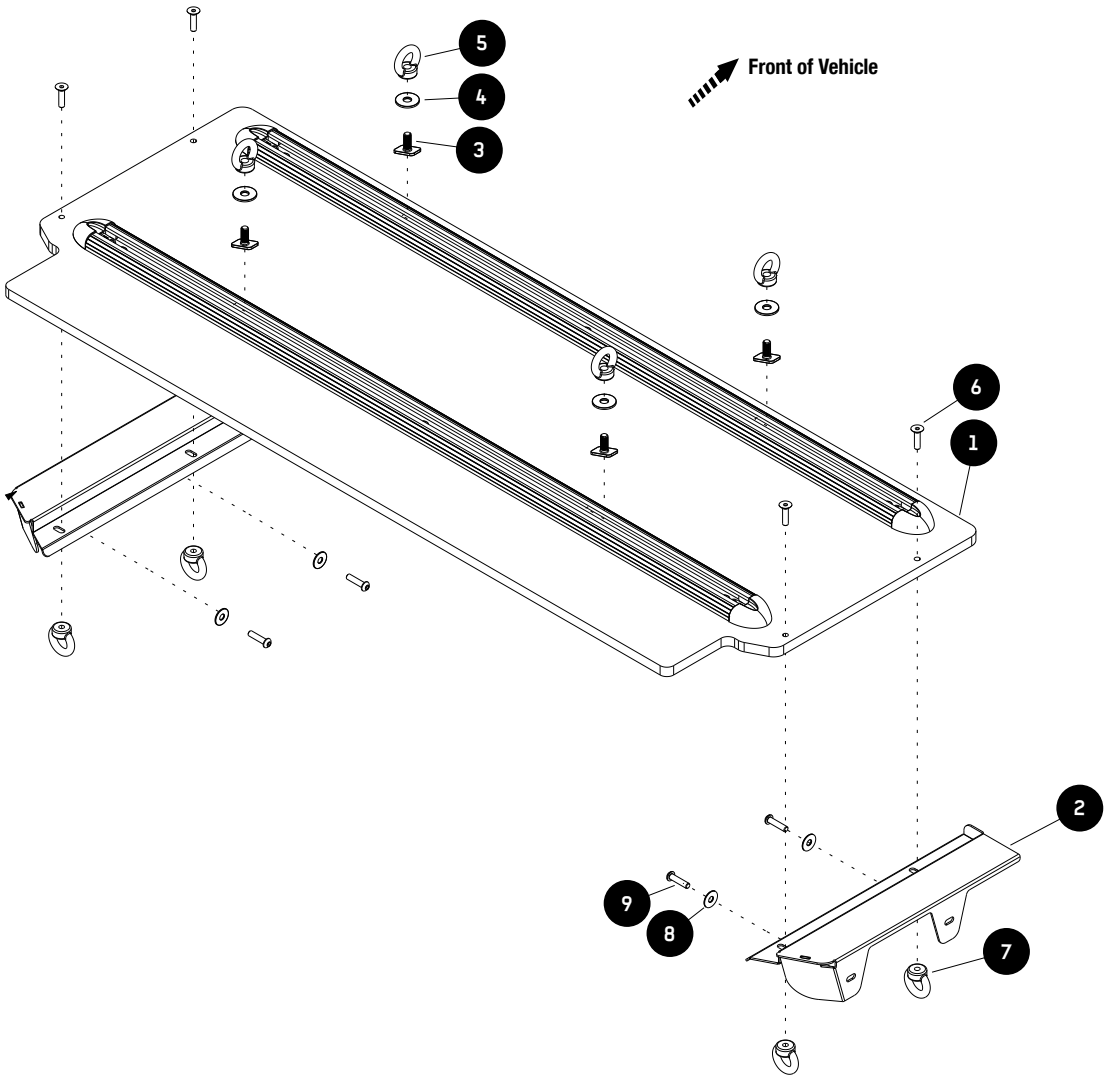

 © 2024 FRONT RUNNER VEHICLE OUTFITTERS


2 FIT AND SECURE

2.1



Remove the Accessory Hole Caps in the vehicle, using a suitable Panel Tool, to reveal the OEM Mounting Holes.

2.2

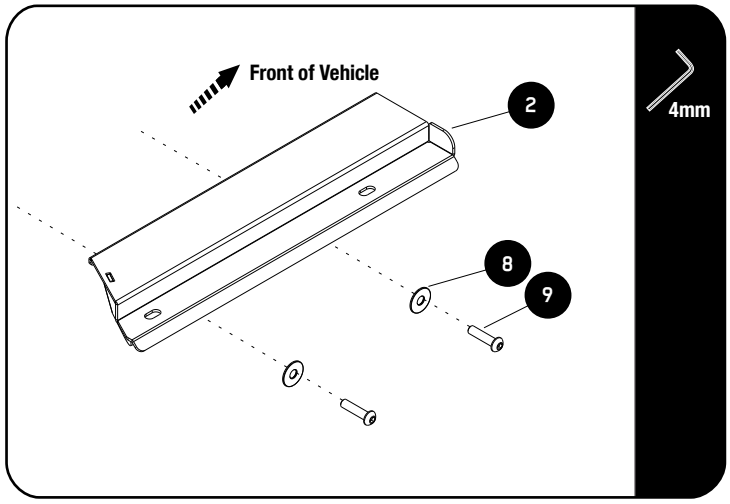

Align the Vehicle Mounting Bracket with the OEM Mounting Holes, as shown above. Secure using two M6 x 19 x 1 Flat Washers and two M6 x 25 Button Head Bolts (Items 8 & 9). Left Side Shown.


Fully Tighten.

Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

Repeat step to assemble the opposite side.

2.3

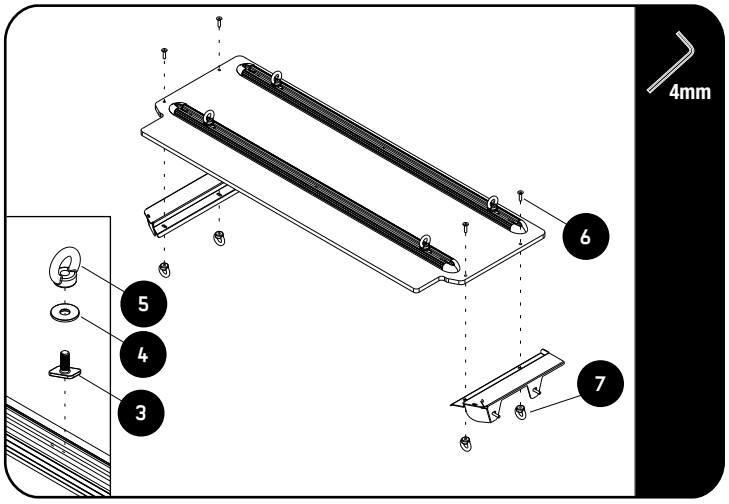

Place the Board & Track Assembly into the recesses of the Vehicle Mounting Brackets and secure using four M6 x 25 Countersunk Screws and four M6 Eye Nuts (Items 6 & 7).

Fully Tighten.

Tightening Torque:


M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

Slide the two M8 x 20 T-Bolts into each track and secure using the M8 x 25 x 2 Flat Washers and M8 Eye Nuts (Items 3, 4 & 5). These can be moved around to secure light/frangile items to the shelf.

© 2024 FRONT RUNNER VEHICLE OUTFITTERS

2 FIT AND SECURE

2.4

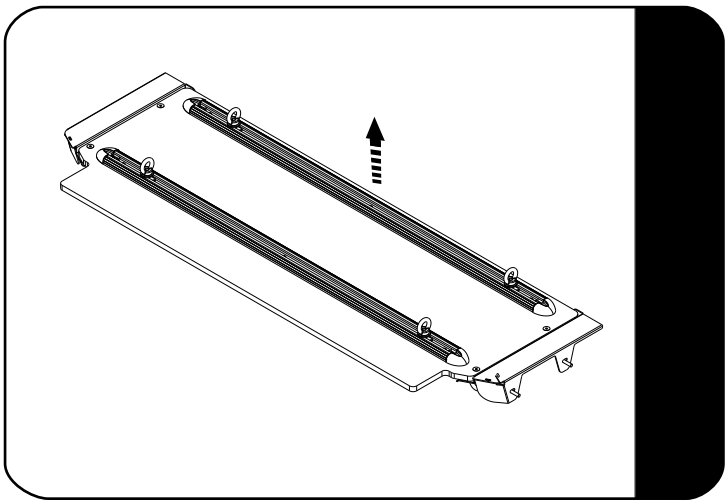

The Cargo Shelf can easily be removed by undoing the M6 Eye Nuts, fitted in the previous step, to allow for loading larger items or storage when not in use. The Vehicle Mounting Brackets can remain in the vehicle.

3 FINISH

Congratulations! You did it. Take a step back and admire your work!

4 INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters #BornToRoam

Share your adventures on:

© 2024 FRONT RUNNER VEHICLE OUTFITTERS