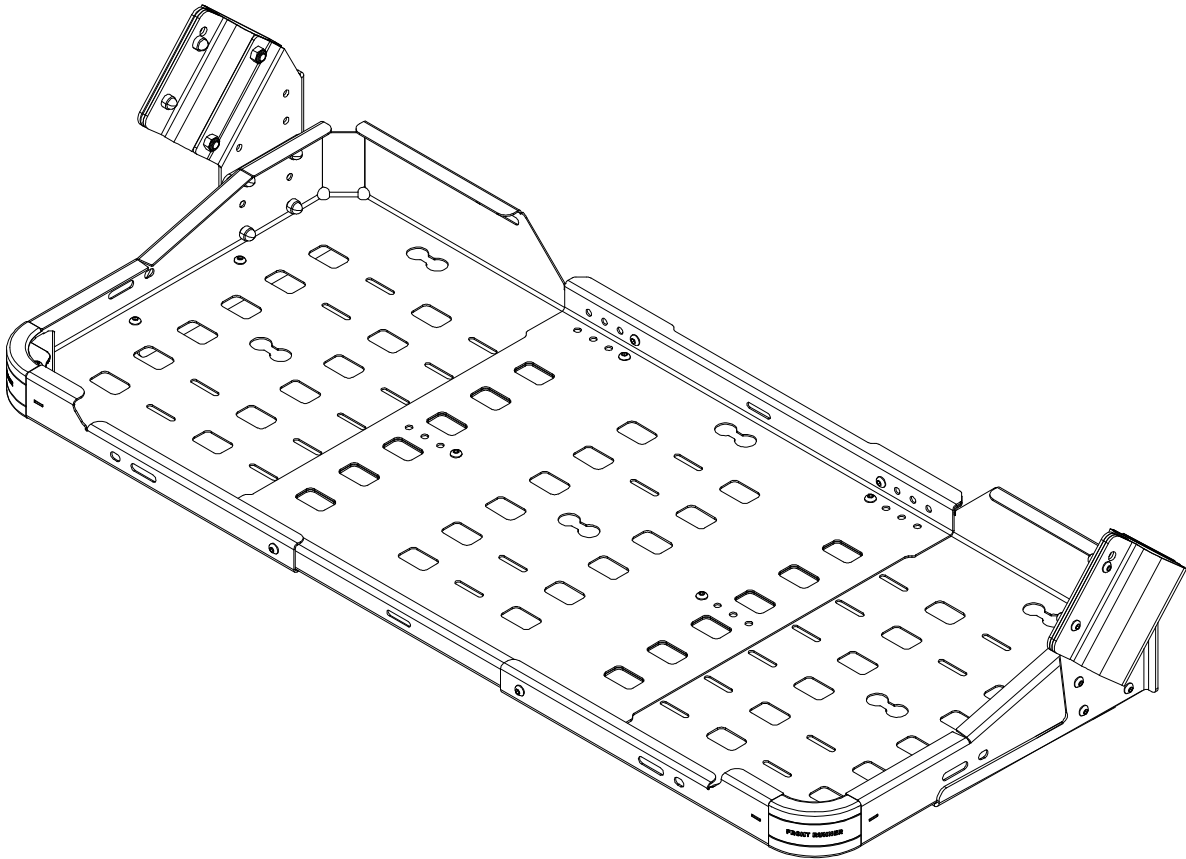


**READ ME !** ⚠

Thank you for purchasing a Jeep JK Interior Shelf.

Before you start, take a moment to familiarize yourself with the Fitting Instructions and the included components.

Refer to Page 2 for a list of all the components, quantities and tools required.

IMPORTANT WARNING! ⚠

IT IS CRITICAL THAT ALL FRONT RUNNER PRODUCTS BE PROPERLY AND SECURELY ASSEMBLED AND ATTACHED TO YOUR VEHICLE. IMPROPER ATTACHMENT COULD RESULT IN AN AUTOMOBILE ACCIDENT, AND COULD CAUSE SERIOUS BODILY INJURY OR DEATH. YOU ARE RESPONSIBLE FOR ASSEMBLING AND SECURING ALL FRONT RUNNER PRODUCTS TO YOUR VEHICLE, CHECKING THE ATTACHMENTS PRIOR TO USE, AND PERIODICALLY INSPECTING THE PRODUCTS FOR ADJUSTMENT, WEAR AND DAMAGE. THEREFORE, YOU MUST READ AND UNDERSTAND ALL OF THE INSTRUCTIONS AND PRECAUTIONS SUPPLIED WITH YOUR FRONT RUNNER PRODUCT PRIOR TO INSTALLATION OR USE. IF YOU DO NOT UNDERSTAND ALL OF THE INSTRUCTIONS AND CAUTIONS, OR IF YOU HAVE NO MECHANICAL EXPERIENCE AND ARE NOT THOROUGHLY FAMILIAR WITH THE INSTALLATION PROCEDURES, YOU SHOULD HAVE THE PRODUCT INSTALLED BY A PROFESSIONAL INSTALLER OR OTHER QUALIFIED PERSONNEL.

NOTE: Front Runner will not be responsible for any damage caused by the failure to install the product according to these instructions.

Please call us if you have any questions about the installation of this product.

1

GET ORGANIZED

IN THE BOX

1	1 X	VACC192 Center Tray
2	2 X	Side Tray - 1LH & 1RH
3	2 X	Side Tray Support - 1LH & 1RH
4	22 X	M6 Nut Cap
5	14 X	M6 x 12 Button Head Bolt
6	8 X	M6 x 16 Button Head Bolt
7	22 X	M6 Nyloc Nut


VACC209

8	2 X	Roll Bar Mount with Studs
9	2 X	Roll Bar Mount
10	2 X	Spacer Plate
11	2 X	Tray Mount
12	12 X	M6 x 16 Button Head Bolt
13	4 X	M6 x 20 Button Head Bolt
14	12 X	M6 Nut Caps
15	12 X	M6 Nyloc Nut
16	4 X	M8 Nyloc Nut


TOOLS NEEDED



FIGURE 1.1

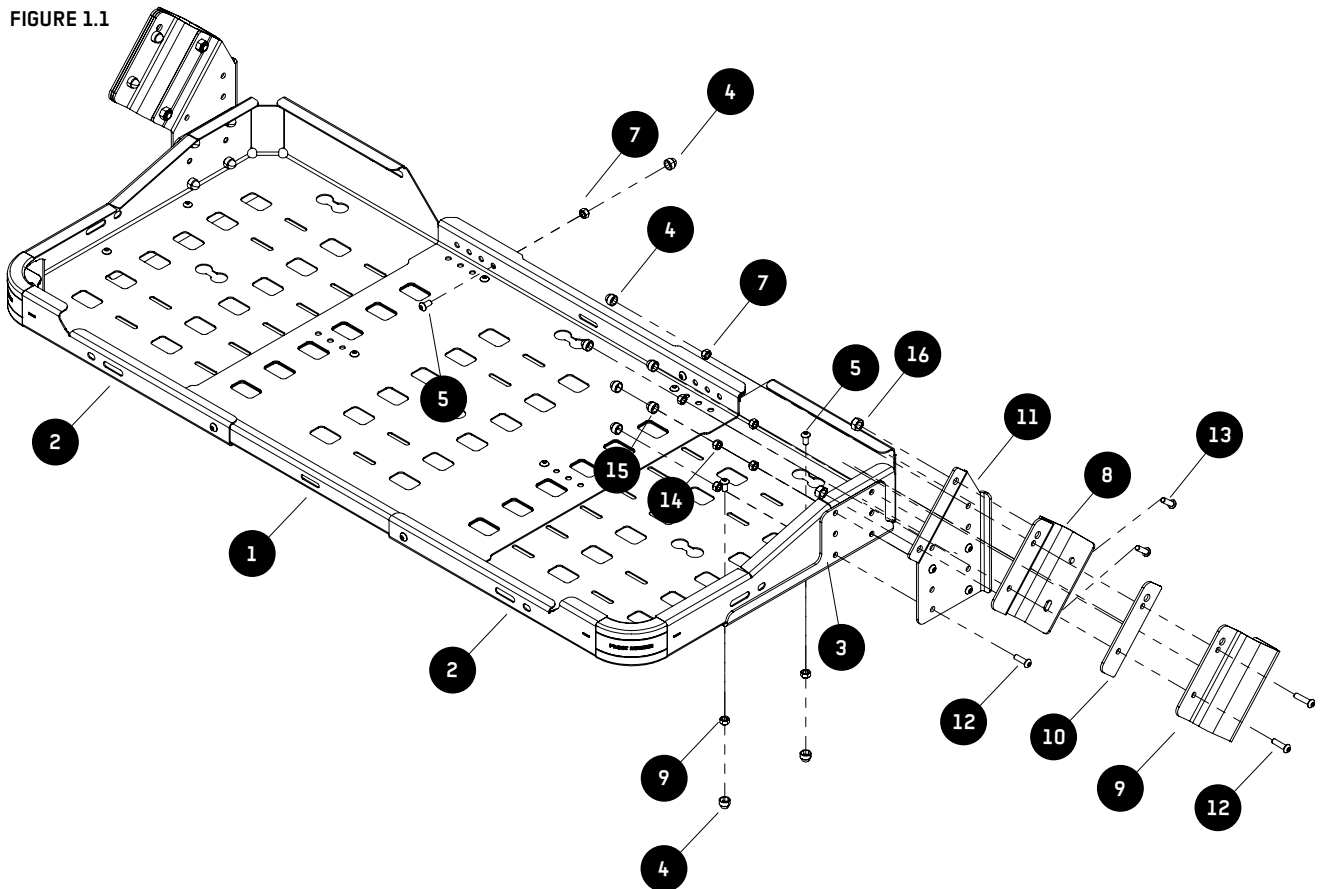

2.1

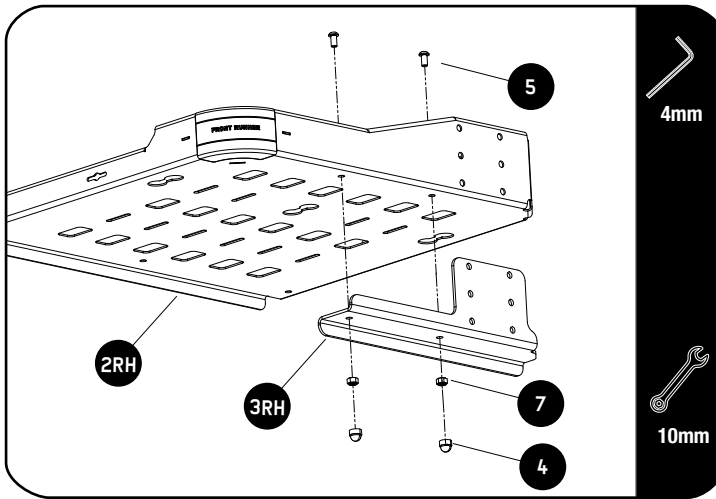

Assemble the Side tray and Side Tray support using M6 x 12 Button Head Bolts and M6 Nyloc Nuts (Items 5 & 7).


Place M6 Nut Caps (Item 4) on the Nyloc Nuts.



Tightening Torque:

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb


2.2

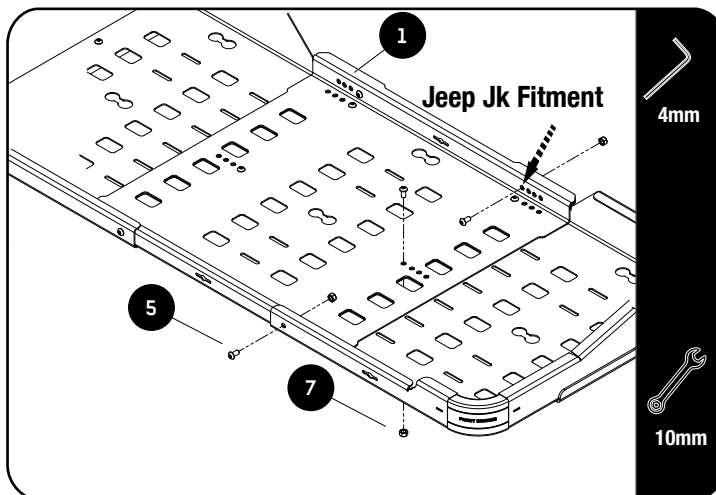

Loosely assemble both Side Trays to the Center Tray (Item 1) using M6 x 12 Button Head Bolts and M6 Nyloc Nuts (Items 5 & 7).

The fasteners will be fully tightened after the tray is fitted in the vehicle.

2.3

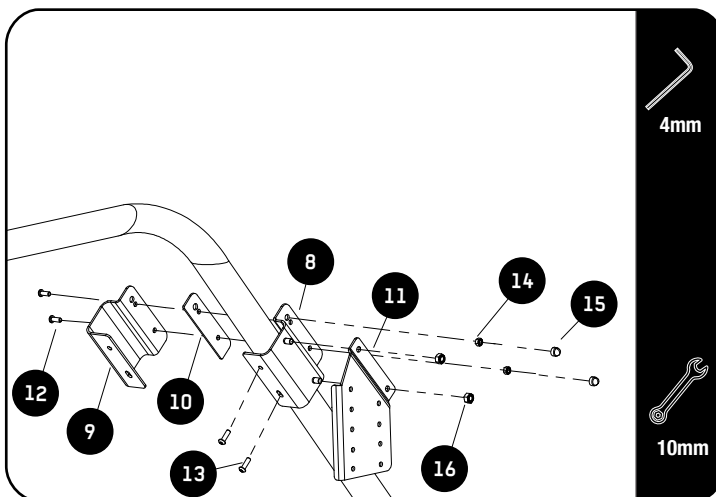

NOTE: If you already have a Front Runner roof rack fitted, the roll bar mounting brackets will need to be replaced with the new supplied mounting brackets.

TRAY MOUNT SHOWN IN A LOW POSITION




Secure the Roll Bar Mounts (Item 8 & 9) to the roll bar using M6 x 16 Button Head Bolts M6 x 20 Button Head bolts and M6 Nyloc Nuts (Items 12, 13 & 14) as shown.

Assemble the Tray Mount (Item 11) to the Roll bar mount using M8 Nyloc Nuts (Item 16). Do this on both sides on the roll bar.

Place M6 Nut Caps (Item 4) on the Nyloc Nuts.


2.4

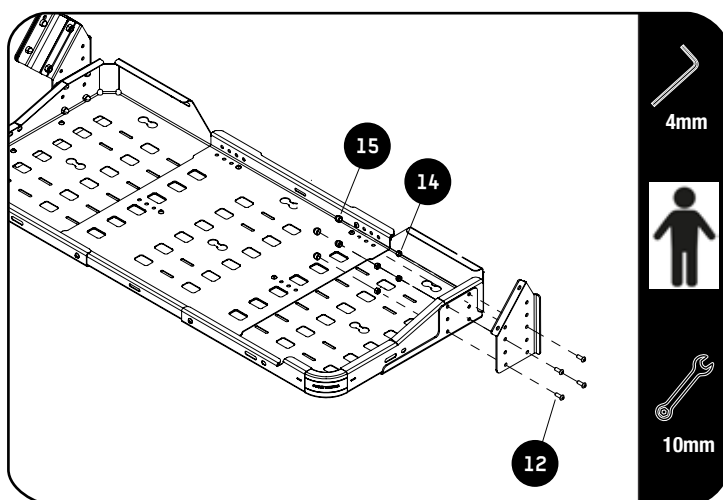

NOTE: Roll bar Mounts not shown.

With the help of a friend, assembly the tray from 2.2 to the Tray Mounts using M6 x 16 Button Head Bolts and M6 Nyloc Nuts (Item 12 & 14) as shown.

2.5

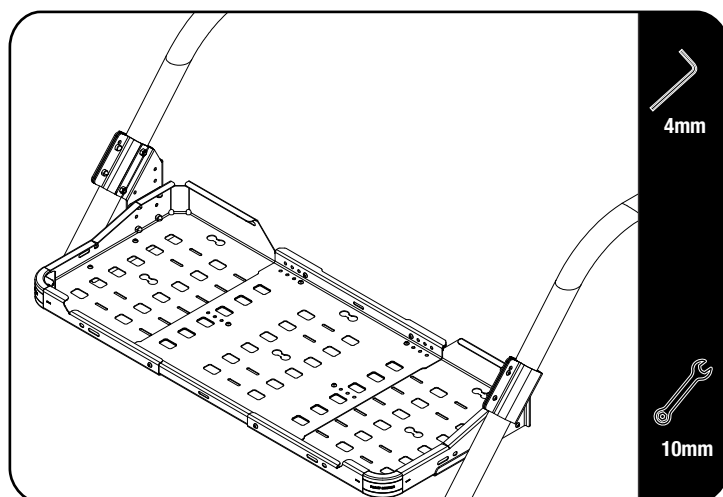

Fully tighten all fasteners before place M6 Nut Caps (Item 15) on the Nyloc Nuts.

**Tightening Torque:**

M6 : 8-10Nm / 5.9 ft lb - 7.38 ft lb

FINISH

Congratulations! You did it. Take a step back and admire your work!

INSTALL OTHER VEHICLE AND RACK ACCESSORIES

Now's the time to visit your favorite Front Runner Dealer in person or online.

Be sure to tag us. We love to see our gear in action! #FrontRunnerOutfitters

Share your adventures on:

