
INSTRUCTIONS FOR CHANGING DOOR HINGES FROM ONE SIDE TO THE OTHER

THIS KIT CONTAINS EXCEPT FOR THIS MOUNTING INSTRUCTION THE FOLLOWING PARTS:

PLUG, HINGE HOLES 2 PCS. UPPER AND LOWER DOOR HINGE 2 PCS. ATTATCHMENT TOPDECOR FOR 1 PCS PLUG, SI DEPROF 1 LE 4 PCS DOORLABEL 1 PCS CAP. UPPER TAP 1 PCS. PLUG, DOORPAN 2 PCS. PLUG, HINGE HOLES 4 PCS. PLUG, CENTERATTACHMENT 2 PCS. DRILL 0 Pmm 1 PCS.

NOTE: THE ILLUSTRATIONS IN THIS INSTRUCTION SHOW IN STEPS HOW TO CHANGE FROM RIGHT TO LEFT HINGED DOORS.

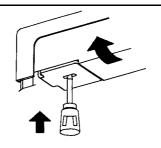

STEP 1:


OPEN THE DOOR(S), REMOVE THE TOP DECORATION PANEL. PUT THE PANEL ON THE TOP OF THE REFRIGERATOR.



OPEN THE (UPPER) DOOR 90' AND REMOVE IT FROM THE REFRIGERATOR BY LIFTING IT OFF THE LOWER PIN. PLEASE NOTE YOU HAVE TAKEN AWAY THE UPPER PIN.


NOTE: WHEN YOU OPEN AND LIFT THE DOOR, BE CAREFUL SO THAT YOU DON'T BEND THE LOWER PIN.

NOTE: PLACE THE DOOR ON A
SOFT MATERIAL IN ORDER NOT TO
SCRATCH IT.

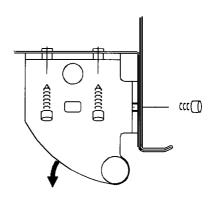

STEP 2:

CLOSE THE DOOR(S) REMOVE THE 3 SCREWS FASTENING THE UPPER HINGE. LEAVE THE HINGE PIN IN ITS PLACE. ROTATE THE COMPLETE HINGE AND PULL IT OUT OF THE BUSH1 NG.

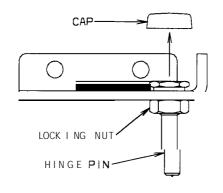


STEP 4:

(NOT VALID FOR MODEL NDR1062)


REMOVE THE CAP

NOTE: YOU MAY HAVE TO DESTROY THE CAP.

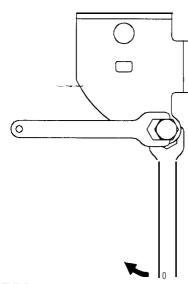

STEP 5:

USE A TOROUE WRENCH TO HOLD THE HINGE PIN AND ANOTHER ONE TO LOOSEN THE LOCKING NUT. UNSCREW THE PIN. SAVE THE PIN AND THE LOCKING NUT AND THROW AWAY THE HINGE.

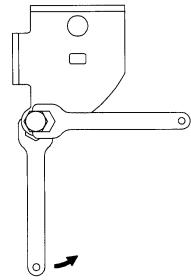


STEP 6:

SCREW THE PIN IN AN INVERTED HINGE. USE A TORQUE WRENCH TO HOLD THE PIN WHILE MOUNTING THE LOCKING NUT WITH ANOTHER ONE. MOUNT A CAP ON THE HEAD OF THE PIN.


IF YOU HAVE A ONE-DOOR REFRIGE-RATOR, CONTINUE WITH STEP 12.

IF YOU HAVE A TWO-DOOR REFRIGE-RATOR, CONTINUE WITH THE NEXT STEP.

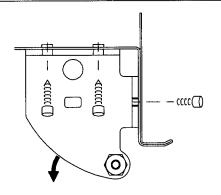


STEP 7:

REMOVE THE 3 SCREWS FASTENING THE MIDDLE HINGE, LEAVE THE HINGE PIN IN ITS PLACE. ROTATE THE COMPLETE HINGE AND PULL IT OUT OF THE BUSHING.

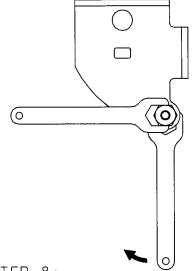


STEP 8:

USE A TORQUE WRENCH TO HOLD THE HINGE PIN AND ANOTHER ONE TO LOOSEN THE LOCKING NUT. UNSCREW THE PIN.



STEP 9:

TURN THE HINGE UPSIDE DOWN.

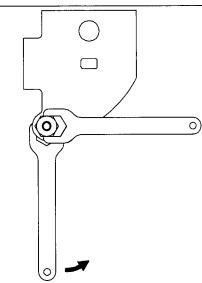

STEP 10:


SCREW THE PIN IN THE HINGE, USE A TORQUE WRENCH TO HOLD THE PIN WHILE MOUNTING THE LOCKING NUT WITH ANOTHER ONE.

STEP 11:

OPEN THE LOWER DOOR 90° AND LIFT IT OFF.


NOTE: WHEN YOU OPEN AND LIFT THE DOOR, BE CAREFUL SO THAT YOU DON'T BEND THE LOWER PIN.

NOTE: PLACE THE DOOR ON A SOFT MATERIAL IN ORDER NOT TO SCRATCH IT.

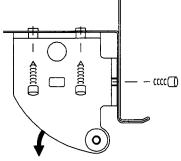


STEP 12:

REMOVE THE 3 SCREWS FASTENING THE LOWER DOOR HINGE AND REMOVE IT.

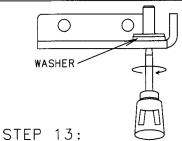


USE A SCREWDRIVER TO LOOSEN THE PIN. REMOVE THE PIN AND THE WASHER. THROW AWAY THE HINGE.

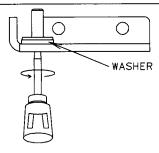

STEP 14:


MOUNT THE WASHER AND THE PIN ON AN INVERTED HINGE. USE A SCREW-DRIVER TO FASTEN THE PIN.

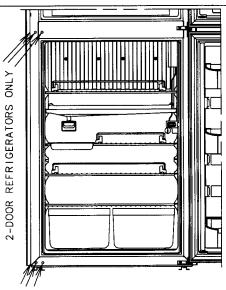

STEP 15:

REMOVE THE PLUGS IN THE HOLES FOR THE HINGE (HINGES).

NOTE: YOU MAY HAVE TO DESTROY THE PLUGS.

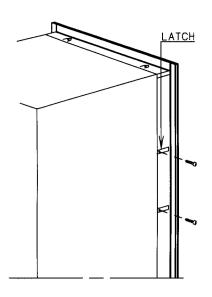

STEP 16:


REMOVE THE LATCH (LATCHES) AND MOVE IT (THEM) TO THE CORRES-PONDING LOCATION AT THE OPPOSITE SIDE OF THE REFRIGERATOR, ADD A TAPE OVER THE SLOTS IN THE FRAME TO SECURE THE SEAL BETWEEN THE COMBUSTION COMPARTMENT AND THE LIVING SPACE.

STEP 17:

REMOVE THE DOOR COMPARTMENTS.


STFP 17a:

(VALID FOR MODELS RM4605/RM4805)




REMOVE THE PLUGS FOR THE CENTER-ATTACHMENT BY USING A SMALL SCREWDRIVER.

PULL OUT THE CENTERATTACHMENT AND PLACE IT IN THE CAVITY AT THE OPPOSITE END OF THE DOOR.

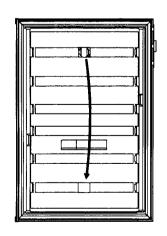


BEFORE DRILLING NEW HOLES AT THE LOWER PART OF THE DOOR USE THE CENTERATTACHMENT AS A MASTER TO MARK UP THE POSITION OF THE NEW HOLES USE A DRILL WITH DIAMETER 4 MM.

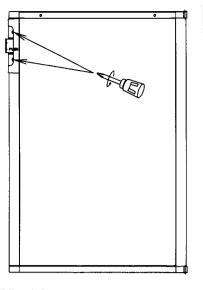


STEP 18:

TO DISMANTLE THE HANDLE USE A SCREWDRIVER TO LOOSEN THE TWO SCREWS.

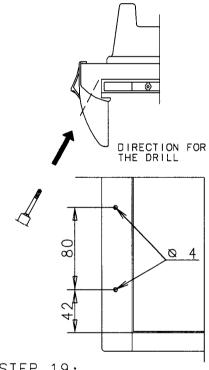


STEP 19:

BEFORE DRILLING NEW HOLES AT THE LOWER PART OF THE DOOR USE THE HANDLE AS A MASTER TO MARK UP THE POSITION OF THE NEW HOLES. USE A DRILL WITH DIAMETER 4 MM. MEASUREMENTS FOR THE TWO HOLES ARE SHOWN IN THE PICTURE.



STEP 20:

LOOSEN THE SCREWS AND REMOVE THE DOOR DECORATION STRIP AT THE LOWER SIDE OF THE DOOR (DOORS).

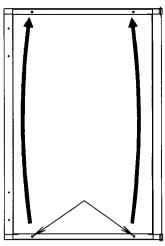


STEP 21:


USE A PAIR OF PLIERS TO REMOVE THE PLASTIC COTTERS AND MOVE THEM TO THE CORRESPONDING HOLES AT THE OPPOSITE END OF THE DOOR (DOORS).

STEP 22:

TURN THE DOOR (DOORS) UPSIDE DOWN.

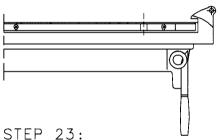


CUT OFF THE SEALING PLUG AT THE LEVEL OF THE DOOR PAN (DOOR PANS).

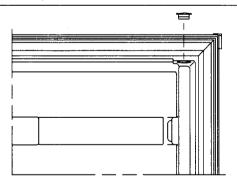


STEP 24:

MOUNT THE DOORPAN PLUG IN THE HOLE WITH THE REMAININGS OF THE SEALING PLUG.




STEP 25:

MOUNT THE DOOR DECORATION STRIP WITH THREE SCREWS AT THE LOWER SIDE OF THE DOOR (DOORS).

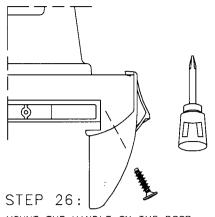


MOUNT THE HANDLE ON THE DOOR (DOORS). THE HANDLES ARE TO BE LOCATED NEAREST THE CENTRAL GIRDER BETWEEN THE DOORS ON 2-DOOR REFRIGERATORS OR AT THE TOP OF THE DOOR ON 1-DOOR REFRIGERATORS.

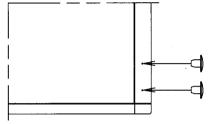


STEP 27:

MOUNT THE PLUGS IN THE TWO HOLES ON THE SIDE PROFILE NOT OCCUPIED BY THE HANDLE.


STEP 28: PUT BACK THE DOOR COMPARTMENTS.

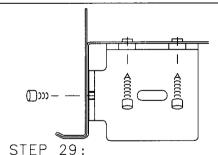

REMOVE THE 3 SCREWS FASTENING THE ATTATCHMENT FOR TOPDECOR. SAVE THE SCREWS AND THROW AWAY THE ATTATCHMENT.

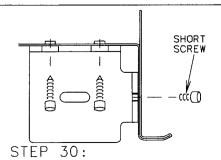

MOUNT AN INVERTED ATTATCHMENT ON THE OTHER SIDE OF THE REFRIGE-RATOR.

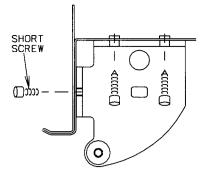

STEP 31:


MOUNT THE NEW LOWER DOOR HINGE.

STEP 32:

PUT THE DOOR (LOWER DOOR) ON THE LOWER HINGE. CLOSE THE DOOR SO THE DOOR GASKET KEEPS THE DOOR IN POSITION.

IF YOU HAVE A ONE-DOOR REFRIGE-RATOR, CONTINUE WITH STEP 35.

IF YOU HAVE A TWO-DOOR REFRIGE-RATOR, CONTINUE WITH THE NEXT STEP.

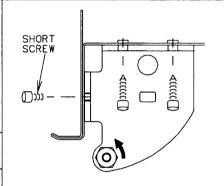


STEP 33:

MOUNT THE TAP OF THE MIDDLE DOOR HINGE IN THE BUSHING OF THE LOWER DOOR. TURN IT TOWARDS THE FRONT FRAME AND FASTEN THE SCREWS.


NOTE: IF THE HINGE IS MOUNTED ON THE LEFT SIDE OF THE REFRI-GERATOR, YOU MAY HAVE TO OPEN THE DOOR BEFORE YOU CAN MOUNT THE SCREWS. IN THAT CASE, ASK SOMEONE TO HOLD THE DOOR FOR YOU

STEP 34:


PUT THE UPPER DOOR ON THE TAP OF THE MIDDLE DOOR HINGE. CLOSE THE DOOR SO THE DOOR GASKET KEEPS THE DOOR IN POSITION.

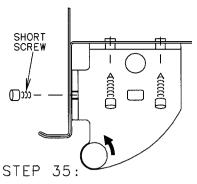

MOUNT THE TAP OF THE UPPER DOOR HINGE IN THE BUSHING OF THE DOOR (UPPER DOOR). TURN IT TO-WARDS THE FRONT FRAME AND FASTEN THE SCREWS.

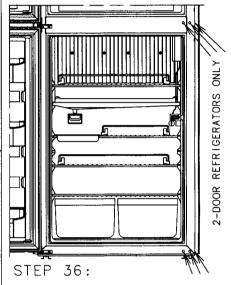


MOUNT PLUGS IN THE HOLES NOT OCCUPIED BY THE HINGE (HINGES).

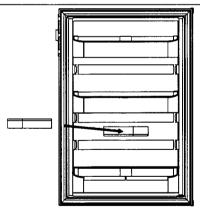

STEP 37:

MOUNT A NEW DOORLABEL OVER THE OLD ONE.



STEP 38:

MOUNT THE TOP DECORATION PANEL. MAKE SURE YOU DO NOT SQUEEZE ANY WIRES.