## MO 1064 /240403

## Installation Instructions Mini Heki( replacement of the glazing-dome)

Dometic =

Replacement has to be made only if the production-date is before 11.2002! (Date of production you can find as described in pic.1)

## Replacement-Set includes: bolt (2 pieces), cap (2 pieces), bush (8 pieces)



1.) On this position you can find the date of production.



screwdriver.



2.) Remove the cap by using a



4.) Push back the hinge- pine and follow to pic.5.



6.) Fit the bushes. ( 4 pieces left-side/ 4 pieces right-side). The bushes are only necessary if there is a black bolt (with a diameter of 6)



7.) Push the bush inside.




9.) Beat the hinge-pin into with a hammer.



11.) Press the cap with a tong to the bolt.



8.) Correct position of the bushes. Now fit the glazing panel into the hinges.

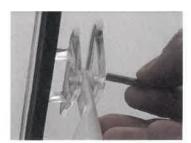

10.) Bust the bolt in the hole of the glass and the bow.



12.) Replacement is finished -check functions!



3.) Remove the bolt with a pointed plier.

5.) Catch the hinge- pin with the pliers and pull; if necessary hit the pliers with a rubber mallet.