


Floor Flange Seal Kit Installation Instructions

1. Remove old floor flange seal and discard.
2. Remove old toilet mounting bolts and discard.
3. Insert the four T-bolts into slots of floor flange.
4. Spread small amount of liquid dishwashing soap on top of floor flange.
5. Set the floor flange seal over the T-bolts, and force the T-bolts up through the round grommets in the floor flange.
6. Set toilet base in place. Place washers over protruding ends of T-bolts. Fasten nuts onto T-bolts and tighten securely.

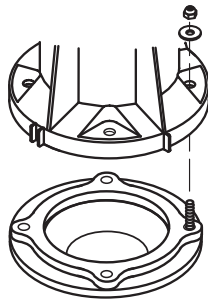

 **Dometic**[®]

Dometic Corporation
13128 State Rt 226
PO Box 38
Big Prairie, OH 44611
1-800-321-9886

© Dometic Corporation
600344402