



1120 North Main Street • Elkhart, IN 46514  
PHONE: 574•264•2131 FAX: 574•206•9713  
INTERNET: <http://www.atwoodmobile.com>


LITERATURE NUMBER **MPD 87842**

## TOP WIND HANDLE REPLACEMENT

SCREW APPLICATION

Effective 12/04/07

For complete Top Wind Jack  
instructions consult MPD 87840.

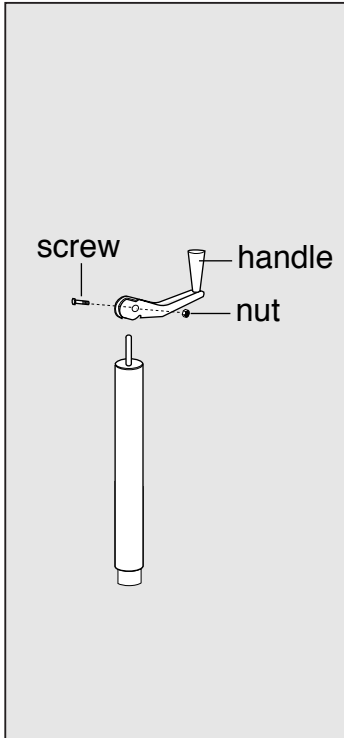

### **WARNING**

#### **PERSONAL INJURY/PRODUCT DAMAGE**

- Never exceed the rated capacity on the jack.

#### **INSTALLATION PROCEDURE**

1. With ram and screw assembly supported; clip wire-tie loose from jack screw top, discard wire-tie.
2. Position handle assembly over jack screw top and align screw hole.
3. Insert 1/4-20 x 1.00" hex screw through hole in handle and jack screw top. Install prevailing torque nut on screw. Run nut up to handle tight enough to keep handle snug on jack screw top.

## Aftermarket Replacement Service Part

Quarter page actual size  
(Shown enlarged)