


VACUFLUSH TOILET MODELS 5006, 5009, 5047, 5048, 5049 FUNNEL FLANGE DRILLING AND MOUNTING TEMPLATE

Funnel flange mounting hole centers for 5006, 5009 models (8 required – 3/16 in. [4.8 mm] dia. holes recommended for #14 fastener)

Base mounting hole centers for 5047, 5048, 5049 models (4 required – 3/16 in. [4.8 mm] dia. holes recommended for #14 fastener)

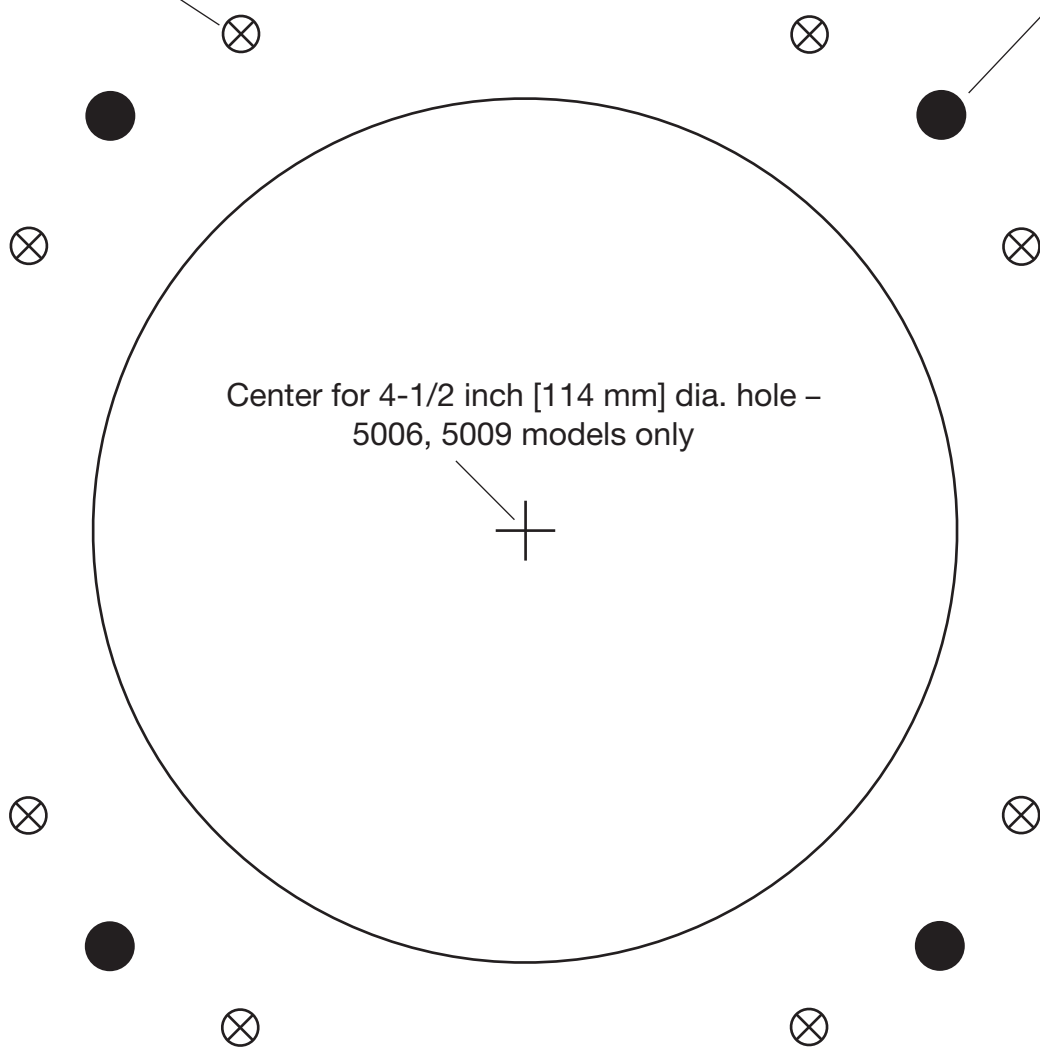

INSTRUCTIONS


1. Set toilet in desired location. Check clearance for seat and lid in “up” position, flush pedal location, and water valve connection.
2. Mark the floor through the four toilet base mounting holes. Set toilet aside.
3. Punch out four black dots on template, and align mounting template with marks made on floor through the four toilet base mounting holes.
4. If installing 5047, 5048 or 5049 models, drill four toilet base mounting holes, and install toilet with recommended size fasteners.
5. If installing 5006 or 5009 models, mark the eight funnel flange holes and the 4-1/2” diameter hole with a center punch. Drill eight funnel flange holes, cut out 4-1/2” diameter hole, and install toilet with recommended size fasteners.

Sealand[®]
by Dometic GROUP

Dometic Corporation, Sanitation Div.
13128 State Rt 226
PO Box 38
Big Prairie, OH 44611
1-800-321-9886

VACUFLUSH TOILET MODELS 5147, 5148, 5149 BASE MOUNTING TEMPLATE

Toilet base mounting hole centers
(4 required – 3/16 in. [4.8 mm] dia. holes
recommended for #14 fasteners [supplied])

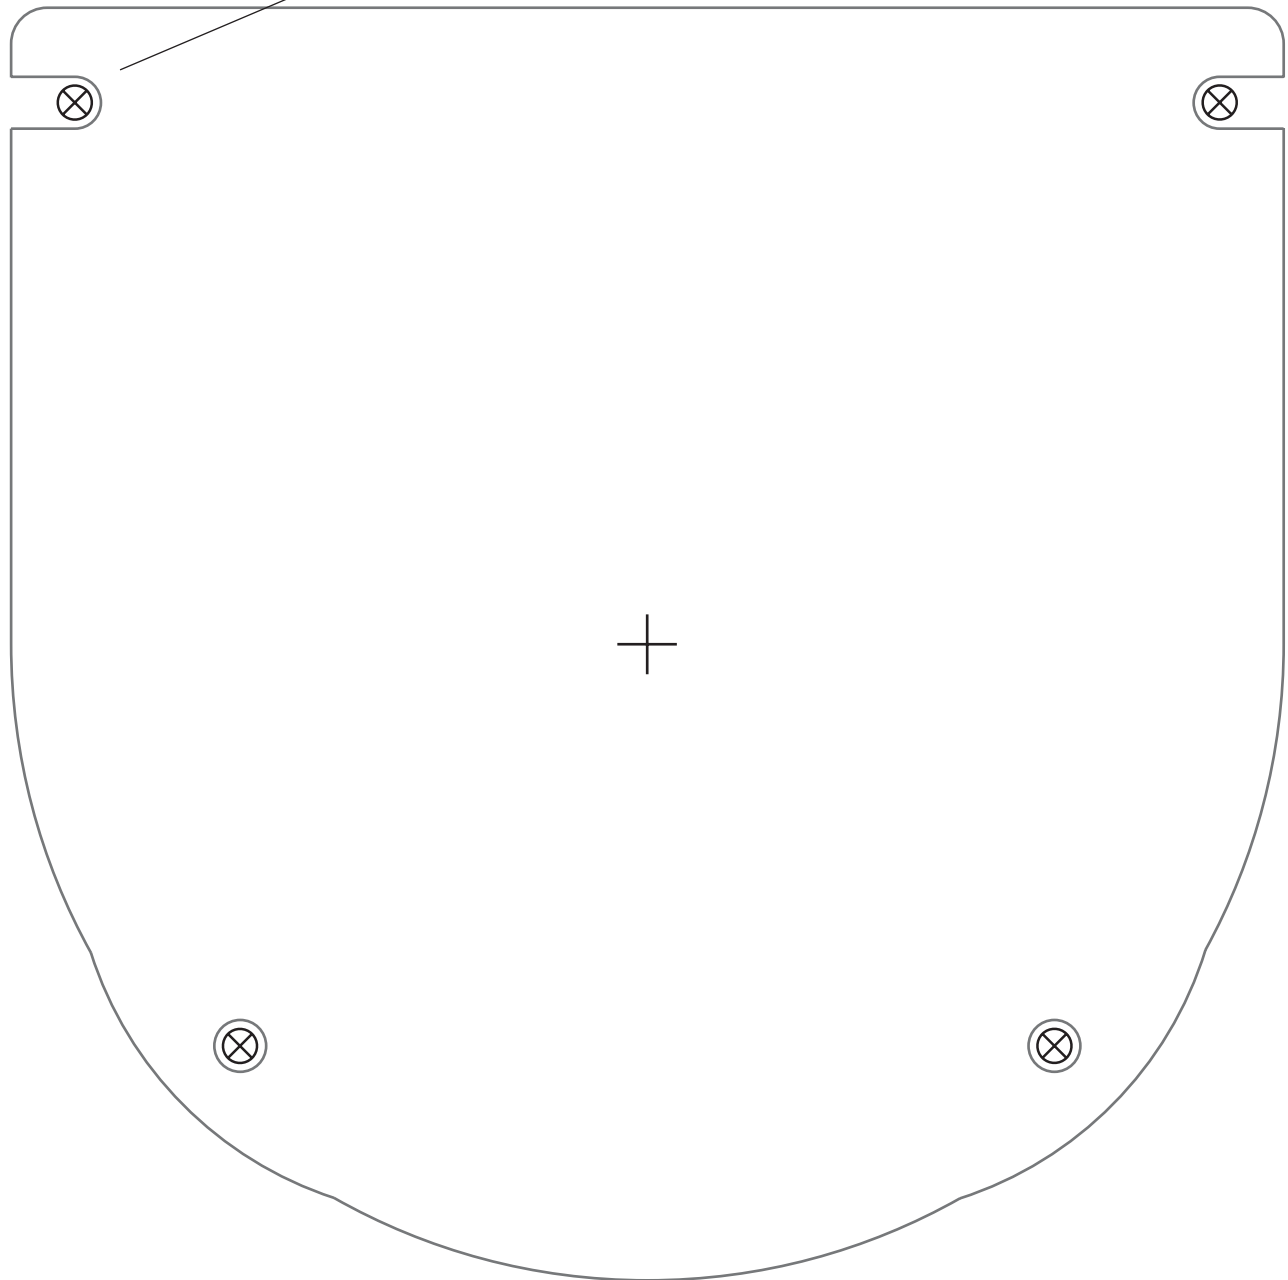

INSTRUCTIONS

1. Set toilet in desired mounting position. Check clearance for seat and lid in “up” position, flush lever location, and water valve connection.
2. Mark the floor through the four toilet base mounting holes. Set toilet aside.
3. Drill four toilet base holes, and install toilet with supplied fasteners.