

Vacuum Breaker Kit Instructions


385316906 fits SeaLand®, Traveler®, VacuFlush®, Dometic® toilet series 100, 200, 300, 500+, 500H, 700, 800, 900, 1000, 2000, 3000, 4000 WITHOUT hand sprayer.

385230335 fits all of above toilet series equipped WITH hand sprayer.

385318065 fits toilet series 500 WITHOUT hand sprayer.

385230325 fits toilet series 500 equipped WITH hand sprayer.

1. Turn off water supply to toilet. Flush toilet to drain water lines.
2. Twist and pull out vacuum breaker from back of toilet. (Toilet may need to be removed from floor to access vacuum breaker.) Remove old rubber sealing grommet from toilet. If applicable, remove plastic cover from vacuum breaker.
3. Remove water hose (and hand sprayer hose, if applicable) clamped to vacuum breaker. Discard old vacuum breaker and sealing grommet.
4. For toilets with hand sprayer, position strain-relief bracket as shown before installing hoses.
5. Re-attach water hose(s) with new clamp(s) and, if applicable, attach plastic cover to new vacuum breaker.
6. With soapy water, lubricate outside and inside of new sealing grommet to install it in toilet, then push vacuum breaker fully into grommet.
7. Re-install toilet, turn on water supply, and flush to verify no leaks.

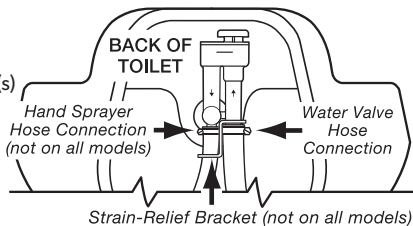

**Dometic Corporation
Sanitation Division**

13128 State Rt 226
PO Box 38
Big Prairie, OH 44611
1-800-321-9886