
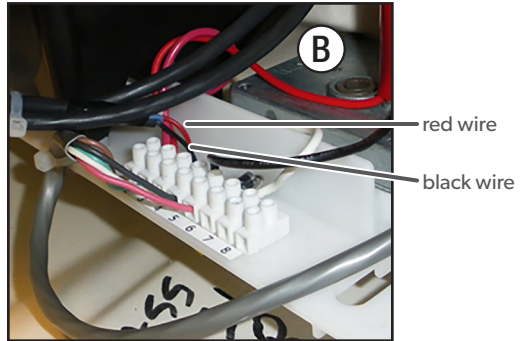


ATTENTION!

WATER VALVE REPLACEMENT WIRING INSTRUCTIONS

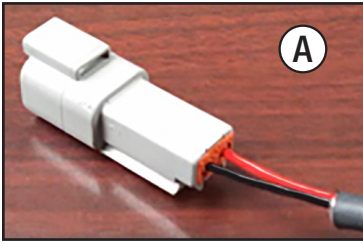

If the commode has a white terminal block:

1. Remove gray plastic connector (A) from end of water valve wiring.
2. Strip ends of red and black wires 0.25 in.
3. Attach red wire to #2 terminal and black wire to #3 terminal on terminal block (B).

