


Universal Mounting Kit Installation Instructions

This kit adapts the two-bolt floor flanges of some factory-installed toilets for easy installation of four-bolt-style Dometic® china toilets. Before starting, be sure the toilet fits in the required space.

1. Remove present toilet and floor flange seal. Leave the two original mounting bolts in the floor flange (Fig.1).
2. Position mounting flange with the word "FRONT" located toward the front of the toilet. Place the mounting adapter over the two original mounting bolts using the locating holes provided, and loosely tighten nuts on mounting bolts to temporarily secure the mounting adapter (Fig. 2).
3. Using the eight screw holes closest to the mounting bolt slots, drill pilot holes with a 1/8-inch (3.2mm) drill bit. Pilot holes should be drilled through the original floor flange and subfloor (Fig. 3). Pilot hole depth should not exceed 1-1/2-inches (38.1mm). Mark drill bit with depth guide.
4. If floor is carpeted, the carpet must be trimmed to the outside surface of the flange spacer ring. (If the floor is not carpeted, proceed to step 5). Place the spacer ring around the mounting adapter (shown in Fig. 5). Use a utility knife (preferably) with a new blade to cut the carpet closely around the spacer ring.

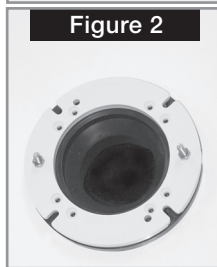

5. Lift the new mounting flange off the old one and set aside. Remove and discard the original mounting bolts and nuts (the ones that were loosely tightened in Step 2).
6. Turn the new mounting flange over and apply a 1/4-inch bead of silicone caulk around the inside circumference of the mounting ring (Fig. 4).
7. Position the new mounting flange as it was done in Step 2. **IMPORTANT:** Keep the word "FRONT" toward the front of the toilet. Make sure the holes drilled in Step 3 line up with the new flange.
Secure the mounting adapter in place with the eight #12x1-1/2" screws supplied.
8. Insert the four new toilet mounting bolts (supplied with new toilet) into the slots of the mounting adapter.
Place the spacer ring around the mounting adapter (Fig. 5).
9. The flange is now ready for installation of the new toilet.

NOTE: If a water supply line extension is needed, you can buy the necessary parts at your dealer or hardware store.

