

Dometic Diptube Kit Installation Instructions



1. Drill a 3-inch (76 mm) diameter hole on a flat spot on top of the holding tank with a 3-inch hole saw.
2. Determine the required length of the PVC pipe, using the formula below:

$$A - 2.875 \text{ in. (73 mm)} = B$$

A = Height from bottom to top surface inside tank

B = Required length of PVC pipe

3. Cut pipe squarely and remove burrs.
4. Clean all surfaces with PVC cleaner. Following instructions on PVC cement, assemble pick-up adapter to one end of pipe.
5. Slide sealing grommet onto PVC pipe, with wide end toward top of pipe (see diagram).
6. Assemble top fitting to PVC pipe with PVC cement.
7. Lubricate inside surface of sealing grommet and outer diameter of narrow end of top fitting with liquid dishwashing soap.
8. Insert the diptube assembly into the 3-inch hole and press the sealing grommet into the hole.
9. Insert the diptube assembly into the sealing grommet.

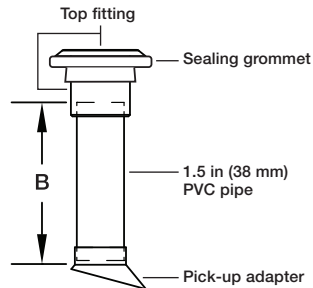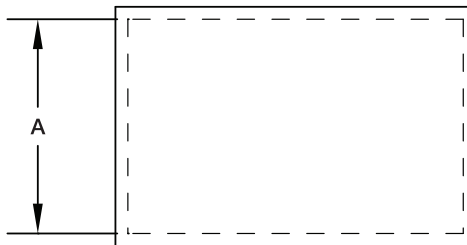

Dometic Corporation, Sanitation Division

13128 State Rt. 226, P.O. Box 38
Big Prairie, OH 44611 USA
1-800-321-9886 • Fax: 330-496-3097
www.Dometic.com

REVISION A

Form No. 600343903 9/17

©2017 Dometic Corporation