


MARINE MODELS 506+, 1006: RV MODELS 509+, 1009
VACUFLUSH TOILET DRILLING AND MOUNTING TEMPLATE

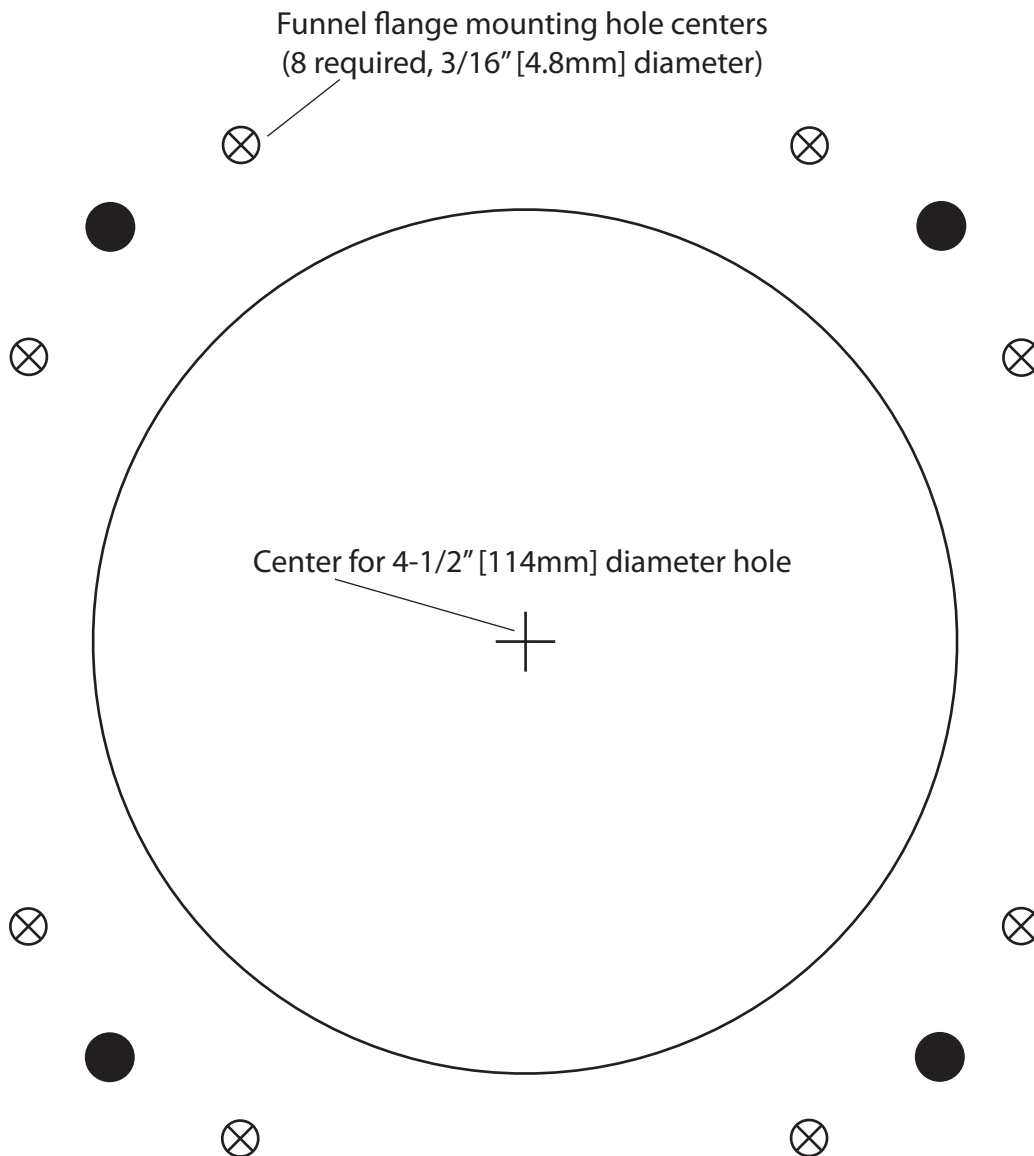

INSTRUCTIONS

1. Set toilet in desired mounting position. Check clearance for seat and lid in "up" position, flush lever location, and water valve connection.
2. Mark the floor through the four toilet base mounting holes. Set toilet aside.
3. Punch out four black dots on template, and align mounting template with marks made on floor through the four toilet base mounting holes.
4. Mark the eight floor flange holes and the 4-1/2" diameter hole with a center punch.
5. Drill eight floor flange holes, cut out 4-1/2" diameter hole, and install toilet.