



DOMETIC CORPORATION  
1120 North Main Street, Elkhart, IN 46514  
Please Visit: WWW.DOMETIC.COM

LITERATURE NUMBER MPD 53387

## RECESSED GLASS BI-FOLD COVER with TRIM

Model # 53288

Revision A, 10/19/18

### ENGLISH

#### FOR YOUR SAFETY

#### READ ALL INSTRUCTIONS BEFORE OPERATING

**Installer:** Provide these instructions to the consumer.  
**Consumer:** Keep documents for future reference.

### SERVICE CALLS & QUESTIONS

Location and phone numbers of qualified Service Centers can be found at our website <http://www.edometic.com> or call 866-869-3118 to locate a Service Center.

#### SAFETY ALERT SYMBOLS

Safety Symbols alerting you to potential personal safety hazards. Obey all safety messages following these symbols.



#### WARNING

avoid possible  
injury or death



#### CAUTION

avoid possible  
injury and/or property damage



#### WARNING

#### MAY CAUSE PERSONAL INJURY OR DEATH

For your safety and protection, it is important that this installation manual is read and understood before installation or use. Failure to properly install the unit or attempting to modify it in any way can be extremely hazardous and may result in property damage and/or personal injury and will void the warranty.

### •Installation •Operation •Maintenance

1. Follow **CUTOUT DIMENSIONS** and FIG 1 for the appropriate Recessed Bi-Fold Cover with Trim installation. Cutout must be squared to the counter top and cabinet face
2. Follow MPD 52229 for both Dometic model complete installation, operation and maintenance instructions of the range, cooktop or slide-in cooktop. Installation must conform with local codes or in the absence of local codes, with the American National Standard for Recreation Vehicles ANSI/A119.2 and Article 551, ANSI/NFPA 70. In Canada installation must conform to CSA Z240.4.2-M.



#### CAUTION

#### DO NOT OVERTIGHTEN SCREWS

Do not over tighten the installation screws. Overtightening can cause damage to the product.

3. After permanently fastening the range, cooktop or slide-in cooktop to the counter top material, place the Bifold with Trim over the range in the recessed cavity. Position the cover so the vent section is directly above the range vent. The front section should be flush with the front edge of the range. The side trim should be flush against the cutout and the gap from edge of glass to the trim must be equal side-to-side. Raise the cover and fasten the back trim to the counter/support blocks with one screw through the hole provided. Before installing side rail screws check to see if the miter joint is closed, if not gently bump the end of the side rail to close the gap. Install the screws into both side trims through the holes provided. If needed add shims behind the side trim to square trim to counter top. When the bi-fold cover is open, the prop rod must completely lock into the slot provided on the side trim section Fig 2

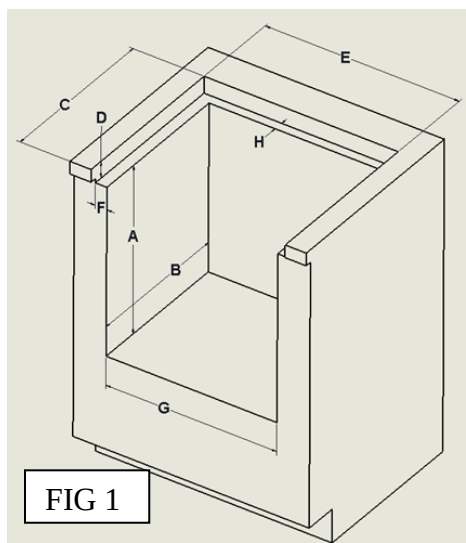


FIG 1

| MPD<br>PART # | RA AND RV OVEN |        | CA AND CV<br>SLIDE IN | CUT OUT DIMENSIONS - DIMENSIONS DE LA DECOUPE |        |       |                   |               |        |       |
|---------------|----------------|--------|-----------------------|-----------------------------------------------|--------|-------|-------------------|---------------|--------|-------|
|               | A              | A      | A                     | B                                             | C      | D     | E                 | F             | G      | H     |
| 53288         | 16"            | 20"    | 3.0"                  | 17.75"                                        | 19.6"  | 2"    | 23" to<br>23.125" | 1.38" (sides) | 20.25" | 1.18" |
|               | 406 mm         | 508 mm | 76 mm                 | 451 mm                                        | 499 mm | 51 mm | 584 mm<br>588 mm  | 35 mm         | 514 mm | 30 mm |



## WARNING BURN INJURY

When cooking appliance is in use – the cover must be open and in full upright and folded position, pushed completely toward outside wall with prop rod completely locked into the slot provided. This prevents the cover from falling on range top during cooking.



## WARNING POSSIBLE GLASS BREAKAGE

**DO NOT** operate any of the burner(s) with the Glass Cover in the closed position.

Operation of the burner(s) with the cover in the closed position may cause glass breakage and/or possible personal injury including eye injury and/or cuts and abrasions. Avoid dropping heavy objects on the glass; this could cause the glass to break or damage the cover.

- **Never** close cover while the burners are in use.
- The oven may be used with the cover down.
- **Do not** use cover as a griddle or cooking surface.
- **Do not** use this cover on top pilot model Ranges.
- **Never** use cooking appliance while RV is moving.
- This cover is designed for use only with Dometic brand RV ranges and slide-ins.

### DO NOT USE WITH OTHER BRANDS of cooking appliances.

- The bi-fold cover must be closed when the vehicle is in transit.
- Glass can be easily scratched. Use caution when setting items on the top of the glass. Avoid sliding items across the glass.

### TO OPEN:

Rotate cover upwards until prop rod drops into side notch in trim and locks.



### TO CLOSE:

Lift cover up and press the prop rod to the left and guide into slot on trim. Lower the cover into the closed position.

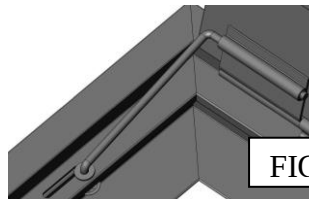


FIG 2

## MAINTENANCE

Periodically inspect the cover for loose, damaged, and/or broken pieces. Replace the cover if any damage is discovered.

Grease is flammable. Never allow grease to collect on top or underside of glass bi-fold cover. Keep glass surface clean.

Glass may be cleaned with household glass cleaner as needed. Always follow cleaner manufacturer's instructions. Do not use abrasive and/or acid type cleaners on the glass or metal painted surfaces.

## LIMITED TWO-YEAR WARRANTY

LIMITED TWO-YEAR WARRANTY AVAILABLE AT  
[WWW.DOMETIC.COM/WARRANTY](http://WWW.DOMETIC.COM/WARRANTY).

IF YOU HAVE QUESTIONS OR TO OBTAIN A COPY OF THE LIMITED WARRANTY FREE OF CHARGE, CONTACT:

DOMETIC CORPORATION  
CUSTOMER SUPPORT CENTER  
1120 NORTH MAIN STREET  
ELKHART, INDIANA, USA 46514  
+1-800-544-4881 OPT 3

Product Specifications for product(s) listed are designed for use for their specific application. Any other use, unless authorized in writing by the Dometic Engineering Department, voids this warranty. Original date of purchase of unit refers to the date the consumer purchases the vehicle from a dealer. Date of manufacture refers to the date the item was produced by Dometic.