



USA
SERVICE OFFICE
The Dometic Corp.
509 So. Poplar St.
LaGrange, IN 46761
219-463-4858

CANADA
Dometic Dist.
866 Lings Dr.
Cambridge, Ontario
CANADA N3H 2N7
519-653-4390

**For Service Center
Assistance Call:**
800-544-4881


**Fabric Roller Tube Assembly
with Wide Body "Nested" Hardware**

OPERATING INSTRUCTIONS


MODEL
Wide Body
Sunchaser

TO OPEN AWNING:


1. Push the locking lever to release to awning. The unlocking will be stiff when the lock is fully engaged. FIG. 1
2. Lift each arm to unlock the awning. FIG. 2

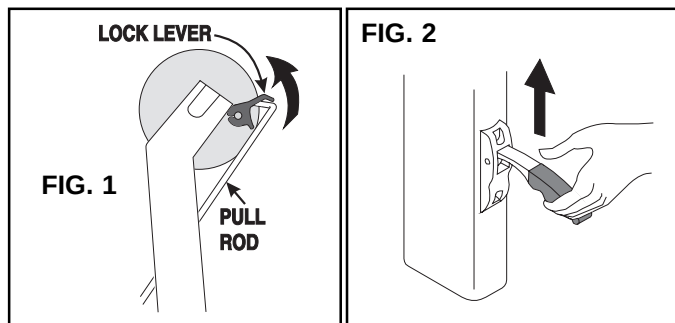



3. Hook the rod into the loop of the pull strap, and pull the awning all the way out. FIG. 3

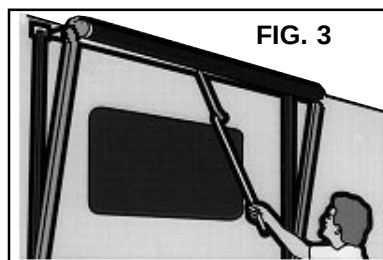

4. Slide the rafter up. Push the outside hook firmly over the top of the arm. The rafter lock pin must drop into the inside hook. FIG. 4

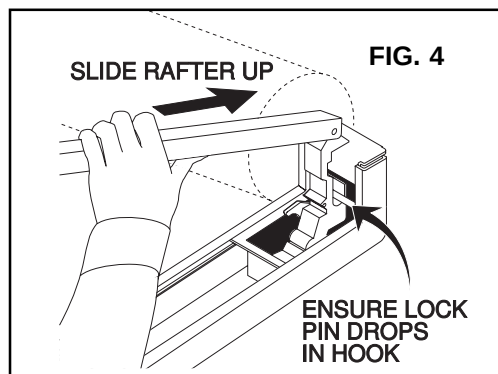


5. Pull down and out on the sliding rafter to remove slack from the fabric. Install and tighten the black adjustment knob (FIG. 5A). Repeat for other side. FIG. 5

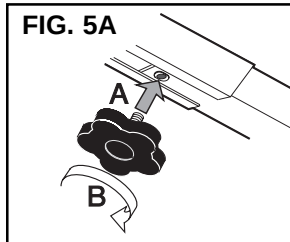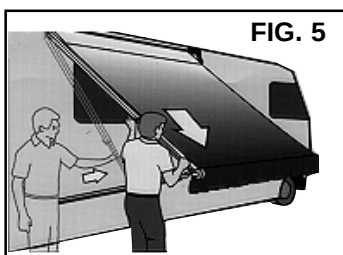


⚠ CAUTION
DO NOT OPERATE THE AWNING WITHOUT THE KNOBS IN PLACE.


6. Slide the pull strap to the right end of the roller and wrap it around the main arm. FIG. 6

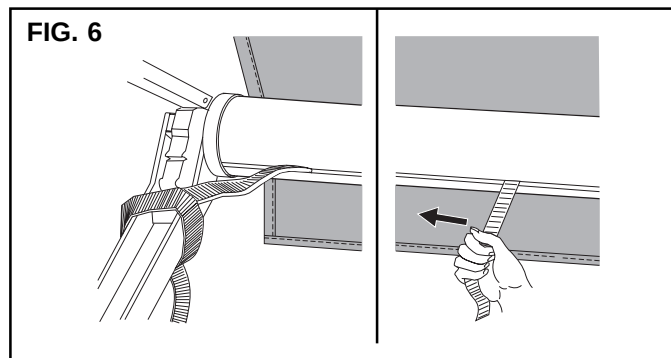


7. **(OPTIONAL STEP)** Press the release lever at the bottom end of one main arm. Pull the arm assembly outward to a vertical position. Reposition the foot and drive stakes through the foot into the ground. Stake kits are available from your awning distributor. FIG. 7

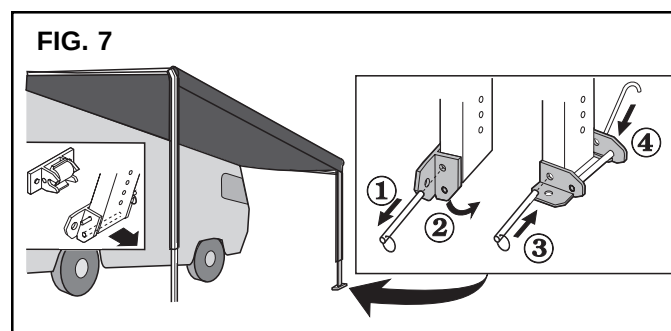

8. Pull up on the lift handle and raise the arm assembly to the desired height. Repeat for other side. FIG. 8

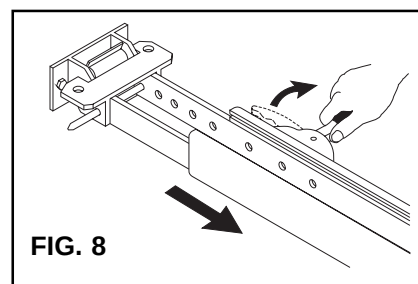

9. Lower the end furthest from the door to allow water to flow off. FIG. 9

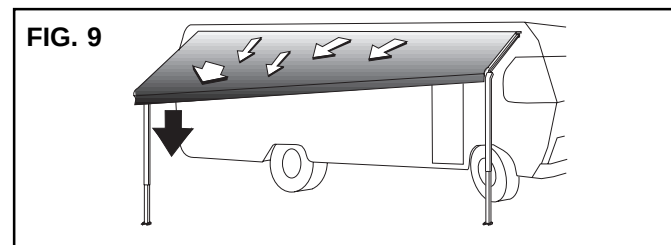


⚠ CAUTION


Whenever heavy or prolonged rain or wind is anticipated, or you will leave the awning unattended, it is important to close the awning. Damage as a result of weather is NOT covered by warranty.

TO CLOSE AWNING:


1. Pull stakes from the ground. Return the foot to the original position, swing arm toward the vehicle, and snap the patio foot into the bracket. Repeat for other side, and proceed to the next step. FIG. 1

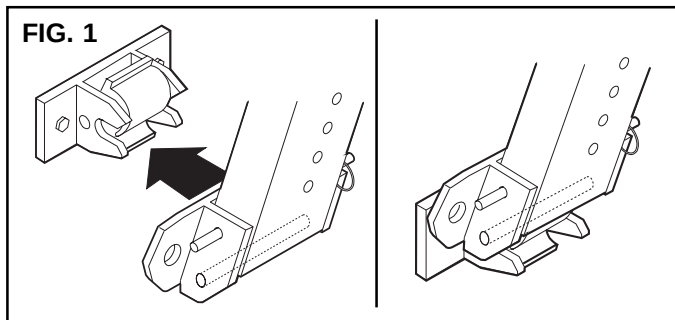



2. Raise the lift handle to release the lock button. Lower main arm to stop plug. Swing the handle in to engage the lock button in a hole. Repeat for other side. FIG. 2

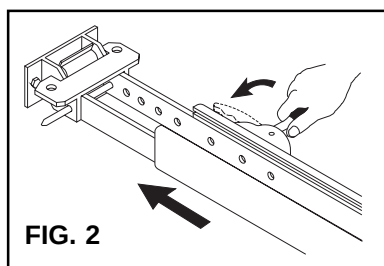

3. Remove black adjustment knob. Lift the slider release and pull back on the rafter to release the slide. Slide the rafter to the bottom of the main arm. **Store the knob for future use.** Repeat for other side. FIG. 3

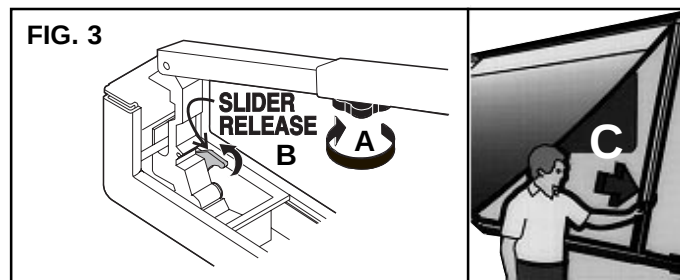


4. Grasp the pull strap, pull toward you, and flip the locking lever to the ROLL UP position. FIG. 4

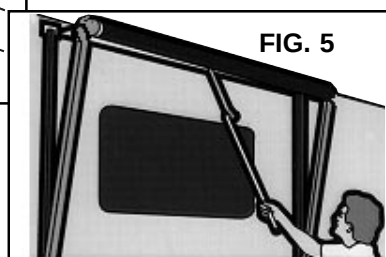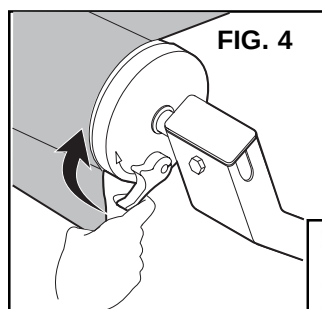

! WARNING


DO NOT release the awning now. It is under tension and could snap back against the vehicle side.

5. Slide the pull strap to the center, and using it to control speed, allow the awning to return slowly to vehicle side. **NOTE:** Wind the strap diagonally to prevent a bulge in the fabric. FIG. 5
6. Push the arm to the wall until the latch pin drops into the top hook, while holding the top of the arm to the coach. Pull on the arm to be sure the awning is locked. FIG. 6.

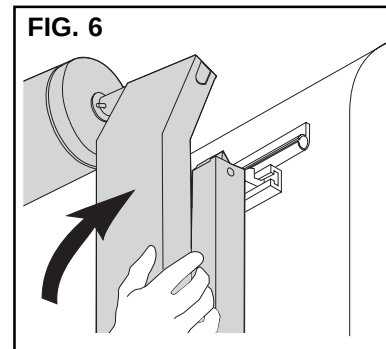

HELPFUL HINTS FOR AWNING CARE

- * Apply silicone spray lubricant at the beginning of each season and as needed to the awning's moving parts.
- * Whenever the awning is wet while rolled up, as soon as conditions allow, roll it out and let it dry before rolling it up again. This will help prevent mildew and rotting.
- * Mildew does not form on the fabric itself, but on the accumulated dust, dirt and grime. Periodically clean vinyl with mild soap and water.
- * Always make sure the awning is extended high enough before opening the entry door.

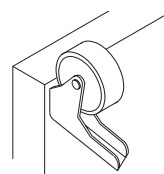

Please Note: A slight "travel line" may appear where the door roller contacts the awning fabric. This is considered normal and does not affect the integrity of the awning.

WHEN TO GET MORE HELP:

- * The hardware must be secure to travel. If the unit does not lock to the coach on closing:
 - Ensure the foot is repositioned to the storage position. (FIG. 1)
 - Ensure the arm is lowered fully onto the stop bolt. (FIG. 2)
 - Ensure you are pushing as high as possible on the arm. (FIG. 6)
- * If malfunctions occur that cannot be corrected by reviewing this manual, contact a qualified Dometic service technician.