

**SLIDE TOPPER™****3107392.007****Slide-Topper
Lock Kit****Service Instructions****USA**

SERVICE OFFICE
Dometic Corporation
2320 Industrial Parkway
Elkhart, IN 46516
574-294-2511

CANADA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8
CANADA
519-720-9578

**For Service Center
Assistance Call:**
800-544-4881

⚠ WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

⚠ AVERTISSEMENT

Lire et comprendre ce manuel avant de procéder à l'installation, à des réglages, de l'entretien ou des réparations. L'installation de cet appareil doit être effectuée par un réparateur qualifié. Toute modification de cet appareil peut être extrêmement dangereuse et entraîner des blessures ou dommages matériels.

**SERVICE
INSTRUCTIONS****3107392.007
Slide-Topper
Lock Kit****REVISION:**

Form No. 3107393.039 10/05
(Replaces 3107393.021)
(French 3108649.017)
©2005 Dometic Corporation
LaGrange, IN 46761

Important: These instructions must stay with unit.
Owner read carefully.

SAFETY INSTRUCTIONS

This manual has safety information and instructions to help users eliminate or reduce the risk of accidents and injuries.

RECOGNIZE SAFETY INFORMATION



This is the safety-alert symbol. When you see this symbol in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating instructions.

UNDERSTAND SIGNAL WORDS

A signal word, **WARNING OR CAUTION** is used with the safety-alert symbol. They give the level of risk for potential injury.

! WARNING Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

! CAUTION Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

CAUTION When used without the safety alert symbol indicates, a potentially hazardous situation which, if not avoided, may result in property damage.

Read and follow all safety information and instructions.

GENERAL INSTRUCTIONS

! WARNING

These instructions must be read and understood before installation of this product. This product must be installed by a Dometic Service Center or a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

The A&E Slide Topper Lock Kit is designed to prevent the slide topper from unrolling when the RV is in motion on the highway.

Product features and specifications as described or illustrated are subject to change without notice. Installation methods not described in this manual must have written approval from Dometic Corporation.

Important: The slide topper cradle kit 3309526.006(X) must be installed with all slide topper awnings over lengths of 198". Installations of slide toppers over 198" without the cradle kit 3309526.006(X) are not covered by Dometic Warranty.

Note: Replace (X) with color code:

B = Polar White

H = Mende White

R = Champaign

S = Satin


U = Black

V = Gold

! WARNING


THIS KIT CAN ONLY BE INSTALLED ON SLIDE-TOPPER MODELS USING ZINC END CAPS AND EXTENDED END BRACKET. Do not attempt to install on plastic end cap or on models using short end bracket or damage to the awning and vehicle will occur. (See FIG. 1)

FIG. 1

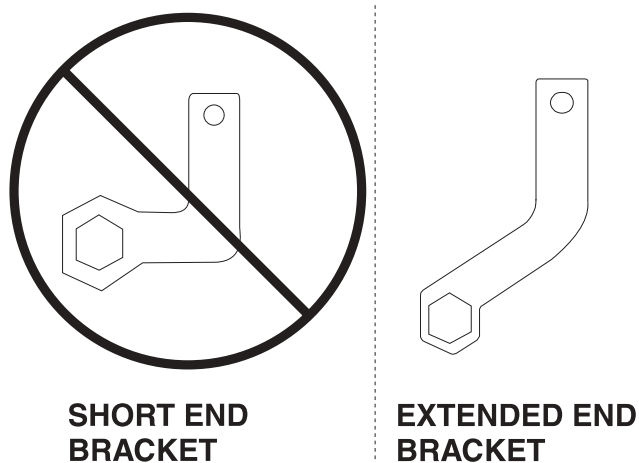**INSTALL LOCK MECHANISM**

1. Position locking mechanism on end cap on leading end of Slide Topper (end which is toward front of vehicle).
2. Position locking mechanism with bumper pointed straight up. See FIG. 2.

FIG. 2

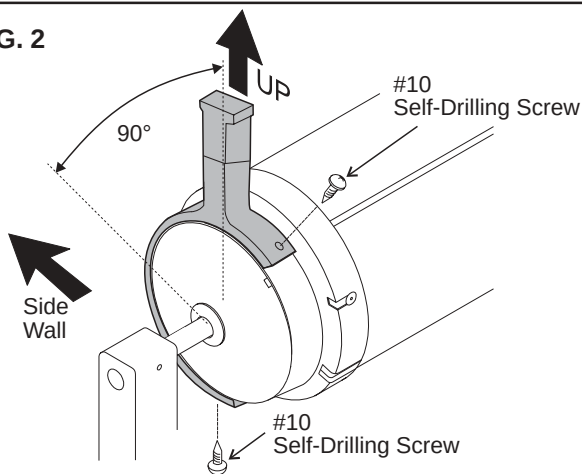


3. Attach locking mechanism to end cap using #10 self-drilling screws provided. Use care when installing screws not to move lock or scratch end cap. If screw should happen to fall into an existing opening in the end cap, use 3/16" pop rivet instead of a #10 screw.

CAUTION

DO NOT attempt to adjust bumper to a longer length. Bumper has been preset to the length required. Damage to the vehicle and awning could result if bumper is adjusted to a longer length.

FIG. 3

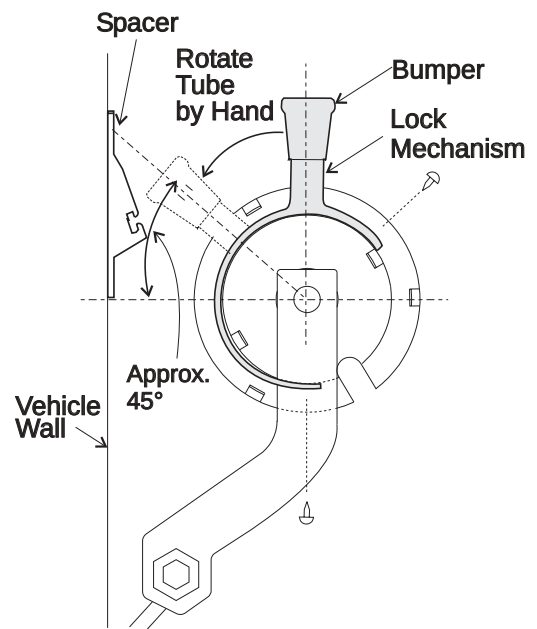

4. Use the universal spacer to stop the bumper from rotating past a 45° angle when the roller tube is rotated by hand toward the wall. See figure 16. The universal spacer will allow spacing from 5/16" to 1-1/2". See FIG. 4.

FIG. 4

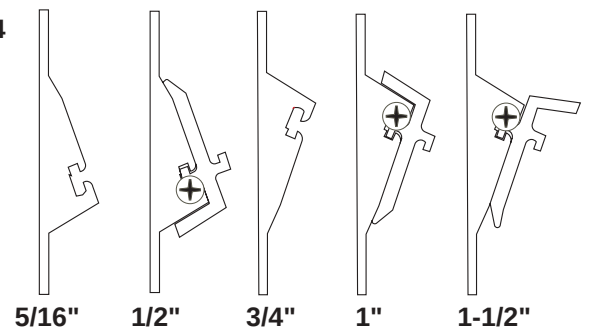


FIG. 5


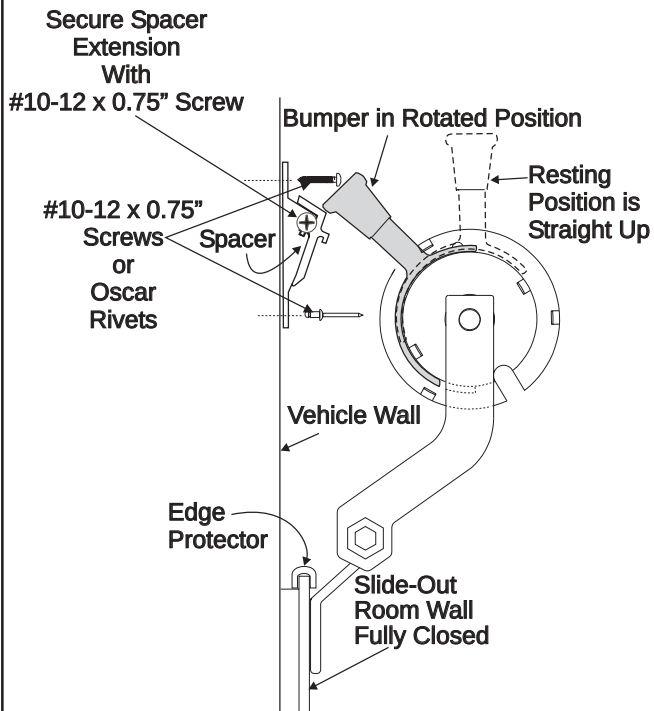


FIG. 6

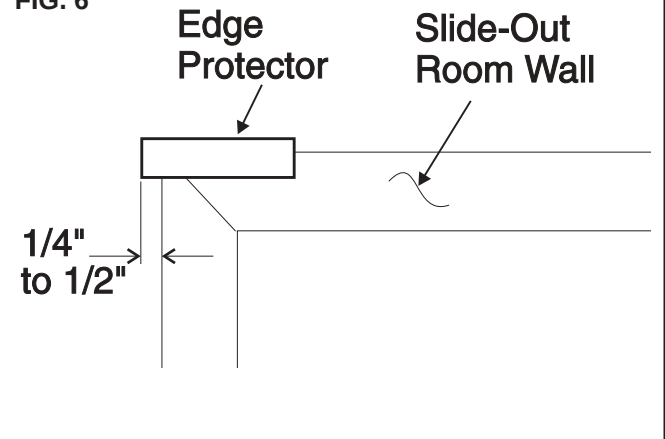

5. Using 3105445.005 #10-12 x 0.75" screws, (supplied) fasten spacer to the wall so that the bumper contacts the spacer as shown in figure 5. If the vehicle has a fiberglass wall, use Oscar rivets (not supplied) instead of 3105445.005 #10-12 x 0.75" screws.
11. Install edge protector (not supplied) on each end of slide-out-room molding. See FIG. 5 & 6. Allow protector to extend beyond edge of molding by 1/4" to 1/2".

Note: Oscar rivets and edge protectors are available as separate items.

- 113008P10 Oscar Rivet = Package of 10
- 113008P100 Oscar Rivet = Package of 100
- 3308176.001 Edge Protector = Package of 10
- 3308176.019 Edge Protector = Package of 100

Important: Not all installations will be able to use the edge protector supplied with unit. If edge protector supplied is not used, a similar type protector **MUST** be used. Units which are damaged because some form of edge protector was not used, will **NOT** be covered under warranty.