



INSTALLATION INSTRUCTIONS

FOR BUILT-IN MOUNTING KIT

PART NO. 3107551.008B & 3107551.008W

FOR USE WITH
MODEL DMT124E1W & DMT124E1B DOMETIC MICROWAVE OVENS

This Kit Consists of:

- (1) Trim Frame
- (1) Duct
- (3) Pan Head Screws
- (1) Instruction Sheet

⚠ WARNING

THIS UNIT MUST BE SERVICED BY A QUALIFIED TECHNICIAN. MODIFICATION OF THE APPLIANCE CAN BE EXTREMELY HAZARDOUS AND COULD LEAD TO SERIOUS INJURY OR DEATH.

A. ELECTRICAL REQUIREMENTS

- Observe all governing codes and ordinances.
- A 120 volt, 60 Hz. AC only, 15 or 20 amp fused electrical supply is required (time delay fuse is recommended)
- It is recommended that a separate circuit serving only this appliance be provided.

⚠ WARNING

The appliance must be disconnected from the source of supply before attempting the installation of this Kit.

B. GROUNDING INSTRUCTIONS


⚠ WARNING

Improper use of this grounding plug can result in a risk of electrical shock. DO NOT, under ANY circumstances, remove the power supply cord grounding plug.


For your personal safety, this appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electric current. This appliance is equipped with a polarized 3-prong grounding plug.

It must be plugged into a correct polarized mating 3-prong grounding type wall receptacle, properly installed and grounded in accordance with the National Electrical Code and Local Codes and Ordinances. Refer to Figure 1.

Figure 1

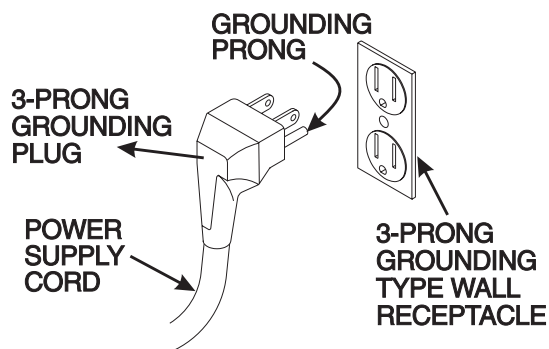


If mating wall receptacle is not available or if you are not sure if the wall receptacle is properly grounded and polarized, have it checked by a qualified electrician. It is the responsibility and obligation of the customer to have a properly grounded and correctly polarized 3-prong wall receptacle installed by a qualified electrician. (See Figure 1). Consult a qualified electrician if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded. See Figure 2 for location of electrical outlet inside the opening at the rear.

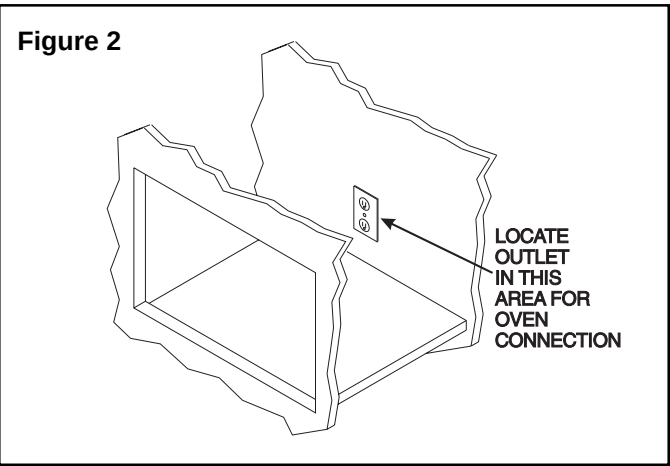



C. INSTALLATION PROCEDURE

CABINET OPENING	
MODEL	DIMENSIONS
DMT124E1B	22.04" wide x 17" high x 16" deep
DMT124E1W	

1. See Figure 3. All corners should be square. The floor of the microwave must be level and capable of supporting 100 pounds.

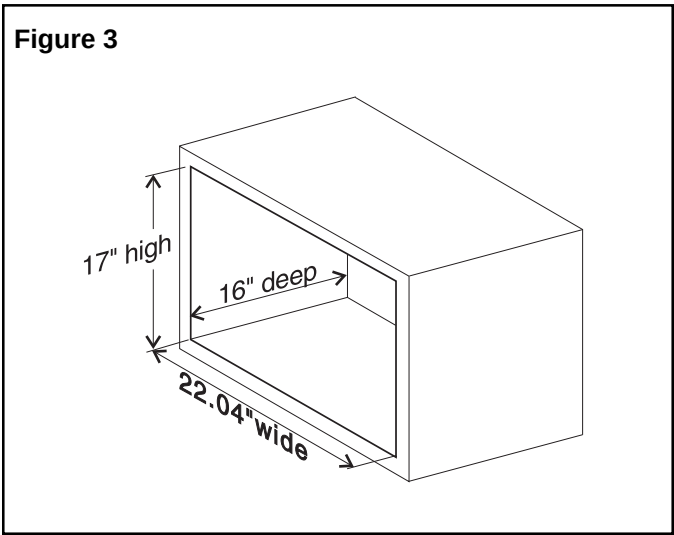

2. Mount the lower trim to the bottom of the oven using two existing screws. (See Figure 4)
3. Mount the duct to the bottom of the oven using three three pan head screws provided. (See Figure 4)
- a. Mount the standoff by removing the two screws shown in Figure 4A.
 - b. Place standoff in place and install screws which were removed in the previous Step. (Figure 4A)

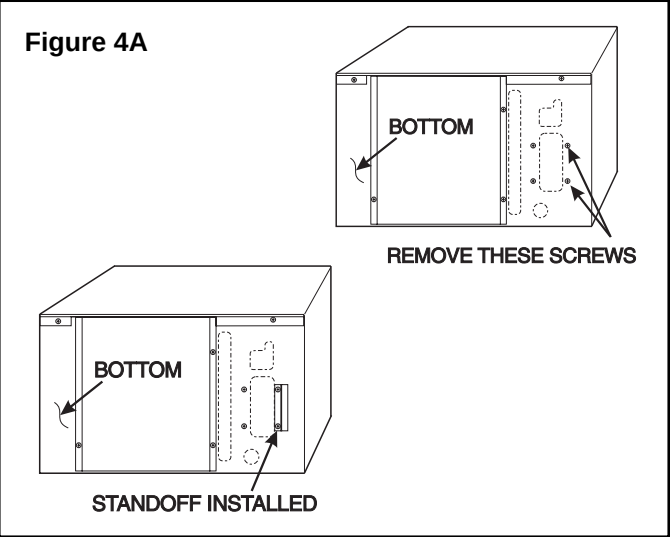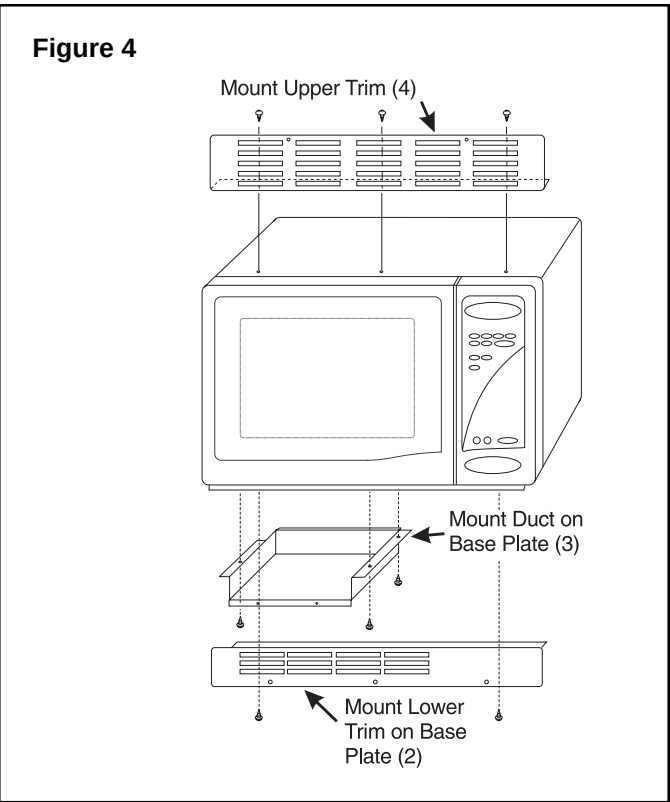

-
4. Mount the upper trim to the top using three existing screws. (See Figure 4)
 5. Plug power cord of microwave oven into grounded receptacle in the rear wall.
 6. Place the microwave oven into the cabinet opening. Make sure the oven is completely pushed back against the front wall.
 7. Screw the upper and lower trim onto the cabinet using five screws (not provided). (See Figure 5)

⚠ WARNING

The weight of the microwave oven may exceed your lifting capacity. We recommend assistance.

Figure 5

