




Rocker Switch
Kit - 3312171.000

Rocker Switch Kit Service Instructions

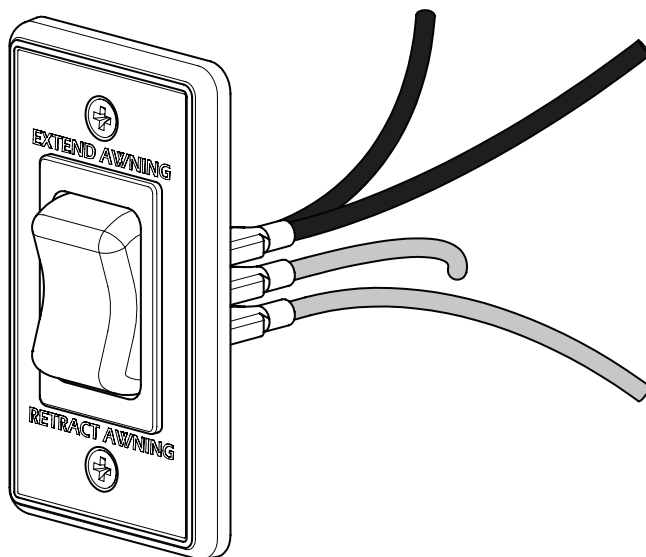

⚠ WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 46514 USA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

SERVICE CENTER &
DEALER LOCATIONS
Please Visit:


www.eDometic.com

Revision B Form No. 3314648.019 (French 3314649.017_B) © 2016 Dometic Corp., 09/16



Rocker Switch
Kit - 3312171.000

Rocker Switch Kit Service Instructions

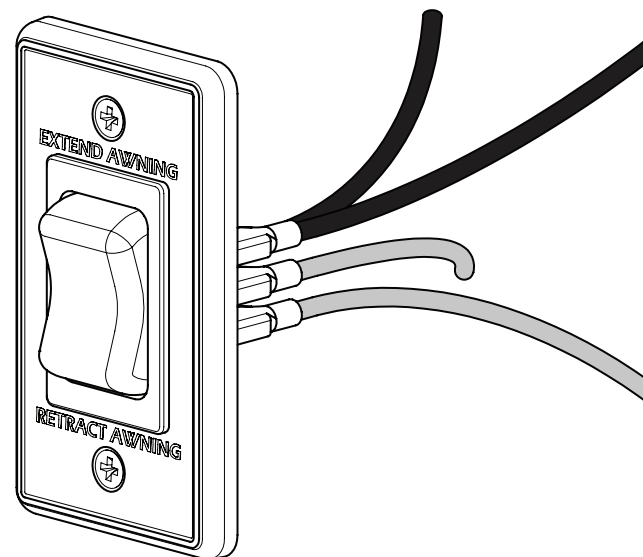

⚠ WARNING

This manual must be read and understood before installation, adjustment, service, or maintenance is performed. This unit must be installed by a qualified service technician. Modification of this product can be extremely hazardous and could result in personal injury or property damage.

IMPORTANT: These instructions must stay with the unit. Owner read carefully.

Dometic Corporation
1120 North Main Street
Elkhart, IN 46516 USA

Dometic Corporation
46 Zatonski, Unit 3
Brantford, ON N3T 5L8 Canada

SERVICE CENTER &
DEALER LOCATIONS
Please Visit:

www.eDometic.com

Revision B Form No. 3314648.019 (French 3314649.017_B) © 2016 Dometic Corp., 09/16

INSTALLATION

Wire colors noted within this document are industry standard. Some RV manufacturers use different colors. Refer to RV manufacturer’s wiring schematics.

A. Wire switch to 12 Vdc power supply.

- 1. **NOTICE:** Install a (15 A) fuse (installer supplied) at fuse panel for positive (+) 12 Vdc power supply (**RED** wire) to switch. Otherwise, damage to unit could occur.
- 2. Route (2) wires (**RED & BLACK**; installer supplied) from 12 Vdc power supply to switch.
- 3. Terminate both wires with 1/4" female insulated terminals.
- 4. Connect positive (+) **RED** wire to bottom left (+) switch terminal.
- 5. Connect negative (-) **BLACK** wire to top left (GND) switch terminal.

B. Wire switch to motorized arm assembly.

- 1. Route (2) more wires (**RED & BLACK**; installer supplied) from switch to right side (motorized) arm assembly. To avoid voltage drop, follow wire length guide listed in **Table 1**.
 - 2. Terminate switch end of wires with 1/4" female insulated terminals.
 - 3. Connect positive (+) **RED** wire to middle left (MTR) switch terminal.
 - 4. Connect negative (-) **BLACK** wire to right (MTR) switch terminal.
 - 5. Connect other end of wires (**RED to RED** and **BLACK to BLACK**) to motorized arm assembly using properly sized, UL certified butt splice connectors (installer supplied).
- Refer to the crimp tool manufacturer for crimping instructions.

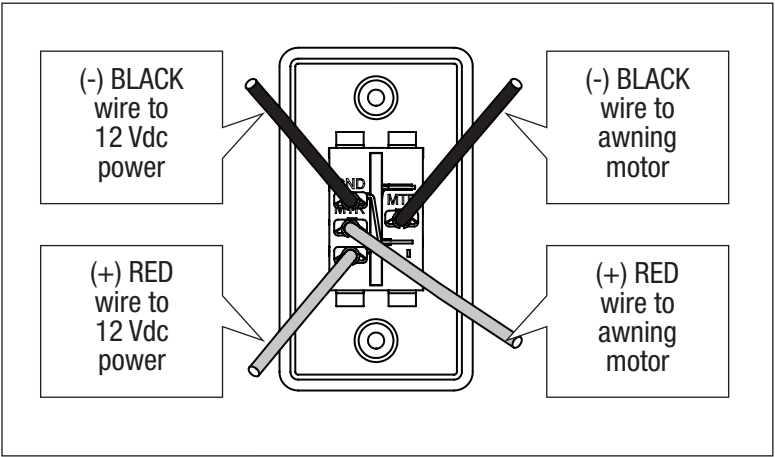


TABLE 1	
Wire Length	Wire Size
10' & Under	14 Gauge
11' to 30'	12 Gauge
Over 30'	10 Gauge

INSTALLATION

Wire colors noted within this document are industry standard. Some RV manufacturers use different colors. Refer to RV manufacturer’s wiring schematics.

A. Wire switch to 12 Vdc power supply.

- 1. **NOTICE:** Install a (15 A) fuse (installer supplied) at fuse panel for positive (+) 12 Vdc power supply (**RED** wire) to switch. Otherwise, damage to unit could occur.
- 2. Route (2) wires (**RED & BLACK**; installer supplied) from 12 Vdc power supply to switch.
- 3. Terminate both wires with 1/4" female insulated terminals.
- 4. Connect positive (+) **RED** wire to bottom left (+) switch terminal.
- 5. Connect negative (-) **BLACK** wire to top left (GND) switch terminal.

B. Wire switch to motorized arm assembly.

- 1. Route (2) more wires (**RED & BLACK**; installer supplied) from switch to right side (motorized) arm assembly. To avoid voltage drop, follow wire length guide listed in **Table 1**.
 - 2. Terminate switch end of wires with 1/4" female insulated terminals.
 - 3. Connect positive (+) **RED** wire to middle left (MTR) switch terminal.
 - 4. Connect negative (-) **BLACK** wire to right (MTR) switch terminal.
 - 5. Connect other end of wires (**RED to RED** and **BLACK to BLACK**) to motorized arm assembly using properly sized, UL certified butt splice connectors (installer supplied).
- Refer to the crimp tool manufacturer for crimping instructions.

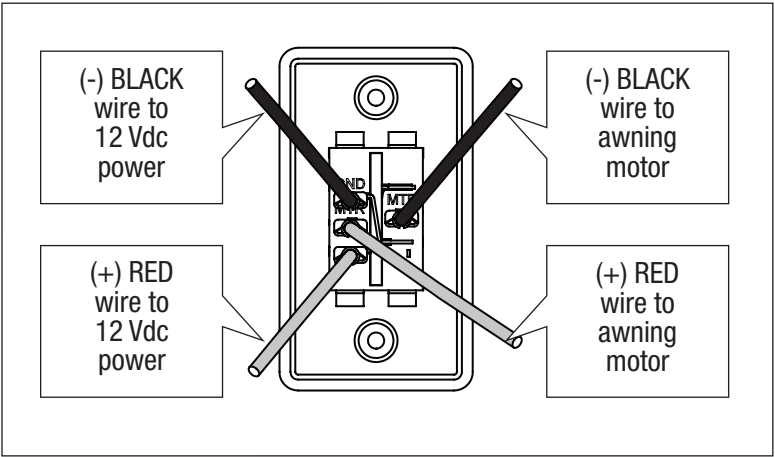


TABLE 1	
Wire Length	Wire Size
10' & Under	14 Gauge
11' to 30'	12 Gauge
Over 30'	10 Gauge