

DOMETIC

REFRIGERATION

REFRIGERATOR DOORS

EN Door Flapper Replacement

Service Kit Instructions

USA & CANADA
Service Office
Dometic Corporation
1120 North Main Street
Elkhart, IN 46514

**Service Center & Dealer
Locations**
Visit: www.dometic.com

Refrigerator Models	Field Kit Number
RM1350	3851104038

1 Explanation of Symbols and Safety Instructions

This manual has safety information and instructions to help you eliminate or reduce the risk of accidents and injuries.

1.1 Recognize Safety Information

 **This is the safety alert symbol.** It is used to alert you to potential physical injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

1.2 Understand Signal Words

A signal word will identify safety messages and property damage messages, and it will indicate the degree or level of hazard seriousness.

CAUTION

This indicates a hazardous situation that, if **not** avoided, could result in minor or moderate injury.

2 Removal


CAUTION: ELECTRICAL SHOCK HAZARD.

Disconnect the electrical supplies before removal. Failure to obey this warning could result in minor or moderate injury.

This section describes how to remove the door flapper and flapper guides from the existing refrigerator.

 Retain all hardware for reuse during installation of the new parts (kit includes hardware).


2.1 Removing the Mounting Screws

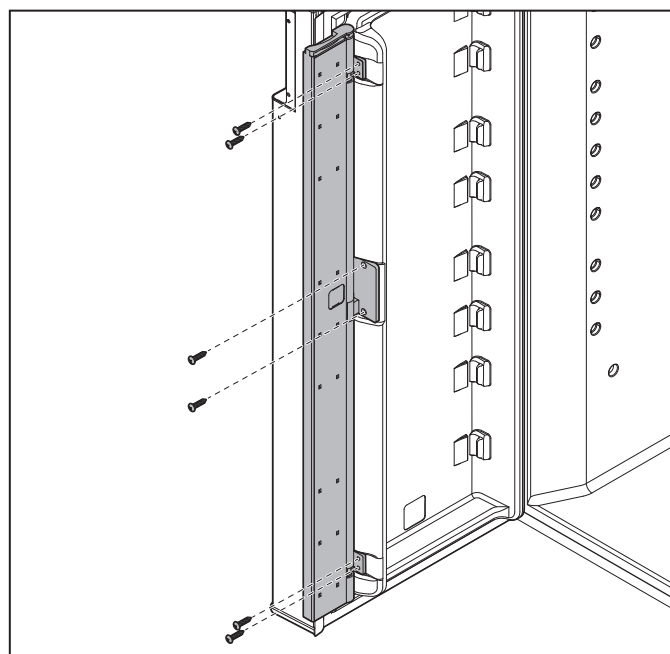

1 Removing the Mounting Screws

1. Remove the six mounting screws (two per hinge) securing the door flapper to the inside of the refrigerator door.

2.2 Disconnecting the Wiring Harness

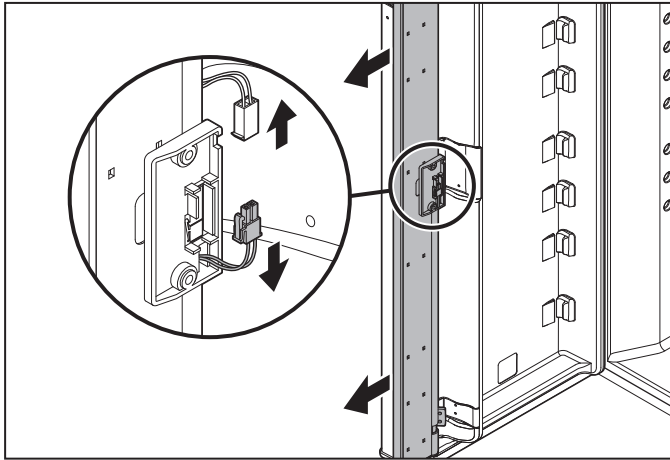


2 Disconnecting the Wiring Harness

1. Locate the wiring harness behind the middle hinge of the door flapper.
2. Gently pull apart both ends of the quick-connect fitting to disconnect the harness.

i The door flapper can now be removed from the refrigerator door.

2.3 Removing the Door Flapper Guides

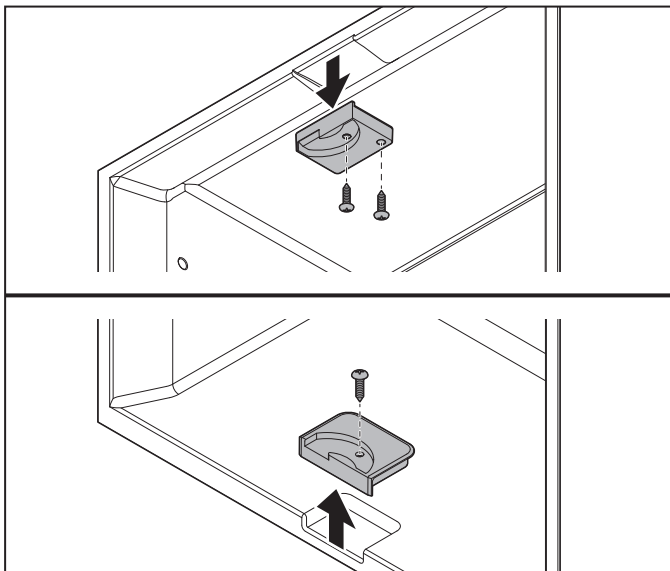


3 Removing the Upper and Lower Door Flapper Guides

1. Remove the two screws securing the upper door flapper guide to the interior liner of the refrigerator.
2. Remove the screw securing the lower door flapper guide to the interior liner of the refrigerator.

3 Installation

This section describes how to install the new door flapper, the new upper door flapper guide, and the filler block.

3.1 Installing the Door Flapper and Upper Door Flapper Guide

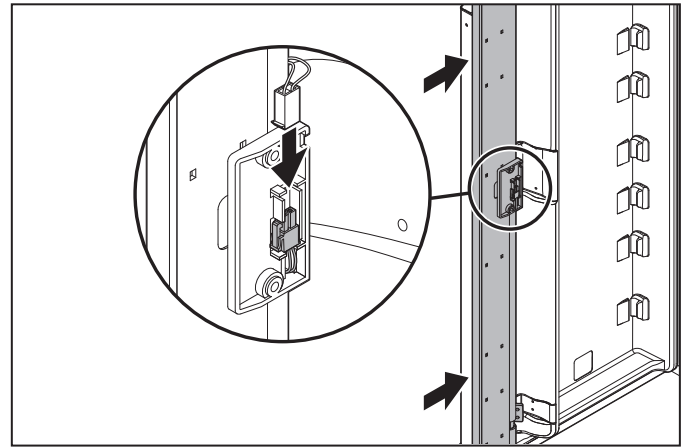


4 Installing the Door Flapper and Upper Door Flapper Guide

1. To install the new door flapper and upper door flapper guide, complete the process described in section 2 in reverse order.
2. Ensure that the wiring harness is secured within the brackets of the new door flapper hinge (figure 4).

i The lower door flapper guide will be replaced with the provided filler block, as described in section 3.2

3.2 Installing the Filler Block

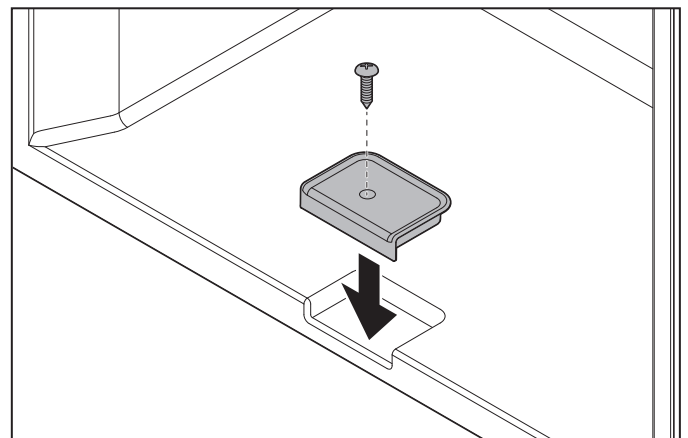

5 Installing the Filler Block

1. Place the filler block into the recess of the interior liner.
2. Secure the filler block using one screw.