

DOOR REVERSING KIT


CONTENTS

Plug	10 (4 + 4 + 2) pcs
Hinge	2 pcs
Cap	1 pcs
Label	1 pcs
Coverplate	1 pcs
Attachment top decor	1 pcs
Mounting instruction	1 pcs

INSTALLATION PROCEDURE


STEP 1

Open the upper door. Remove the top decoration panel. Put the panel on top of the refrigerator.

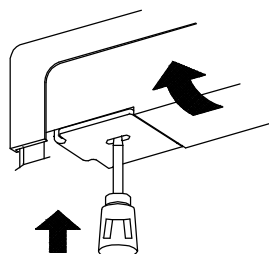

STEP 2

Close the door. Remove the 3 screws fastening the upper hinge (save for later use). Leave the hinge pin in its place. Rotate the complete hinge and pull it out of the bushing.

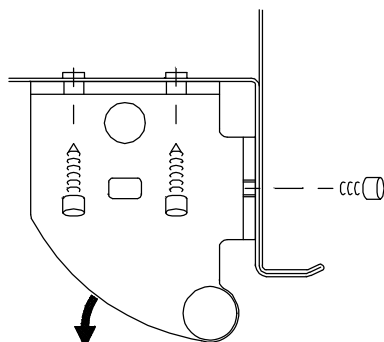


STEP 3

Open the upper door 90°. Detach the door by lifting it off the lower pin. Make sure not to bend the pin. Carefully place the door on a soft or padded surface.


STEP 4

Remove the cap. (You may have to destroy it.)

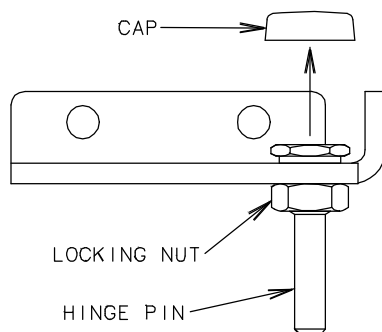


STEP 5

Use a torque wrench to hold the hinge pin in position and then, use another wrench to loosen the locking nut. Unscrew the pin. Save the pin and the locking nut. Discard the hinge.

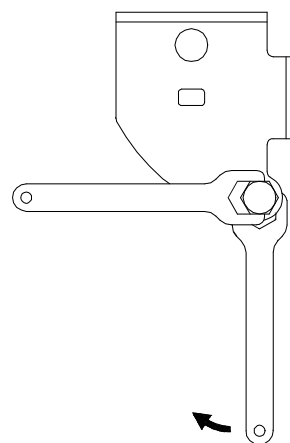


STEP 6

Mount pin on the provided hinge. Use a torque wrench to hold the pin in position and then, use another wrench to install the locking nut. Mount a cap on pin.

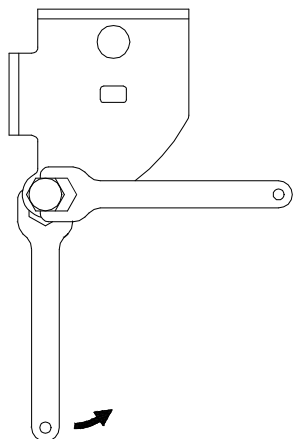


STEP 7

Remove the 3 screws fastening the middle hinge (save for later use). Leave the hinge pin in place. Rotate the complete hinge and pull it out of the bushing.

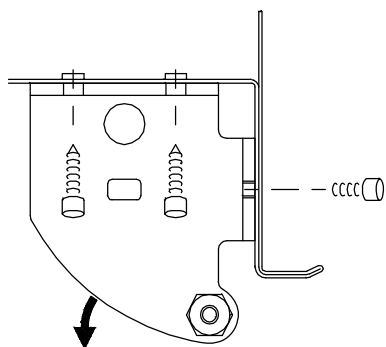


STEP 8

Use a torque wrench to hold the hinge pin in position and then use another wrench to loosen the locking nut. Unscrew the pin.

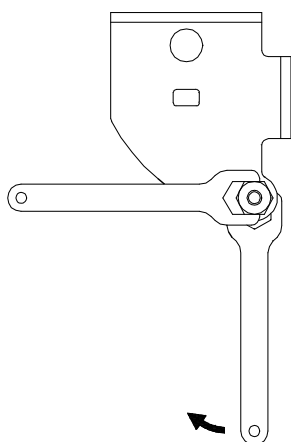


STEP 9

Turn the hinge upside down...

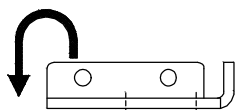

...and mount pin on the hinge. Use a torque wrench to hold the pin in position and then, use another wrench to install the locking nut.

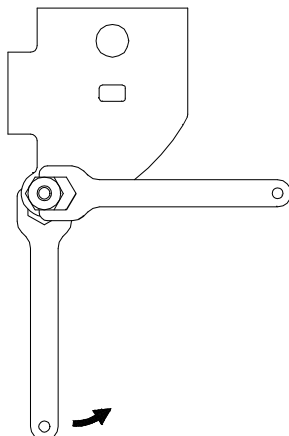


STEP 10

Open the lower door 90°. Detach the door by lifting it off the lower pin. Make sure not to bend the pin. Place the door on a soft or padded surface.


STEP 11

Remove the 3 screws fastening the lower door hinge (save for later use). Remove the hinge.

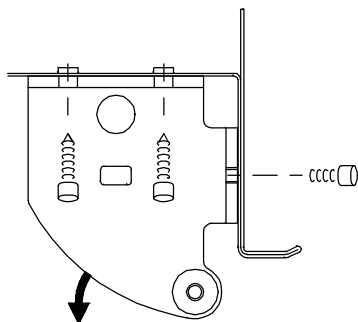


STEP 12

Using a screwdriver, loosen the pin and remove it and the washer. Discard the hinge.

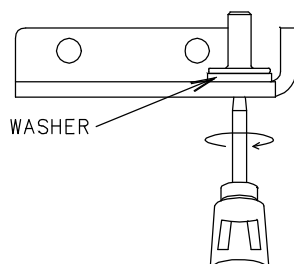


STEP 13

Mount pin and washer on the provided hinge. Use a screwdriver to fasten the pin.

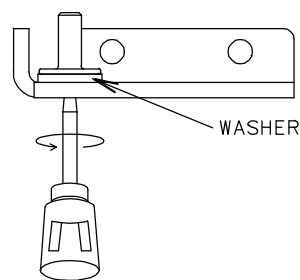


STEP 14

Remove the coverplate for the hinge. (The plate is attached with adhesive tape).

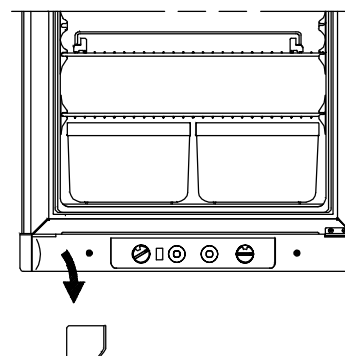

STEP 15

Remove the hinge plugs. (You may have to destroy the plugs)

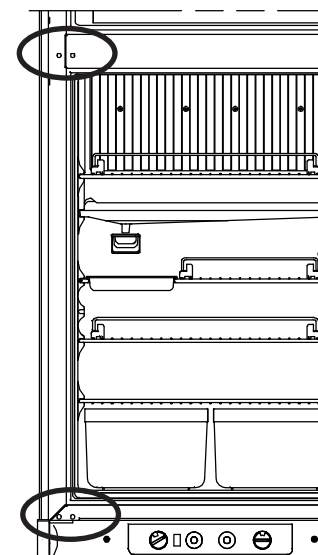


STEP 16

Remove the door compartments.

STEP 17


Using a screwdriver, remove the two screws and detach the door handle.

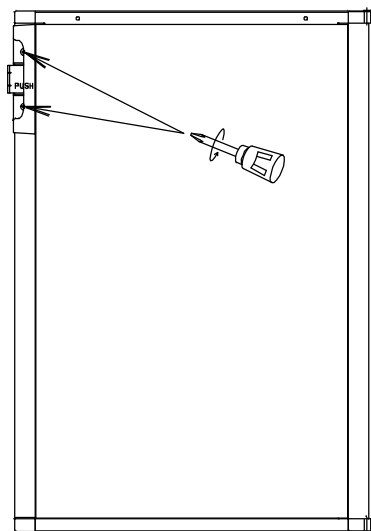

STEP 18


Drill new holes at the lower part of the door. Use a drill with a diameter of 4 mm.

The handle may serve as a template but please make sure not to damage it.

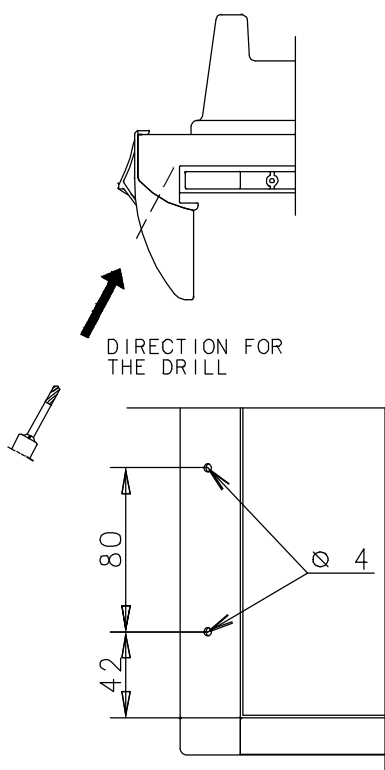


STEP 19

Remove the decoration strip. Use a flat screwdriver and gently push the four tabs away.

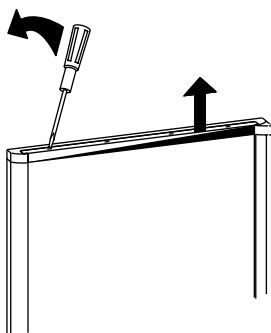


STEP 20

Using a pair of pliers, remove the plastic cotters. Move these to their corresponding holes on the opposite side.

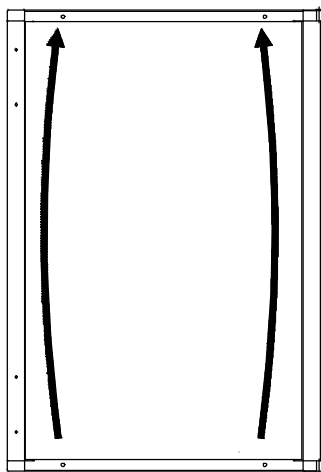


STEP 21

Snap in the decoration strip.

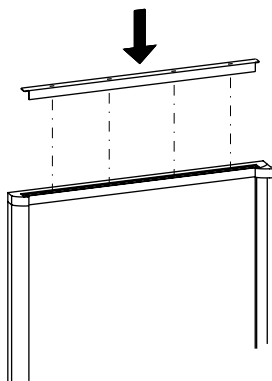


STEP 22

Mount the handles.

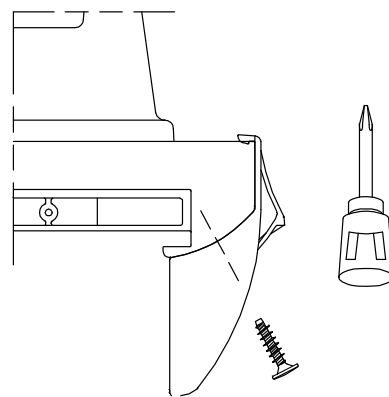

STEP 23

Insert plugs in the 2 holes (side profile) that are not being used.

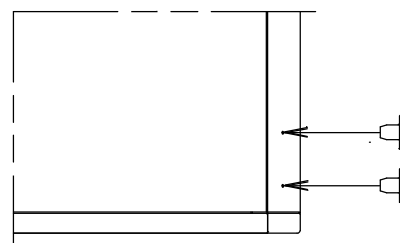


STEP 24

Put back the door compartments.


STEP 25

Remove the 3 screws (save for later use) and detach the attachment for the top decor. Discard the attachment.

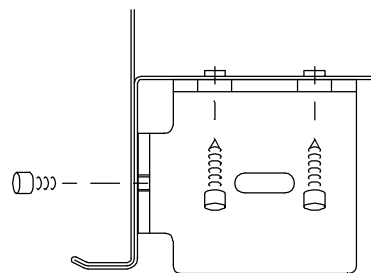


STEP 26

Mount the provided attachment on the other side of the refrigerator.

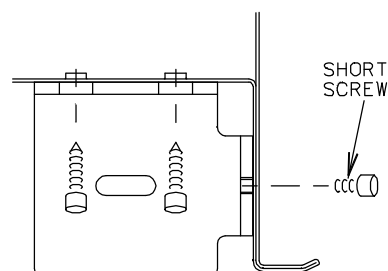

STEP 27

Mount the lower door hinge.

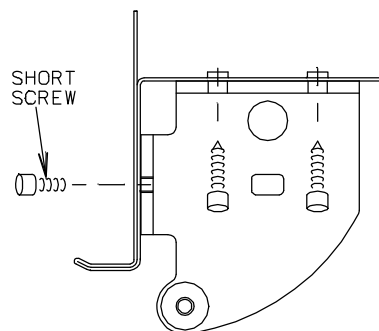


STEP 28

Place the door on the lower hinge. Close the door. The door gasket will keep the door in position.

STEP 29

Mount the middle door's hinge pin in the bushing of the lower door. Turn it towards the front frame and then, fasten the screws.

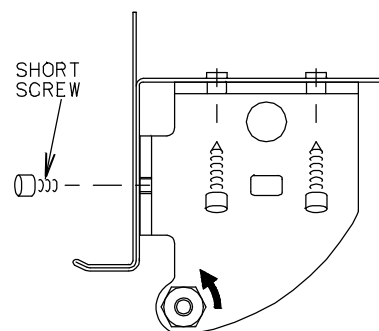


STEP 30

Place the upper door on the middle door's hinge pin. Close the door. The door gasket will keep the door in position.


STEP 31

Mount the upper door's hinge pin in the bushing of the door. Turn it towards the front frame and then, fasten the screws.

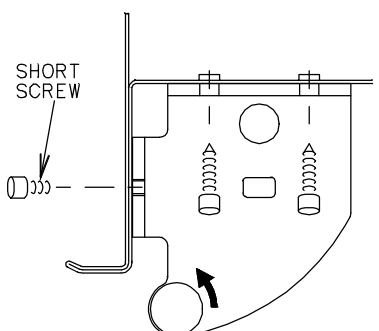


STEP 32

Insert plugs in holes not being used. Mount coverplate.

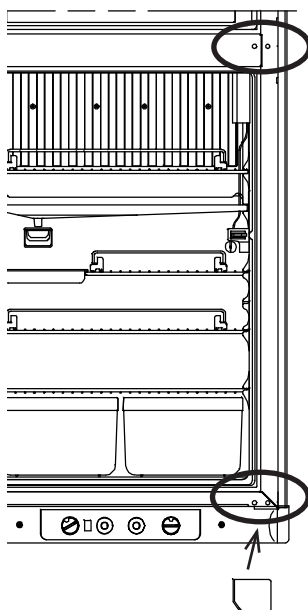

STEP 33

Stick a new label over the old one.

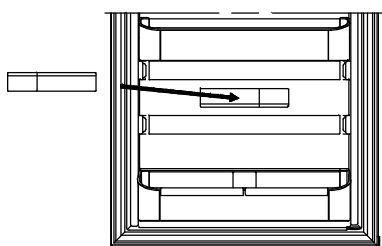

STEP 34

Mount the top decoration panel.

