


INSTALLATION INSTRUCTIONS

RE-HINGING DOORS

To re-hinge the door, follow these steps:

1. Before working on the refrigerator, make sure the 230-240 V AC voltage and 12 V DC voltage leads are disconnected!
2. Detach the top decor panel by removing the two mounting screws (a) and the two knobs (b). Disengage seal strips (c). Remove the panel and place it aside.

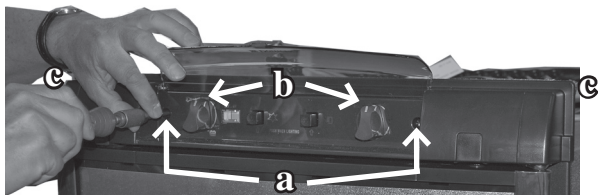

3. Use a socket wrench to loosen the upper hinge pin. Remove pin and save for later use.




4. Lift door off the lower hinge pin. Place door on soft material to prevent any damage to the door.




5. Remove lower hinge pin.




6. Remove lower hinge by unscrewing the three screws. Save screws for later use.

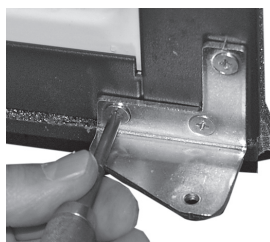


7. Remove plugs that cover the screw holes located on the side opposite of the present hinge location.

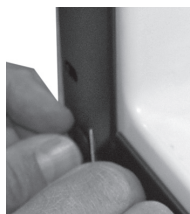


8. Locate the new hinge, insert hinge pin into hinge hole and fasten the hinge with the three screws removed earlier.

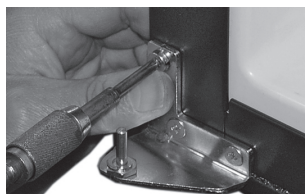

9. Insert plugs to cover the unused screw holes on the opposite side.

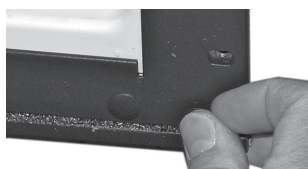


10. Unscrew screws and remove upper hinge and travel catch. Save screws for reinstallation.

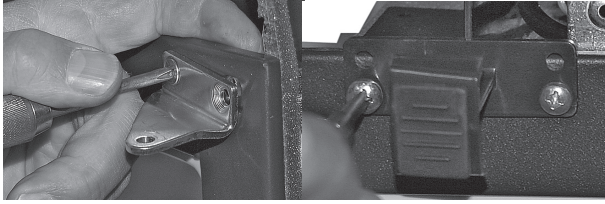


11. Flip travel catch upside down and install on the opposite side of its present location. Install a new hinge. Fasten with the screws removed earlier.



12. Locate the door. Remove plug and latch retainer on the top of the door. Replace in opposite positions.

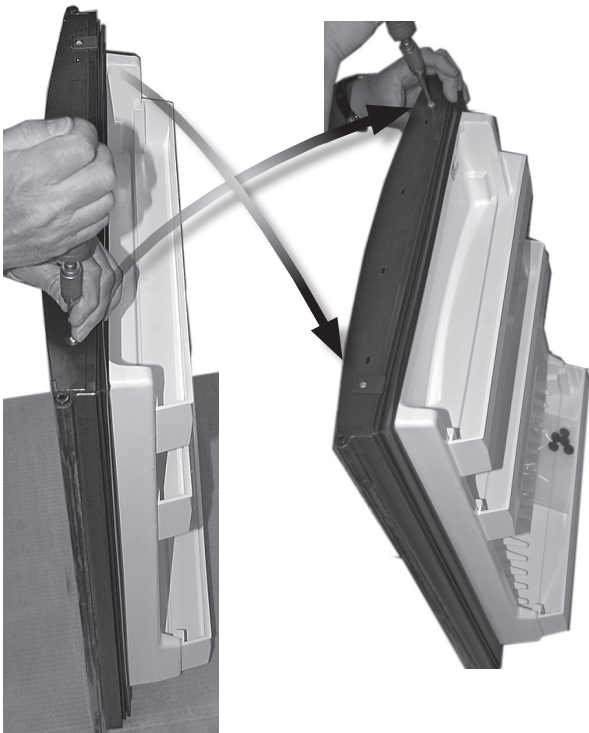

13. Place door on lower hinge pin (a). Mount upper hinge pin (b) and fasten it using a socket wrench (c). Close the door.

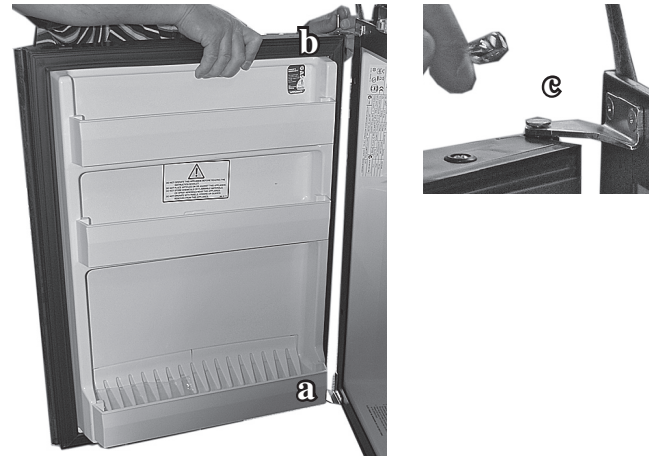

14. Locate top decoration panel and detach the travel catch. Replace in opposite position.



15. Fit top decoration panel.



16. Reinstall screws, knobs and seal strips.



17. Check the travel catch to make sure it works properly, that the door closes easily and that the gasket seals well on all sides.
18. Reconnect the refrigerator.