

## SOP02386

## **Connecting Dometic** Interact to Winegard

**Department: 11, 17, 31, 32** 

**People Required: 1** 

**Time to Complete: 10 min** Date Created: Dec. 19/2019

**Date Revised:** Rev #:

Created by Initial: RSW Verified: AE

Page 1 of 2

**Safe Work Procedures:** 




Get a device that can download the "System Control" app from Silverleaf Power on the coach and wait three minutes.

Navigate to the wifi connections of the device, and locate an SSID that starts with LR-125. The exact name will be with the serial numbers of the hardware installed.

ঃ 🐧 💐 🥱 📶 87% 🛢 11:07

Connect to that SSID using the password "YourPassPhrase" without the quotation marks

**Technical Data:** 

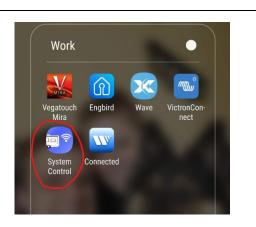

Navigate to the app on your phone and

**🕏 🔃 🖎 🛜 📶** 55% 🗎 9:34 AM Press System Control A CLIMATE Outside **70° Set Temperature** 

C (i) on the 3 dots

2

6

10

System Control Scan for WiFi Server 8 CLIMATE Main Network **Set Temper** OEM

Select Network

**Under Wireless** C Mode, select "Infrastructure" Network Configuration from the drop down Change the desired network

Notes:

Press the

"Restart

Server"

button and

then this

popup

appear,

press OK.


12

with

Wifi

9

1

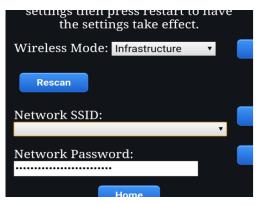

The page should change, select the Network SSID dropdown

Configuration Gingerwood Public Wifi (Open) 5% Gingerwood Wireless (Encrypted) 100% coach Winegard2ghzD36E03  $\bigcirc$ (Encrypted) 100% (Encrypted) 100% TERV (Customer) 0 (Encrypted) 79%

Select the Winegard SSID that belongs to this Wireless Mode: Infrastructure Enter the Winegard Rescan Network **Password** Winegard2ghzD36E03 (Encrypted) 100% ▼ that comes with the Network Password: coach. Home Restart Wifi Server

Page at http://192.168.8.1 says: Restarting the Wifi Server with the new settings. Please wait 2 minutes and app to connect to the Wifi Server at the new address.

This will take about 3 minutes.

11



## SOP02386

## **Connecting Dometic** Interact to Winegard

Department: 11, 17, 31, 32

**People Required: 1** 

**Time to Complete: 10 min** Date Created: Dec. 19/2019

**Date Revised:** Rev #:

Created by Initial: RSW Verified: AE

Page 2 of 2

16

20

Enter that IP address

on your mobile app.

Then press OK

On your device, connect to the Winegard wifi for the unit you're working on.

Scan for WiFi Server

Lock Screen Orientation

OEM

**Boot Start** 

Enter Url

System Control

CLIMATE


**Set Temper** 



Navigate back to the "System Control" app

14

18

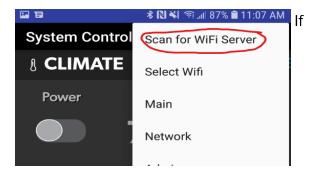

the app shows an error, press the 3 lines again (see step 6) and press "Scan for Wifi Server"

15

**Technical Data:** 

**Safe Work Procedures:** 

13

17



If the app is still not loading, go into the menu (3 dots) again and click on "Enter URL"

Climate Mechanical Power Notification Tanks  $\bigcirc$ Fuses AGS Settings Room Clock

Go to the Dometic Touchscreen in your coach and navigate to the Settings Page.

**General Info** Config Mobile App Satellite Dish **Default Room** Bathroom **Standby Screen** 

Press Config Mobile App and scroll down until you see the IP address.

> **Enter URL or IP Address CANCEL**

Once the app loads any screen, you have

successfully connected the LR-125 to the

Winegard system

IP Address

**Notes:** 

The screen should now load. If problems persist, contact support.

21

22

23

19

24